User's Manual



GTIN CODE



MW Search: https://www.meanwell.com/serviceGTIN.aspx

Features :

- True sine wave output (THD<3%)
- High surge power up to 3000W
- U.P.S. mode and energy saving mode (selectable)
- High efficiency up to 91%
- Power ON-OFF switch
- Standby saving mode can be selectable
- Front panel indicator for operation status
- · Thermostatically controlled cooling fan
- Protections: Bat. low alarm / Bat. low shutdown / Over voltage / Over temp. / Output short / Input polarity reverse / Overload / AC circuit breaker
- Application: Home appliance, power tools, office and portable equipment, vehicle and yacht...etc.
- Built-in solar / AC charger
- Support RS-232 communication (communication cable RJ11-RS232 included) Note.7
- 3 years warranty c UL₄₅₈



(for 112/124 type F only) (for 212/224/248 only) **SPECIFICATION** TN-1500-112 TN-1500-124 TN-1500-148 TN-1500-212 TN-1500-224 TN-1500-248 MODEL NO. □ = A, F □= B, C, D RATED POWER (Typ.) 1500W MAXIMUM OUTPUT POWER (Typ.) 1725W for 180 sec. / 1875W for 10 sec. / surge power 3000W for 30 cycles Factory setting set at 110VAC Factory setting set at 230VAC AC VOLTAGE 100 / 110 / 115 / 120VAC selectable by setting button S.W 200 / 220 / 230 / 240VAC selectable by setting button S.W FREQUENCY Note.10 60 ± 0.1Hz 50/60Hz selectable by setting button S.W 50 ± 0.1 Hz 50/60Hz selectable by setting button S.W OUTPUT WAVEFORM Note.2 True sine wave (THD<3%) AC REGULATION (Typ.) $\pm 3.0\%$ TRANSFER TIME (Typ.) 10ms inverter --- by pass SAVING MODE (Typ.) Default disabled. Load ≤5W will be changed to standby mode FRONT PANEL INDICATOR Battery voltage level, output load level, saving mode, fault and operation status BAT. VOLTAGE 12V 24V 48V 48V 24V 12V VOLTAGE RANGE (Typ.)Note.3,6 10.5 ~ 15VDC 21 ~ 30VDC 42 ~ 60VDC 10.5 ~ 15VDC 21 ~ 30VDC 42 ~ 60VDC Note.5 150A DC CURRENT (Typ.) 75A 37 5A 150A 75A 37 5A NO LOAD DISSIPATION (Typ.) INPUT ≦18W @ standby saving mode ≦1mA OFF MODE CURRENT DRAW EFFICIENCY (Typ.) Note.2 87% 89% 89% 88% 90% 91% BATTERY TYPES Open & sealed Lead Acid **FUSE** 40A*5 30A*3 30A*2 40A*5 30A*3 30A*2 **BATTERY** BAT. LOW ALARM 11.3±4% 45±4% 11.3±4% 22.5±4% 45±4% 22.5±4% INPUT PROTECTION 42±4% **BAT. LOW SHUTDOWN** 10.5±4% 21±4% 10.5±4% 21±4% 42±4% REVERSE POLARITY By internal fuse open 82°C ±5°C 82°C ±5°C 96°C ±5°C 68°C ±5°C 68°C ±5°C 68°C ±5°C **OVER TEMPERATURE** Protection type: Shut down o/p voltage, re-power on to recover; by internal RTH3 detect on heatsink of power transistor **OUTPUT SHORT** Protection type : Shut down o/p voltage, re-power on to recover OUTPUT 105 ~ 115% load for 180 sec., 115% ~ 125% load for 10 sec. **PROTECTION** OVER LOAD (Typ.) Protection type: Shut down o/p voltage, re-power on to recover CIRCUIT BREAKER 15A 10A **GFCI PROCTECTION** Optional (Only type F) None 0~+40°C @ 100% load; 60°C @ 50% load WORKING TEMP. Note.1 WORKING HUMIDITY 20% ~ 90% RH non-condensing ENVIRONMENT STORAGE TEMP., HUMIDITY -30 ~ +70°C / -22 ~ +158°F, 10 ~ 95% RH non-condensing 10 ~ 500Hz, 3G 10min./1cycle, 60min. each along X, Y, Z axes VIBRATION UL458 (only for "GFCI" receptacle-Type F), EAC TP TC 004 | EAC TP TC 004 IEC62368-1 CB, EAC TP TC 004 approved; Design refer to BS EN/EN62368-1 SAFETY STANDARDS WITHSTAND VOLTAGE Bat I/P - AC I/P:3.0KVAC Bat I/P - AC O/P:3.0KVAC AC O/P - FG:1.5KVAC **SAFETY &** Bat I/P - AC O/P, Bat I/P - FG, AC O/P - FG: 100M ohms / 500VDC / $25^{\circ}C$ / 70% RH ISOLATION RESISTANCE **EMC** Compliance to BS EN/EN55032 class B, 72/ 245/ CEE, 95/ 54/ CE, E-Mark, EAC TP TC 020 **EMC EMISSION** Compliance to FCC class A, EAC TP TC 020 Compliance to BS FN/FN61000-4-2 3 4 5 6 8 11 BS FN/FN55035 FAC TP TC 020 **EMC IMMUNITY** Compliance to EAC TP TC 020 CHARGE CURRENT (Typ.) 5.5A 2.7A 1.35A 2.7A 1.35A 5.5A CHARGER **CHARGE VOLTAGE** 14.3V±4% 28.5V ± 4% 57V±4% 14.3V±4% 28.5V ± 4% 57V ± 4% MAX OPEN CIRCUIT VOLTAGE 25V 45V 75V 25V 45V 75V SOLAR **CHARGE CURRENT (max.)** 30A CHARGER 28.5V±4% CHARGE VOLTAGE 14.3V±4% 57V±4% 14.3V±4% 28.5V ± 4% 57V±4% CONTROL WIRING RJ11 -RS232 Note.7 MTBF 229.1K hrs min. Telcordia SR-332 (Bellcore); 38.1K hrs min. MIL-HDBK-217F (25°C) OTHERS DIMENSION 420*220*88mm (L*W*H) 6.85Kg; 2pcs/15.7Kg/1.61CUFT PACKING NOTE 1.Output derating capacity referenced by curve 1. 2.THD and Efficiency is tested by 1000W, linear load at 13V, 26V, 52V input voltage. 3.Input derating capacity referenced by curve 2. 4.All parameters not specified above are measured at rated load, 25° C of ambient temperature and set to factory setting. 4.Aii parameters not specialed above are measured at rated load, 25 € of ambient emperature and se 5.DC current is tested by 1500W, linear load at 13V, 26V, 52V input voltage. 6.The tolerance of each voltage value by models is:112/212→±0.5V;124/224→±1V;148/248→±2V. 8.Please do not turn on the inverter before start the engine if inverter connect to vehicle's battery directly. 9.The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft). 10.Type F for 60Hz only ※ Product Liability Disclaimer: For detailed information, please refer to https://www.meanwell.com/serviceDisclaimer.aspx



■ Instructions for TN-1500 monitoring software

- 1. The monitoring software can be downloaded from product section (with TN-1500 specification) on MEAN WELL's official website, http://www.meanwell.com/productsoftware.aspx
- 2. The monitoring software can run on Windows 7 English version, Windows 7 Chinese (Traditional, Taiwan) version, Windows 8 English version and Windows 8 Chinese (Traditional, Taiwan) version
- 3. Installation of TN-1500 unit and PC

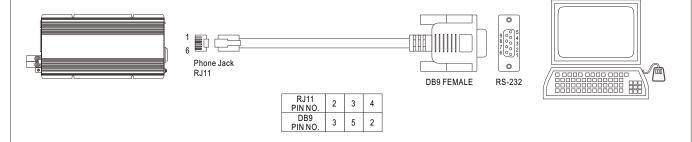


Figure 1

4. Explanation of Monitoring Manu

4.1 Main Page

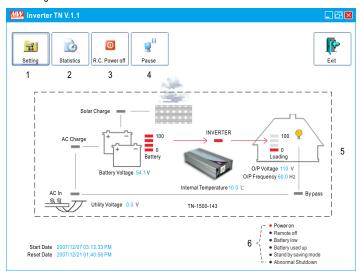


Figure 2

- 1. Setting: Adjustment for output voltage, charging related voltage, frequency, and operation mode. Please refer to Figure 3 for details.
- 2. Statistics: Calculate for the percentage of operating period for each operation mode. Please refer to Figure 4 for details.
- 3. R.C. Power off: Power can be turned ON or OFF at the remote location.
- ${\bf 4.\ Pause:\ Stop\ refreshing\ the\ page\ of\ monitoring\ software.}$
- 5. Status of unit: Indicating current operating status of TN-1500.
- 6. Signals that display current condition of the unit.



4.2 Setting Page

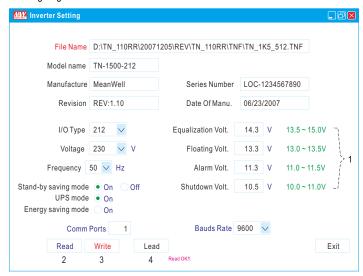


Figure 3

- 1. User can adjust the settings based on the characteristics of batteries been used: Equalization Voltage, Floating Voltage, Alarm Voltage, and Shut-down Voltage. UPS Mode / Energy Saving Mode selection and AC output voltage and frequency can also be set in this page.
- 2. Read: Read current settings of the unit.
- 3. Write: Write the revised setting into the unit.
- 4. Load: Load in factory default settings.

4.3 Statistic Page

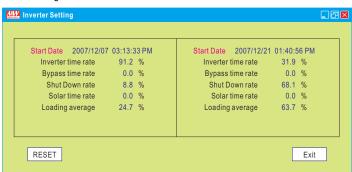


Figure 4

- 1. Start Date: Date that installing the monitoring software.
- 2. Reset Date: Date that resetting the statistics. The Start Date will not be influenced by resetting the statistics or turning off the unit.
- 3. Inverter time rate: Operating period of "Inverter Mode" represents how many percent of the whole operating period.
- 4. Bypass time rate: Operating period of "Bypass Mode" (energy provides directly by the utility) represents how many percent of the whole operating period
- 5. Shut down rate: Percentage of time period that the unit is under the condition of shut down.
 - * Inverter time rate + Bypass time rate + Shut down rate = 100%
- 6. Solar time rate: Percentage of time period that the solar charger is functioning after turning on the TN-1500 unit.
- 7. Loading average: Average loading after turning on the TN-1500 unit.



