

System Motor Driver Series for CD/DVD Drive & Recorder

# System Motor Driver IC for Slim Drive (3 sensors) BH5510KVT

## Description

BH5510KVT is an energy-saving, low noise PWM 6ch IC developed for the spindle motor, the actuator coil, and the stepping motor drive of notebook PCs and DVD camcorders. Power MOSFET is used for the output steps, and the energy-saving of the set is possible. S!PWM<sup>X2</sup> is adopted for the spindle motor driver and is ideal for decreasing noise of the set.

### Features

- 1) The spindle motor driver achieves a low noise by S!PWM<sup>X2</sup> super low noise drive method of an original ROHM.
- 2) The spindle motor driver built the gain switch function in, and it enabled the low-speed stability rotation.
- 3) Actuator coil driver (CH1-CH2) does not have a very small dead zone with good linearity.
- 4) Actuator coil driver (CH1-CH2) can be optimized by matching the frequency characteristic to the load characteristic with the external R.C. network
- 5) An eject function can be used when the tilt coil load is not used by the set.
- 6) STBY input (pin4) is three state input, and controls the spindle motor driver only.

### Applications

Portable optical disk equipment, such as notebook PC and DVD camcorders

#### Unit Parameter Symbol Limits Power MOS circuit power supply voltage v Vcc 6 Control circuit power supply voltage **PVcc** 6 V Maximum driver output current **IoMAX** 3 А \*2 Pd 1.37 W Power dissipation Operating temperature range Topr -40 to 85 °C Storage temperature range Tstg -55 to 150 °C

● Absolute maximum ratings Ta=25℃

\*1 The current is guaranteed 3.0A in case of the short-circuit braking mode and the current which is turned on/off in a duty-ratio of less than 1/10 with a maximum on-time of 5msec.

\*2 PCB (70mm×70mm×1.6mm, occupied copper foil is less than 3%, glass epoxy) mounting. Reduce by 11.0mW/<sup>o</sup>C over 25<sup>o</sup>C.

#### Recommended operating conditions Ta=25°C

Parameter	Symbol	MIN.	TYP.	MAX.	Unit
Power MOS circuit power supply voltage	PVcc	3.0	5.0	5.5	V
Control circuit power supply voltage	Vcc	4.0	5.0	5.5	V
Atmosphere	Та	-10	25	70	°C



#### Pin description

Pin No	Symbol	Description	Pin No	Symbol	Description
1	FG	Frequency generator output	25	RNF1	Spindle driver current sense output1
2	GVSW	Control for gain of spindle	26	U	Spindle driver output U
3	BMSW	Control for brake mode	27	v	Spindle driver output V
4	STBY	Control for standby	28	PVcc22	Spindle driver power supply22
5	VO1F	PWM Driver (CH1) positive output	29	RNF2	Spindle driver current sense output2
6	VO1R	PWM Driver (CH1) negative output	30	w	Spindle driver output W
7	PGND1	PWM driver power ground1	31	PGND3	PAM driver power ground3
8	VO2F	PWM Driver (CH2) positive output	32	VO4F	PWM driver (CH4) positive output
9	VO2R	PWM Driver (CH2) negative output	33	VO4R	PWM driver (CH4) negative output
10	PVcc1	PWM driver power supply1	34	PVcc3	PWM driver power supply3
11	VO3F	PWM Driver (CH3) positive output	35	VO5F	PWM driver (CH5) positive output
12	VO3R	PWM Driver (CH3) negative output	36	VO5R	PWM driver (CH5) negative output
13	SPCNF	Spindle driver feedback filter	37	Vref	Reference voltage input
14	CPH	P/H time constant setting	38	CNF5	PWM driver (CH5) feedback filter
15	GND	Pre unit ground	39	CNF4	PWM driver (CH4) feedback filter
16	Vcc	Pre unit power supply	40	CNF3	PWM driver (CH3) feedback filter
17	HUP	Hall amp. U positive input	41	CNF2	PWM driver (CH2) feedback filter
18	HUN	Hall amp. U negative input	42	CNF1	PWM driver (CH1) feedback filter
19	HVP	Hall amp. V positive input	43	IN1	PWM driver (CH1) input
20	HVN	Hall amp. V negative input	44	IN2	PWM driver (CH2) input
21	HWP	Hall amp. W positive input	45	IN3	PWM driver (CH3) input
22	HWN	Hall amp. W negative input	46	IN4	PWM driver (CH4) input
23	НВ	Hall bias	47	IN5	PWM driver (CH5) input
24	PVcc21	Spindle driver power supply21	48	INSP	Spindle driver input

Positive/negative of the output terminals are determined in reference to those of the input terminals.

• Equivalent-circuit diagram of the terminals



#### • Electrical characteristics

(Unless otherwise noted Ta=25°C,Vcc=PVcc=5V,Vref=1.25V,RL(act)=8Ω+47uH,RL(SP)=2Ω+47uH,SPRNF=0.2Ω)

Parameter	Symbol	MIN	TYP	MAX	Unit	Condition
Current in standby mode	IST	—	—	0.1	mA	VST=1.0V
Quiescent current	lcc	—	10.5	20	mA	VST=2.6V
ACT PWM Driver (CH1,2,3		Ω)				
nput dead zone (one side)	VDZACT1,2,3	_		3	mV	Value of design guarantee
Output offset voltage	VOO1,2,3	-50	—	50	mV	
Voltage gain	GVC1,2,3	12.0	14.0	16.0	dB	
Gain error by polarity	∆GVC1,2,3	-2	0	2	dB	
PWM frequency	f1,2,3,CH	240	300	360	kHz	
Output ON resistance	RON1,2,3,		1.3	2.0	Ω	lo=500mA
STP PWM Driver (CH4,5)						
nput dead zone(one side)	VDZSTP4,5	10	30	50	mV	
Dutput offset voltage	VOO4,5	-50	—	50	mV	
Voltage gain	GVC4,5	12.0	14.0	16.0	dB	
Gain error by polarity	∆GVC4,5	-2	0	2	dB	
PWM frequency	f4,5CH	240	300	360	kHz	
Output ON resistance	RON4,5		1.5	2.3	Ω	lo=500mA
3-phase PWM Driver						
Hall bias/Hall amp						
Hall bias output voltage	VHB	0.8	1.0	1.2	v	IHB=10mA
nput bias current	IHIB	-2	0	2	μΑ	
Hall input level (one side)	VHI	30	—	_	mVpp	
Common mode input range	VHICM	1	—	3.8	V	
Torque control/FG						
Input dead zone of gm1 (one side)	VDZSP 1	2	50	100	mV	gm1 (GVSW=Low)
nput dead zone of gm2 (one side)	VDZSP 2	10	210	460	mV	gm2 (GVSW=Hi)
Input-output gain 1	gm 1	0.8	1.0	1.2	AV	Effective current(GVSW=Low) SPRNF=0.2Ω
Input-output gain 2	gm 2	0.16	0.2	0.24	AN	Effective current(GVSW=Hi) SPRNF=0.2Ω
PWM frequency	fSP	60	80	100	kHz	
Output ON resistance	RONSP(U,V,W)	—	0.6	1.2	Ω	lo=500mA
Output limit voltage	VLIMSP	0.16	0.20	0.24	V	1A Limit when SPRNF=0.2Ω
FG High-level output voltage	VFGH	4.7	4.9	—	V	Pull-up resistor is 100KΩ
FG Low-level output voltage	VFGL	_	0.1	0.3	v	Pull-up resistor is 100KΩ
GVSW ON level voltage range	VGVON	2.0	_	_	v	gm 2
GVSW OFF level voltage range	VGVOFF	—	_	0.5	v	gm 1
BMSW SB voltage range	VBMS	2.0			V	Short brake
BMSW REV voltage range	VBMR	—	—	0.5	V	Reverse brake
Others						
Vref drop mute ON threshold voltage	VMVref	—	0.7	1.0	V	
Vcc drop mute ON threshold voltage	VMVcc	3.2	3.6	4.0	v	
Standby High-level voltage range	VSTH	2.6		3.3	v	
Standby Hi-Z level voltage range	VSTHZ	1.6	_	2.0	V	OPEN(Hi-Z) is also available.
Standby Low-level voltage range	VSTL	0	_	1.0	v	· · ·

\*This IC is not designed to be radiation-resistant.

#### Test circuit



#### Functional description

1) Torque command (pin48), CPH (14pin)

The relation between the torque command input signal and the input signal to CPH terminal is expressed in the figure below.



The input-output transfer gain from the spindle input terminal to CPH terminal (PWM-output peak-current), gm1, depends on the resistance of RNF-output-current detection resistor.

 $gm \ 1 = 1 / (5 \cdot RNF) \qquad (A / V)$ The input-output transfer gain, gm2, depends on the resistance of RNF-output-current detection resistor. gm 2 = 1 / (25 \cdot RNF) (A / V)

The output-limit current ILIM is

ILIM = VLIMSP / RNF (A)

2) Hall input (pin17 to pin22) and Hall bias (pin23)

Either series or parallel connection of the Hall elements can be used. Set the input voltage to the Hall elements to 1.0V to 3.8V and larger than 30m Vp-p.



Series connection

3) Input/output timing chart



4) Standby control terminal (4pin) STBY terminal - 3STATE matrix

	Voltage at STBY terminal	CH1 ~ 5	SPINDLE
LOW	0V ~ 1.0V	MUTE	MUTE
HIZ	1.6V ~ 2.0V	MUTE	ACTIVE
HI	2.6V ~ 3.3V	ACTIVE	ACTIVE

#### 5) Muting

a) Vref-drop muting

When the voltage at Vref terminal (pin37) drops to lower than 0.7V (Typ.), the outputs of all the channels are brought to open state. Set the Vref terminal voltage to larger than 1.0V.

b) Vcc-drop muting

When the voltage at Vcc terminal (pin16) drops to lower than 3.6V (Typ.), the outputs of all the channels are brought to open state. The hysteresis voltage width is 140mV(Typ.).

#### 6) Thermal-shutdown

A thermal-shutdown circuit (over-temperature protection circuit) is built in to prevent the IC from thermal breakdown. Use the IC under the allowable loss (1.37W), the junction temperature rises, and the thermal-shutdown circuit works at the junction temperature of 175°C(Typ.) (the outputs of all the channels are brought to open status). When the junction temperature drops to 150°C(Typ.), the IC start operating again.

#### External parts description

1) Filtering capacitor

It is recommended to connect SPCNF= $0.01\mu$ F/CNF1 to  $3=0.047\mu$ F/CNF4.5= $0.033\mu$ F filtering capacitor to SPCNF and CNF terminals. This capacitor filters PWM output carrier frequency. Dispersion of the cut off frequency due to circuit board wiring layout is taken into consideration. If it is difficult to filter at the recommended value due to circuit board writing led round, the capacity can be increased. In this case, note that the output transmission delay time may be longer.

#### 2) P/H time constant capacitor

It is recommend to connect 1000pF P/H time constant capacitor to CPH terminal. It is the one to hold a steep peak current, and if it is far somewhat arranged from IC, the effect of holding decreases by the wiring impedance and the noise, etc. Please examine the capacitor between CPH and GND to arrange it near IC. Please set the P/H time constant with 1000pF or more and with 1/10 or less of SPCNF filtering capacitor to stabilize the rotation speed.

#### 3) Bypass capacitor

Connect a bypass capacitor (0.1µF) across the supply voltage lines close to the IC pins.

### • Cautions in using the IC

1) Absolute maximum ratings

This IC might be destroyed when the absolute maximum ratings, such as impressed voltages(Vcc, VM) or the operating temperature range(Topr), is exceeded, and whether the destruction is short circuit mode or open circuit mode cannot be specified. Please take into consideration the physical countermeasures for safety, such as fusing, if a particular mode that exceeds the absolute maximum rating is assumed.

#### 2) Reverse polarity connection

Connecting the power line to the IC in reverse polarity (from that recommended) will damage the part. Please utilize the direction protection device as a diode in the supply line.

#### 3) Power supply line

Due to switching and EMI noise generated by magnetic components (inductors and motors), using electrolytic and ceramic suppress filter capacitors  $(0.1\mu F)$  close to the IC power input terminals (Vcc and GND) is recommended. Please note: the electrolytic capacitor value decreases at lower temperatures.

#### 4) GND line

The ground line is where the lowest potential and transient voltages are connected to the IC.

5) Thermal design

Do not exceed the power dissipation (Pd) of the package specification rating under actual operation, and please design enough temperature margins.

### 6) Short circuit mode between terminals and wrong mounting

Do not mount the IC in the wrong direction and be careful about the reverse-connection of the power connector. Moreover, this IC might be destroyed when the dust short the terminals between them or GND.

#### 7) Radiation

Strong electromagnetic radiation can cause operation failures.

#### 8) ASO(Area of Safety Operation)

When using the IC, set the output transistor so that it does not exceed absolute maximum ratings or ASO.

#### 9) TSD(Thermal Shut-Down)

The TSD is activated when the junction temperature(Tj)reaches175°C(with +/-25°C hysteresis), and the output terminal is switched to Hi-z. The TSD circuit designed to shut the IC off to prevent runaway thermal operation. It is not designed to protect or guarantee its operation. Do not continue to use the IC after operating this circuit.

#### 10) Capacitor between output and GND

If a large capacitance value is connected between the output and ground pins, and if the VCC falls to 0 V or becomes shorted with the ground pin, the current stored in the capacitor may flow to the output pin. This can cause damage to the IC. Set capacitors connected between the output and ground pins to values that fall within the recommended range.

#### 11) Inspection by the set circuit board

When testing the IC on an application board, connecting a capacitor to a pin with low impedance subjects the IC to stress. Always discharge capacitors after each process or step. Always turn the IC's power supply off before connecting it to, or removing it from a jig or fixture, during the inspection process. Ground the IC during assembly steps as an antistatic measure. Use similar precaution when transporting and storing the IC.

#### 12) Noise due to reverse polarity voltage

This monolithic IC contains P+ isolation and P substrate layers between adjacent elements to keep them isolated. PñN junctions are formed at the intersection of these P layers with the N layers of other elements, creating a parasitic diode or transistor. For example, the relation between each potential is as follows:

When GND > Pin A and GND > Pin B, the P-N junction operates as a parasitic diode.

When Pin B > GND > Pin A, the PñN junction operates as a parasitic transistor.

Parasitic diodes can occur inevitably in the structure of the IC. The operation of parasitic diodes can result in mutual interference among circuits, operational faults, or physical damage. Accordingly, methods by which parasitic diodes operate, such as applying a voltage that is lower than the GND (P substrate) voltage to an input pin, should not be used.





#### 13) Ground wiring pattern

The power supply and ground lines must be as short and thick as possible to reduce line impedance. Fluctuating voltage on the power ground line may damage the device.

#### 14) Application circuit

It is one sample that explains standard operation and usage of this IC about the described example of the application circuit and information on the constant etc. Therefore, please be sure to consult with our sales representative in advance before mass production design, when a circuit different from application circuit is composed of external.



### Application circuit 2



Power supply voltage characteristics







characteristic : Vcc=5.5V

#### **Temperature characteristics**









\* PCB (70mm×70mm×1.6mm, occupied copper foil is less than 3%, glass epoxy) mounting. Reduce by 11.0mW/ºC over 25ºC. However, exceed neither Pd nor ASO.

Order product name selection



KVT : TQFP48V

TQFP48V



The contents described herein are correct as of June. 2006

The contents described herein are subject to change without notice. For updates of the latest information, please contact and confirm with ROHM CO. LTD.

Any part of this application note must not be duplicated or copied without our permission. Application circuit diagrams and circuit constants contained herein are shown as examples of standard use and operation. Please pay careful attention to the peripheral conditions when designing circuits and deciding upon circuit constants in the set. Any data, including, but not limited to application circuit diagrams and information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO, LTD, disclaims any

ruly use, including, but not inner to application for any single in a non-match, used used in a interface only as including to including as including to the second serves. For in CC, ED declarities warranty that any use of such devices and for any single from or connected with or related to the use of such devices.

Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or otherwise dispose of the same, implied right or license to practice or comm proprietary rights owned or controlled by ROHM CO., LTD. Is granted to any such buyer. rcially exploit any intellectual property rights or other

The products described herein utilize silicon as the main materi
The products described herein are not designed to be X ray proof.

Seoul

Masar

Dalian

Beilin

Nanjir Ningb

Suzho Tianjir Wuxi Hong

Dongç Fuzho

Guand

Shena

Xiame Zhuha

Taipei Kaoha

Singap

Menile

nji Shang Hang

тіе

The products listed in this catalog are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys).

Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of which would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

#### Cont the products.

Excellence in Electronics



# ROHM CO., LTD.

21, Salin Mizosaki-cho, Ukyo-ku, Kyoto 615-8585, Japan TEL: +81-75-311-2121 FAX: +81-75-315-0172 URL http://www.rohm.com

us	for	furth	er	infor	matic	n a	about	the
Т	EL: +	82-2-81	82-7	<b>'0</b> 0	FAX: +	82-2-	8162-7	15
T	EL: +	82-55-2	240-6	234	FAX: +	82-5	5-240-6	236
T	EL: +	86-411	823	D-8549	FAX: +	86-4	11-8230	-8537
Т	EL: +	86-10-8	525·	-2483	FAX: +	86-10	)-8525-2	2489
T	EL: +	86-22-2	302	9181	FAX: +	86-22	2-23029	183
T	EL: +	86-21-6	279-	2727	FAX: +	86-2	1-6247-	2066
T	EL: +	86-571	876	58072	FAX: +	86-57	71-8765	8071
T	EL: +	86-25-8	689	-0015	FAX: +	86-2	5-8689-	0393
T	EL: +	86-574	876	54201	FAX: +	86-57	74-8765	4208
T	EL: +	86-532	-577	9-312	FAX:+8	36-53	2-5779	-653
T	EL: +	86-512	-680	7-1300	FAX: +	86-5	12-6807	-2300
T	EL: +	86-22-2	302	9181	FAX: +	86-22	2-23029	183
T	EL: +	86-510	-827	02693	FAX: +	86-51	0-8270	2992
T	EL: +	852-2-7	40-6	6262	FAX: +	852-2	2-375-8	971
T	EL: +	86-769	393	3320	FAX: +	86-76	39-398-	4140
T	EL: +	86-591	-880	1-8698	FAX: +	86-59	91-8801	-8690
T	EL: +	86-20-8	364	9796	FAX: +	86-20	)-8364-	9707
T	EL: +	65-633	2-23	22	FAX: +	65-63	332-566	2
T	EL: +	63-2-80	07-68	372	FAX: +	63-2-	809-14	22
		TEL: + TEL: +	TEL: +82-2-81 TEL: +82-55-2 TEL: +86-10-2 TEL: +86-10-2 TEL: +86-21-2 TEL: +86-512 TEL: +86-512	TEL: +82-2-8182-7 TEL: +82-55-240-6 TEL: +86-10-8525 TEL: +86-10-8525 TEL: +86-10-8525 TEL: +86-10-8525 TEL: +86-21-8767 TEL: +86-571-8767 TEL: +86-571-8767 TEL: +86-571-8767 TEL: +86-512-680 TEL: +86-510-8277 TEL: +86-510-8277 TEL: +86-591-800 TEL: +86-591-800 TEL: +86-591-800 TEL: +86-591-800 TEL: +86-591-800 TEL: +86-592-309 TEL: +86-592-309 TEL: +868-72237C TEL: +868-72237C TEL: +868-7237C	us for further infor TEL: +82-28182-700 TEL: +82-55-240-8234 TEL: +86-411-8230-8549 TEL: +86-10-8525-2483 TEL: +86-10-8525-2483 TEL: +86-21-8279-2727 TEL: +86-571-877658072 TEL: +86-574-877654201 TEL: +86-512-8807-1300 TEL: +86-512-8807-1300 TEL: +86-512-8807-1300 TEL: +86-512-8807-1300 TEL: +86-512-8807-1300 TEL: +86-512-8807-1300 TEL: +86-512-8807-3001 TEL: +86-592-23023181 TEL: +86-594-8301-8808 TEL: +86-592-23023181 TEL: +86-592-230-83322 TEL: +86-556-8332-3323 TEL: +86-556-8332-480 TEL: +866-72-230-0856 TEL: +866-72-230-0856 TEL: +866-72-230-0856 TEL: +866-72-332-480 TEL: +866-72-332-480 TEL: +866-72-332-480 TEL: +866-72-332-8322 TEL: +85-76-332-2322 TEL: +85-2807-6672	TEL:         +82-2-8182-700         FAX:           TEL:         +86-411-8220-8549         FAX:           TEL:         +86-10-8525-2483         FAX:           TEL:         +86-10-8525-2483         FAX:           TEL:         +86-10-8525-2483         FAX:           TEL:         +86-21-8279-2727         FAX:           TEL:         +86-21-8279-2727         FAX:           TEL:         +86-571-87568072         FAX:           TEL:         +86-571-87568072         FAX:           TEL:         +86-571-87568072         FAX:           TEL:         +86-571-87768072         FAX:           TEL:         +86-571-87768072         FAX:           TEL:         +86-571-87708072         FAX:           TEL:         +86-571-87708073         FAX:           TEL:         +86-572-8302312         FAX:           TEL:         +86-510-82702983         FAX:           TEL:         +86-769-9333320         FAX:           TEL:         +86-769-93303120         FAX:           TEL:         +86-756-3232-4832         FAX:           TEL:         +86-756-3232-4832         FAX:           TEL:         +86-756-3232-4832         FAX: <tr< th=""><th>TEL:         +82-2-8182-700         FAX:         +82-25           TEL:         +86-411-8230-8549         FAX:         +82-55           TEL:         +86-10-8525-2448         FAX:         +84-54           TEL:         +86-10-8525-2448         FAX:         +86-21           TEL:         +86-21-6279-2727         FAX:         +86-21           TEL:         +86-21-6279-2727         FAX:         +86-21           TEL:         +86-574-87558072         FAX:         +86-25           TEL:         +86-574-87558072         FAX:         +86-52           TEL:         +86-512-6807-1300         FAX:         +86-53           TEL:         +86-510-82702693         FAX:         +86-53           TEL:         +86-510-82702693         FAX:         +86-53           TEL:         +86-501-82702693         FAX:         +86-52           TEL:         +86-501-82702693         FAX:         +86-51           TEL:         +86-501-82702693         FAX:         +86-52           TEL:         +86-501-82702693         FAX:         +86-52           TEL:         +86-501-82703-8031         FAX:         +86-52           TEL:         +86-501-8201-888         FAX:         +86-52&lt;</th><th>TEL: +82-55-240-6234         FAX: +82-55-240-6           TEL: +86-10-8525-240-834         FAX: +86-411-8220           TEL: +86-10-8525-240-83         FAX: +86-10-8525-270           TEL: +86-10-8525-2707         FAX: +86-10-8525-718           TEL: +86-21-8279-2727         FAX: +86-21-827-727           TEL: +86-571-87568072         FAX: +86-571-875687           TEL: +86-571-87568072         FAX: +86-571-875687           TEL: +86-512-8689-0015         FAX: +86-512-8689-           TEL: +86-512-8607-1300         FAX: +86-512-8607           TEL: +86-510-82702933         FAX: +86-512-8607           TEL: +86-510-82702933         FAX: +86-510-8270293           TEL: +86-510-82702933         FAX: +86-510-8270293           TEL: +86-769-393-3320         FAX: +86-50-830-302           TEL: +86-769-393-3320         FAX: +86-50-830-302           TEL: +86-769-8307-3001         FAX: +86-756-323           TEL: +86-756-3232         FAX: +86-756-3232           TEL: +86-756-3232         FAX: +86-756-3232           TEL: +86-750-3232         FAX: +86-756-3232           TEL: +86-72-30081         FAX: +86-725-3232           TEL: +86-72-30-881         FAX: +86-725-3232           TEL: +86-72-70881         FAX: +86-723-5633           TEL: +865-72327-0881         FAX: +86-723-322</th></tr<>	TEL:         +82-2-8182-700         FAX:         +82-25           TEL:         +86-411-8230-8549         FAX:         +82-55           TEL:         +86-10-8525-2448         FAX:         +84-54           TEL:         +86-10-8525-2448         FAX:         +86-21           TEL:         +86-21-6279-2727         FAX:         +86-21           TEL:         +86-21-6279-2727         FAX:         +86-21           TEL:         +86-574-87558072         FAX:         +86-25           TEL:         +86-574-87558072         FAX:         +86-52           TEL:         +86-512-6807-1300         FAX:         +86-53           TEL:         +86-510-82702693         FAX:         +86-53           TEL:         +86-510-82702693         FAX:         +86-53           TEL:         +86-501-82702693         FAX:         +86-52           TEL:         +86-501-82702693         FAX:         +86-51           TEL:         +86-501-82702693         FAX:         +86-52           TEL:         +86-501-82702693         FAX:         +86-52           TEL:         +86-501-82703-8031         FAX:         +86-52           TEL:         +86-501-8201-888         FAX:         +86-52<	TEL: +82-55-240-6234         FAX: +82-55-240-6           TEL: +86-10-8525-240-834         FAX: +86-411-8220           TEL: +86-10-8525-240-83         FAX: +86-10-8525-270           TEL: +86-10-8525-2707         FAX: +86-10-8525-718           TEL: +86-21-8279-2727         FAX: +86-21-827-727           TEL: +86-571-87568072         FAX: +86-571-875687           TEL: +86-571-87568072         FAX: +86-571-875687           TEL: +86-512-8689-0015         FAX: +86-512-8689-           TEL: +86-512-8607-1300         FAX: +86-512-8607           TEL: +86-510-82702933         FAX: +86-512-8607           TEL: +86-510-82702933         FAX: +86-510-8270293           TEL: +86-510-82702933         FAX: +86-510-8270293           TEL: +86-769-393-3320         FAX: +86-50-830-302           TEL: +86-769-393-3320         FAX: +86-50-830-302           TEL: +86-769-8307-3001         FAX: +86-756-323           TEL: +86-756-3232         FAX: +86-756-3232           TEL: +86-756-3232         FAX: +86-756-3232           TEL: +86-750-3232         FAX: +86-756-3232           TEL: +86-72-30081         FAX: +86-725-3232           TEL: +86-72-30-881         FAX: +86-725-3232           TEL: +86-72-70881         FAX: +86-723-5633           TEL: +865-72327-0881         FAX: +86-723-322

валдкок	
Kuala Lumpur	1
Penang	T T
Dusseldorf	
Munich	1
Stuttgart	1
France	1
United Kingdom	
Denmark	1
Barcelona	1
Malaga	1
Hungary	1
Poland	1
Russia	1
San Diego	1
Atlanta	1
Boston	1
Chicago	1
Dallas	
Denver	1
Nashville	1
Guadalaiara	1

TEL: +66-2-254-4890	FAX: +66-2-256-6334
TEL: +60-3-7958-8355	FAX: +60-3-7958-8377
TEL: +60-4-6585084	FAX: +60-4-6585167
TEL: +49-2145-9210	FAX: +49-2154-921400
TEL: +49-8161-48310	FAX: +49-8161-483120
TEL: +49-711-72723710	FAX: +49-711-72723720
TEL: +33-1-5697-3060	FAX: +33-1-5697-3080
TEL: +44-1-908-306700	FAX: +44-1-908-235788
TEL: +45-3694-4739	FAX: +45-3694-4789
TEL: +34-9375-24320	FAX: +34-9375-24410
TEL: +34-9520-20263	FAX: +34-9520-20023
TEL: +36-1-4719338	FAX: +36-1-4719339
TEL: +48-22-5757213	FAX: +48-22-5757001
TEL: +7-95-980-6755	FAX: +7-95-937-8290
TEL: +1-858-625-3630	FAX: +1-858-625-3670
TEL: +1-770-754-5972	FAX: +1-770-754-0691
TEL: +1-978-371-0382	FAX: +1-928-438-7164
TEL: +1-847-368-1006	FAX: +1-847-368-1008
TEL: +1-972-312-8818	FAX: +1-972-312-0330
TEL: +1-303-708-0908	FAX: +1-303-708-0858
TEL: +1-615-620-6700	FAX: +1-615-620-6702
TEL: +52-33-3123-2001	FAX: +52-33-3123-2002

Catalog No.06T095A '06.7 ROHM © 50 OGI

	copying or reproduction of this document, in part or in whole, is permitted without the sent of ROHM Co.,Ltd.
The	content specified herein is subject to change for improvement without notice.
"Pro	e content specified herein is for the purpose of introducing ROHM's products (hereinafte oducts"). If you wish to use any such Product, please be sure to refer to the specifications ch can be obtained from ROHM upon request.
illus	imples of application circuits, circuit constants and any other information contained herein strate the standard usage and operations of the Products. The peripheral conditions mus taken into account when designing circuits for mass production.
Нο\	eat care was taken in ensuring the accuracy of the information specified in this document wever, should you incur any damage arising from any inaccuracy or misprint of sucl rmation, ROHM shall bear no responsibility for such damage.
exa imp oth	e technical information specified herein is intended only to show the typical functions of and mples of application circuits for the Products. ROHM does not grant you, explicitly o licitly, any license to use or exercise intellectual property or other rights held by ROHM and er parties. ROHM shall bear no responsibility whatsoever for any dispute arising from the of such technical information.
equ	Products specified in this document are intended to be used with general-use electroni- ipment or devices (such as audio visual equipment, office-automation equipment, commu ation devices, electronic appliances and amusement devices).
The	Products specified in this document are not designed to be radiation tolerant.
	ile ROHM always makes efforts to enhance the quality and reliability of its Products, a duct may fail or malfunction for a variety of reasons.
aga failı sha	ase be sure to implement in your equipment using the Products safety measures to guard inst the possibility of physical injury, fire or any other damage caused in the event of the ure of any Product, such as derating, redundancy, fire control and fail-safe designs. ROHN Il bear no responsibility whatsoever for your use of any Product outside of the prescribed pe or not in accordance with the instruction manual.
sys may inst con of t	Products are not designed or manufactured to be used with any equipment, device or tem which requires an extremely high level of reliability the failure or malfunction of which y result in a direct threat to human life or create a risk of human injury (such as a medica rument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel- troller or other safety device). ROHM shall bear no responsibility in any way for use of any he Products for the above special purposes. If a Product is intended to be used for an h special purpose, please contact a ROHM sales representative before purchasing.
be	bu intend to export or ship overseas any Product or technology specified herein that mat controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to ain a license or permit under the Law.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

## ROHM Customer Support System

http://www.rohm.com/contact/