



■ Features :

- True sine wave output (THD<3%)
- High surge power up to 3000W
- U.P.S. mode and energy saving mode (selectable)
- High efficiency up to 91%
- Power ON-OFF switch
- Standby saving mode can be selectable
- Front panel indicator for operation status
- Thermostatically controlled cooling fan
- Protections: Bat. low alarm / Bat. low shutdown / Over voltage / Over temp.
 / Output short / Input polarity reverse / Overload / AC circuit breaker
- Application: Home appliance, power tools, office and portable equipment, vehicle and yacht ...etc.
- Built-in solar / AC charger
- Support RS-232 communication (communication cable RJ11-RS232 included) Note.7
- 3 years warranty c(UL)us



SPECIFICATION

10.Type F for 60Hz only.

MODEL NO.		TN-1500-112	TN-1500-124□	TN-1500-148□	TN-1500-212□	TN-1500-224	TN-1500-248□
		□ = A, F	•	'	□= B, C, D	'	
	RATED POWER (Typ.)	1500W					
	MAXIMUM OUTPUT POWER (Typ.)	Typ.) 1725W for 180 sec. / 1875W for 10 sec. / surge power 3000W for 30 cycles					
ОИТРИТ	101017107	Factory setting set at 110VAC			Factory setting set at 230VAC		
	AC VOLTAGE	100 / 110 / 115 / 120VAC selectable by setting button S.W			200 / 220 / 230 / 240VAC selectable by setting button S.W		
	FREQUENCY Note.10	60±0.1Hz 50/60Hz selectable by setting button S.W			50±0.1Hz 50/60Hz selectable by setting button S.W		
		True sine wave (THD<3%)			'	•	
	AC REGULATION (Typ.)	±3.0%					
	TRANSFER TIME (Typ.)	10ms inverter→by pass					
	SAVING MODE (Typ.)	Default disabled. Load≦5W will be changed to standby mode					
	FRONT PANEL INDICATOR	Battery voltage level, output load level, saving mode, fault and operation status					
INPUT	BAT. VOLTAGE	12V	24V	48V	12V	24V	48V
	VOLTAGE RANGE (Typ.)Note.3,6		21 ~ 30VDC	42 ~ 60VDC	10.5 ~ 15VDC	21 ~ 30VDC	42 ~ 60VDC
	DC CURRENT (Typ.) Note.5		75A	37.5A	150A	75A	37.5A
	NO LOAD DISSIPATION (Typ.)		<u> </u>	1-11-11	100/1	10/1	07.071
	OFF MODE CURRENT DRAW	= 10W @ staticity saving mode ≤1mA					
	EFFICIENCY (Typ.) Note.2		89%	89%	88%	90%	91%
	BATTERY TYPES	Open & sealed Lead		0970	00 /0	30 /0	31/0
	FUSE	40A*5	30A*3	30A*2	40A*5	30A*3	30A*2
BATTERY INPUT PROTECTION	BAT. LOW ALARM	11.3±4%	22.5±4%	45±4%	11.3±4%	22.5±4%	45±4%
		10.5±4%	21±4%	43±4% 42±4%	10.5±4%	21±4%	43±4% 42±4%
	BAT. LOW SHUTDOWN			42 14 /0	10.5 ± 4 /6	21 1 4 /0	42 14 /0
OUTPUT PROTECTION ENVIRONMENT	OVER TEMPERATURE	By internal fuse oper	1	00°G 5°G	00°C 5°C	00°C 1 5°C	00°C 5°C
		82°C ±5°C	82°C ±5°C	96°C ±5°C	68°C ±5°C	68°C ±5°C	68°C ±5°C
		Protection type: Shut down o/p voltage, re-power on to recover; by internal RTH3 detect on heatsink of power transistor					
	OUTPUT SHORT	Protection type: Shut down o/p voltage, re-power on to recover					
	OVER LOAD (Typ.)	105 ~ 115% load for 180 sec., 115% ~ 125% load for 10 sec.					
		Protection type : Shut down o/p voltage, re-power on to recover					
	CIRCUIT BREAKER	15A 10A					
	GFCI PROCTECTION	Optional (Only type F) None					
	WORKING TEMP. Note.1	0 ~ +40°C @ 100% load ; 60°C @ 50% load					
	WORKING HUMIDITY	20% ~ 90% RH non-condensing					
	STORAGE TEMP., HUMIDITY	-30 ~ +70°C / -22 ~ +158°F, 10 ~ 95% RH non-condensing					
	VIBRATION	10 ~ 500Hz, 3G 10min./1cycle, 60min. each along X, Y, Z axes					
SAFETY & EMC	SAFETY STANDARDS	UL458 (only for "GFCI" receptacle-Type F), EAC TP TC 004 EAC TP TC 004 IEC62368-1 CB, EAC TP TC 004 approved; Design refer to BS EN/EN6230					
	WITHSTAND VOLTAGE	Bat I/P - AC I/P:3.0KVAC Bat I/P - AC O/P:3.0KVAC AC O/P - FG:1.5KVAC					
	ISOLATION RESISTANCE	Bat I/P - AC O/P, Bat I/P - FG, AC O/P - FG: 100M ohms / 500VDC / 25°C / 70% RH					
	EMC EMISSION	Compliance to FCC class A, EAC TP TC 020			Compliance to BS EN/EN55032 class B, 72/ 245/ CEE, 95/ 54/ CE, E-Mark, EAC TP To		
	EMC IMMUNITY	Compliance to EAC TP TC 020			Compliance to BS EN/EN61000-4-2,3,4,5,6,8,11, EAC TP TC		
AC CHARGER	CHARGE CURRENT (Typ.)	5.5A	2.7A	1.35A	5.5A	2.7A	1.35A
	CHARGE VOLTAGE	14.3V±4%	28.5V±4%	57V±4%	14.3V±4%	28.5V±4%	57V±4%
SOLAR CHARGER	MAX OPEN CIRCUIT VOLTAGE		45V	75V	25V	45V	75V
	CHARGE CURRENT (max.)	30A					
	CHARGE VOLTAGE	14.3V±4%	28.5V±4%	57V±4%	14.3V±4%	28.5V±4%	57V±4%
OTHERS	CONTROL WIRING Note.7						
	DIMENSION	420*220*88mm (L*W*H)					
	PACKING	6.85Kg; 2pcs/15.7Kg/1.61CUFT					
NOTE	1.Output derating capacity refearth and Efficiency is tested 3.Input derating capacity refer 4.All parameters not specified 5.DC current is tested by 1500 6.The tolerance of each voltag 7.The cable is enclosed for the	d by 1000W, linear loadenced by curve 2. above are measured 0W, linear load at 13\text{13} to ge value by models is the connection between	at rated load, 25°C /, 26V, 52V input vo :112/212→±0.5V;12 n TN-1500 and comp	of ambient temperatultage. 24/224→±1V;148/24 outer for software mo	18→±2V. nitoring.	setting.	
	8.Please do not turn on the inverter before start the engine if inverter connect to vehicle's battery directly. 9.The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500m).						

** Product Liability Disclaimer: For detailed information, please refer to https://www.meanwell.com/serviceDisclaimer.aspx



■ Instructions for TN-1500 monitoring software

- 1. The monitoring software can be downloaded from product section (with TN-1500 specification) on MEAN WELL's official website, http://www.meanwell.com/productsoftware.aspx
- 2. The monitoring software can run on Windows 7 English version, Windows 7 Chinese (Traditional, Taiwan) version, Windows 8 English version and Windows 8 Chinese (Traditional, Taiwan) version
- 3. Installation of TN-1500 unit and PC

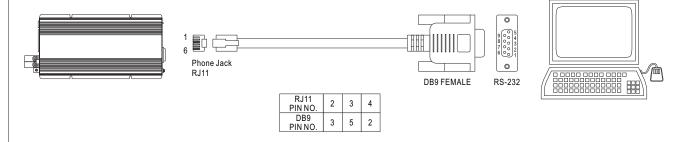


Figure 1

4. Explanation of Monitoring Manu

4.1 Main Page

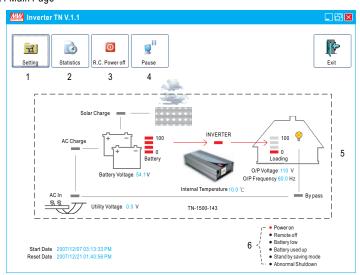


Figure 2

- 1. Setting: Adjustment for output voltage, charging related voltage, frequency, and operation mode. Please refer to Figure 3 for details.
- 2. Statistics: Calculate for the percentage of operating period for each operation mode. Please refer to Figure 4 for details.
- 3. R.C. Power off: Power can be turned ON or OFF at the remote location.
- 4. Pause: Stop refreshing the page of monitoring software.
- 5. Status of unit: Indicating current operating status of TN-1500.
- 6. Signals that display current condition of the unit.



4.2 Setting Page

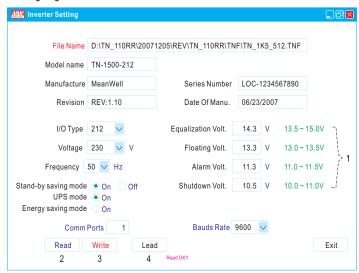


Figure 3

- 1. User can adjust the settings based on the characteristics of batteries been used: Equalization Voltage, Floating Voltage, Alarm Voltage, and Shut-down Voltage. UPS Mode / Energy Saving Mode selection and AC output voltage and frequency can also be set in this page.
- 2. Read: Read current settings of the unit.
- 3. Write: Write the revised setting into the unit.
- 4. Load: Load in factory default settings.

4.3 Statistic Page

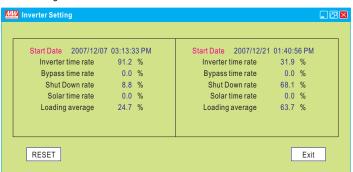


Figure 4

- 1. Start Date: Date that installing the monitoring software.
- 2. Reset Date: Date that resetting the statistics. The Start Date will not be influenced by resetting the statistics or turning off the unit.
- 3. Inverter time rate: Operating period of "Inverter Mode" represents how many percent of the whole operating period.
- 4. Bypass time rate: Operating period of "Bypass Mode" (energy provides directly by the utility) represents how many percent of the whole operating period
- $5. \, Shut \, down \, rate: Percentage \, of \, time \, period \, that \, the \, unit \, is \, under \, the \, condition \, of \, \, shut \, down.$
 - * Inverter time rate + Bypass time rate + Shut down rate = 100%
- 6. Solar time rate: Percentage of time period that the solar charger is functioning after turning on the TN-1500 unit.
- 7. Loading average: Average loading after turning on the TN-1500 unit.



