## Specification of QCM sensorsPSA-SL-



## 6.Packing





A sensor is put into the unit packing case with the metal cover.



A sensor in the case and sheet dryer are put into an aluminum bag and packed in vacuum.









Sensors (max 10) are put into the inner box (52mm × 113mm × 60mm). And a label is stuck on the box.



Inner boxes concluding sensors are put into the outer box (210mm  $\times 210$ mm  $\times 154$ mm), and fixed by air packing.



A label is stuck on the outer box.

## \*: QCM sensors are boxed by the 10 pcs unit.

Feb.21.2013