



User Guide

Heavy Duty CFM Thermo-Anemometer

Model 407113



Introduction

Congratulations on your purchase of the Extech 407113 CFM meter. This handheld meter can display Air Flow (CFM) with Area or Air Velocity with Temperature on a 10,000-count (0 to 9999) dual display LCD. Other functions include MIN/MAX Record/Recall, RS-232 PC interface, and Data Hold. The metal vane sensor offers rugged durability and higher temperature withstand than comparable devices. Careful use of this meter will provide years of reliable service.

Specifications

General Specifications


Display	Dual Display Multi-function 10,000-count (0 to 9999) LCD
Measurements	Air Velocity: m/s, km/h, ft/min, knots, mph; Air Flow: CMM (m^3/min) and CFM (ft^3/min); Temperature: °C and °F
Data Hold	Freezes displayed reading
Sampling rate	One (1) reading per second
Sensors	Air velocity/flow sensor: Metal angled vane arms with low-friction ball bearing. Temp. Sensor: Precision thermistor
MIN/MAX	Records/Recalls lowest and highest readings
Auto Power OFF	Automatic shut off after 15 minutes
PC Interface	RS-232 Serial Communications (16-bit data stream)
Over range indication	1 ___ appears on the LCD
Low battery indication	LBT appears on the LCD
Power supply	9V Battery (consumption 8.3mA approx.)
Operating conditions	Meter: 32 to 122°F (0 to 50°C); 80% RH max. Sensor: 32 to 175°F (0 to 80°C)
Dimensions / Weight	Main instrument: 7.1 x 2.8 x1.3" (180 x 72 x 32mm) Sensor head: 2.8" (72mm) diameter
Weight	0.84 lbs. (381g) for meter and sensor

Range Specifications

Air Velocity Measurements	Range	Resolution	Accuracy (%rdg)
m/s (meters per second)	0.50 - 35.00 m/s	0.01 m/s	± (2% + 0.2m/s)
km/h (kilometers per hour)	1.8 – 126.0 km/h	0.1 km/h	± (2% + 0.8km/h)
ft/min (feet per minute)	100 – 6890 ft/min	1 ft/min	± (2% + 40ft/min)
mph (miles per hour)	1.1 – 78.3 mph	0.1 mph	± (2% + 0.4m/h)
knots (nautical miles per hour)	1.0 to 68 knots	0.1 knots	± (2% + 0.4knots)
Air Flow Measurements	Range	Resolution	Area
CMM (cubic meters per minute)	0-999,900 m ³ /min	0.001 to 100	0 to 9,999m ²
CFM (cubic feet per minute)	0-999,900 ft ³ /min	0.001 to 100	0 to 9,999ft ²
Air Temperature	Range	Resolution	Accuracy
	32 to 175°F (0 to 80°C)	0.1°F/C	1.5°F (0.8°C)

Meter Description

1. Sensor Input
2. RS-232 PC Interface jack
3. LCD Display
4. Vane
5. Rubber Holster
6. Keypad
7. Battery compartment (rear)

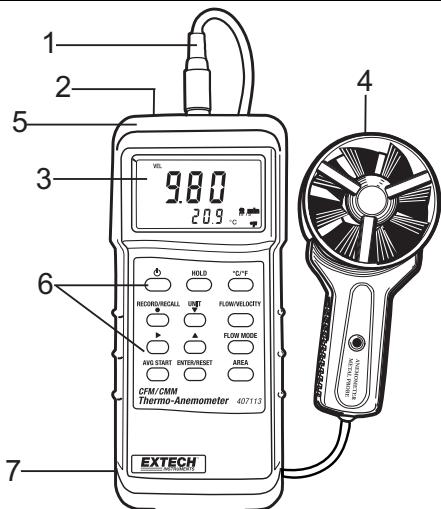


Note: To access the rear battery compartment, first remove the rubber holster that jackets the meter.

Operation

Air Velocity Measurements

1. Connect the sensor to the sensor input jack on top of the meter.
2. Turn on the meter using the Power button.
3. Select the VELOCITY function using the FLOW / VELOCITY button. The LCD will display **VEL** when the velocity mode is selected.
4. Select the desired temperature units using the C/F select button. The LCD will reflect the current unit selection.
5. Select the desired air velocity units using the UNIT button. The LCD will reflect the current unit selection.
6. Place the sensor in the air current to be measured with the  symbol on the inlet side of the vane (see diagram).
7. View the air velocity and temperature readings on the LCD Display. The large main LCD display shows the Air Velocity reading. The lower LCD sub-display shows the temperature reading.

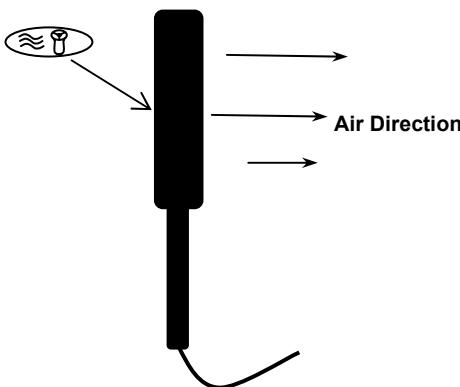

Data Hold

1. While taking measurements, press the HOLD button to freeze the LCD reading.
2. The **HOLD** indicator will appear on the LCD when the display is in Data Hold mode.
3. Press HOLD again to return to normal operation.

Maximum and Minimum Recording

The 407113 allows the user to record and view the highest (MAX) and lowest (MIN) readings.

1. Press the RECORD/RECALL button once. The **REC** indicator will appear on the display and the meter will begin recording the MAX and MIN values.
2. Press the RECORD/RECALL button to stop the MAX/MIN recording and display the maximum reading. The **MAX** indicator along with the maximum reading will appear on the LCD display.
3. Press RECORD/RECALL again to view the minimum value. The **MIN** indicator along with the minimum reading will appear on the LCD display.
4. To return to normal operation, press and hold the RECORD/RECALL button for approx. 3 seconds. The display indicators REC, MAX, and MIN will disappear.

NOTE: Placing the meter in the RECORD/RECALL mode by pressing the RECORD/RECALL button disables the AUTO POWER OFF feature.

NOTE: Handle the vane carefully. If the metal vane blades are inadvertently bent or damaged erroneous readings may result.

Air Flow (Volume) Measurements (CMM / CFM)

1. Connect the sensor to the sensor input jack on top of the meter.
2. Turn on the meter using the POWER button.
3. Select the FLOW mode using the FLOW/VELOCITY button. The LCD will display **FLOW CFM** or **FLOW CMM** when the flow function has been selected.
4. Select the desired air flow units: CMM (cubic meters per minute) or CFM (cubic feet per minute) using the UNIT button. The LCD will reflect the selection.
5. Measure the dimensions of the duct or vent and calculate the area in square feet or square meters

Note: If the dimensional measurements are made in inches (or cm), convert them feet (or meters) before calculating the square area.

6. Press the AREA button to begin entering the area in m^2 or ft^2 . Use the \blacktriangle button to increment the flashing digit, use the \blacktriangledown button to decrement, use the \blacktriangleright button to select the next digit, and use the \bullet button to set the decimal point.
7. Press the ENTER/RESET button after the area value has been entered. The bottom display will indicate the area entered in ft^2 or m^2 . The main LCD displays the Air Flow in CFM (cubic feet per minute) or CMM (cubic meters per minute). If the CFM or CMM reading exceeds 9999, use the displayed X10 or X100 multiplier to calculate the reading.
8. Note that for FLOW measurements, three modes apply: The normal, default mode, where the actual flow is indicated and the two modes described below under **2/3 MAX Flow** and **AVG Flow**.

Note: The temperature function is not active in the FLOW mode.

2/3V MAX Flow Mode

In this mode the meter will display two-thirds the measured Flow (Volume). To access this mode, ensure that the meter is in the FLOW mode (via the FLOW/VELOCITY button) and then press the FLOW MODE button until the 2/3V MAX display icon appears. Now the Flow display will be 2/3 the actual measurement. To return to the normal display mode, press the FLOW MODE button until the 2/3VMAX and the AVG icons switch off.

AVG (Average) Flow Mode

In this mode the meter will display the AVERAGE Flow for up to 20 readings. To access this mode, ensure that the meter is in the FLOW mode (via the FLOW/VELOCITY button) and press the FLOW MODE button until the AVG display icon appears. Now each time the AVG/START button is pressed a reading will be taken and averaged. The lower LCD display becomes a 20-reading counter and with each reading taken the counter is incremented. Allow 3 or 4 seconds between AVG/START button presses for the display counter to update. The main LCD displays the averaged Air Flow value. To return to the normal display mode, press the FLOW MODE button until the AVG icon switches off.

RS-232 PC Interface

The 407113 is equipped with a 3.5mm phone jack (meter top) for connection to a PC for data acquisition purposes. For streaming of data to a PC via the RS232 Output jack, the optional 407001-USB kit (RS232 to USB cable and driver CD) along with the 407001 software (available free at www.extech.com) are required. Instructions for use are provided with the data acquisition software/hardware kits.


Battery Replacement

When the **LBT** icon appears on the LCD, the 9V battery must be replaced.

1. Remove the rubber holster that surrounds the entire meter
2. Slide off the rear battery compartment
3. Replace the 9V battery
4. Affix the battery compartment cover and the meter holster

Useful Equations and Conversions

Area equation for rectangular or square ducts

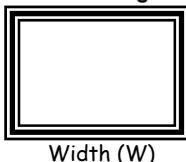


Height (H)

Width (W)

$$\text{Area (A)} = \text{Width (W)} \times \text{Height (H)}$$

Area equation for circular ducts

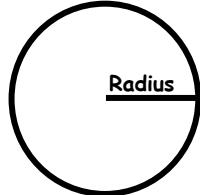

$$\text{Area (A)} = \pi \times r^2$$

Where $\pi = 3.14$ and $r^2 = \text{radius} \times \text{radius}$

Cubic equations

$$\text{CFM (ft}^3/\text{min}) = \text{Air Velocity (ft/min)} \times \text{Area (ft}^2\text{)}$$

$$\text{CMM (m}^3/\text{min}) = \text{Air Velocity (m/sec)} \times \text{Area (m}^2\text{)} \times 60$$

NOTE: Measurements made in *inches*

must be converted to *feet* or *meters* before using the above formulae.

Unit of Measure Conversion Table

	m/s	ft/min	knots	km/h	MPH
1 m/s	1	196.87	1.944	3.6	2.24
1 ft/min	0.00508	1	0.00987	0.01829	0.01138
1 knot	0.5144	101.27	1	1.8519	1.1523
1 km/h	0.2778	54.69	0.54	1	0.6222
1 MPH	0.4464	87.89	0.8679	1.6071	1

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for **one year** from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. NIST certification for most products is also provided. Call the Customer Service Department for information on calibration services available for this product. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 439-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Copyright © 2014 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaus et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage conséquent, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous fournissons également une certification NIST pour la plupart des produits. Contactez notre service client pour toute information sur les services de calibrage disponibles pour ce produit. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance: États-Unis (877) 439-8324; international: +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Copyright © 2014 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio a Clientes para obtener autorización. Visite www.extech.com para información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Además ofrecemos certificación NIST para la mayoría de los productos. Llame al Departamento de Servicio al Cliente para solicitar información de calibración para este producto. Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 439-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2014 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com