

ASNT5037-PQC is available on two evaluation boards: one with negative supply and one with positive supply. Application notes for these two evaluation boards are presented in order of:

- Negative supply on ASNT05\_12
- Positive supply on ASNT05\_11

By default, ADSANTEC will ship the positive supply evaluation board. Please send us a message through the DigiKey marketplace website if you would like to receive the negative supply version.

The datasheet for ASNT5037-PQC can be accessed through the following LINK.



# ASNT5037-PQC on ASNT05\_12 Evaluation Board DC-17Gbps Limiting Amplifier Application Note

### **Part Description**

ASNT5037-PQC limiting amplifier accepts a broadband data/clock signal at its differential input port inp/inn and delivers it with adjustable amplitude to its differential output port outp/outn. The output amplitude can be adjusted by DC or AC signals applied to the differential tuning port tnp/tnn.

The part is mounted on an ASNT05\_12 evaluation board with 50*Ohm* transmission lines to transfer signals to/from the chip to 4 high-speed edge-mount female connectors (Southwest or similar) as shown in Fig. 1. The board has two low-speed edge-mount SMA connectors for control signals, a MOLEX connector for the power supply, as well as signal filters, supply filters, and decoupling networks. The board measures approximately 2.0 x 2.0 inches, without connectors.

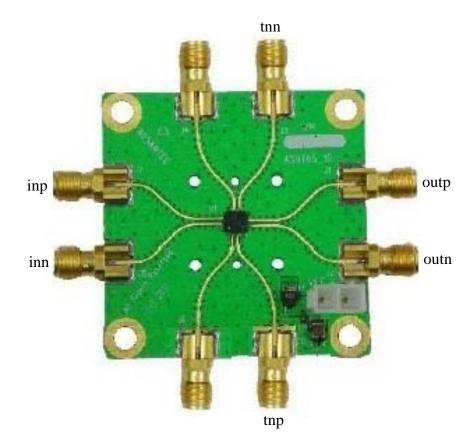


Fig. 1. Layout of ASNT05\_12 PCB



The signal and power connectors are described in Table 1 and Table 2 below.

Table 1. Signal Connectors

Name on PCB	Name on Chip	Signal description	Signal polarity	I/O type
J7	inp	Differential inputs with internal SE 500hm termination to	Direct	CML
J8	inn	vcc	Inverted	input
J1	outp	Differential outputs with internal SE 500hm termination	Direct	CML
J2	outn	to VCC; require external SE 50 <i>Ohm</i> termination to VCC	Inverted	output
J5	tnp	Amplitude control - low-speed input with internal	Direct	Analog
J3	tnn	2KOhm termination to VCC	Inverted	Analog

Name on PCB	Name on Chip	Supply type	Supply voltage, V
GND	vcc	External ground	0
VEE	vee	Main negative power supply	-3.3

### **Initial Setup and Basic Functionality**

- 1. The part is static sensitive. <u>Please observe anti-static protection procedures!</u>
- 2. Measure the resistance of all connector pins to VCC, including the power supply, while making sure the board is grounded. All high speed I/O ports should measure 50*Ohms* while on the power supply connector, VEE should be high impedance and GND should be a short. tnp/tnn should be 2.0*KOhms*. Fig. 2 shows the resistance values of the described I/O connectors.

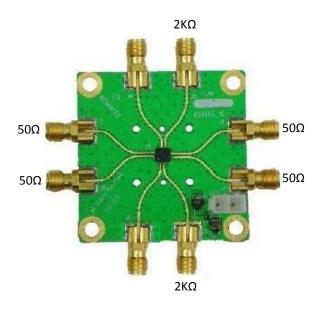


Fig. 2. Impedance of I/O Connectors



- 3. Switch on the external power supply unit and set it to a negative supply voltage with a value of -0.0V (positive output pin of the unit must be shorted to ground).
- 4. Connect the supply unit's output pins to the PCB's Molex connector marked VEE GND so that the negative output pin is connected to VEE connector pin.
- 5. Gradually increase the negative supply voltage to -3.3*V*.
- 6. Monitor the supply current in accordance with the part's specifications. Current should be approximately 196mA.
- 7. Apply differential or SE high-speed data or clock signaling to connectors J7/J8. DC blocks or the appropriate shift of voltage levels might be required!
- 8. Observe a version of the input signal at connectors J1/J2. Connect them to a sampling oscilloscope (or similar devices with a 500hm termination to ground) either directly or through DC blocks.
- 9. Apply DC voltages within the range from vcc to vcc-0.55V to connectors J5/J3 to modify the output amplitude. Observe the corresponding output amplitude changes on the oscilloscope.

#### **Board Dimension**

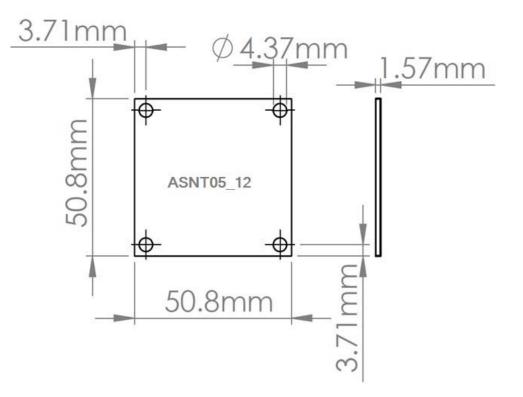


Fig. 3. ASNT05\_12 Board Dimensions



# ASNT5037-PQC on ASNT05\_11 Evaluation Board DC-17*Gbps* Limiting Amplifier Application Note

## **Part Description**

ASNT5037-PQC limiting amplifier accepts a broadband data/clock signal at its differential input port inp/inn and delivers it with adjustable amplitude to its differential output port outp/outn. The output amplitude can be adjusted by DC or AC signals applied to the differential tuning port tnp/tnn.

The part is mounted on an ASNT05\_11 evaluation board with 50*Ohm* transmission lines to transfer signals to/from the chip to 4 high-speed edge-mount female connectors (Southwest or similar) as shown in Fig. 4. The board has two low-speed edge-mount SMA connectors for control signals, a MOLEX connector for the power supply, as well as signal filters, supply filters, and decoupling networks. The board measures approximately 2.0 x 2.0 inches, without connectors.

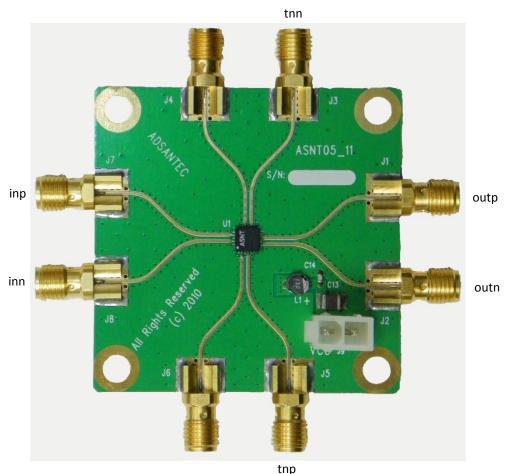


Fig. 4. Layout of ASNT05 11 PCB



The signal and power connectors are described in Table 1 and Table 2 below.

Table 3. Signal Connectors

Name on PCB	Name on Chip	Signal description	Signal polarity	I/O type
J7	inp	Differential inputs with internal SE 50 <i>Ohm</i> termination to	Direct	CML
J8	inn	VCC	Inverted	input
J1	outp	Differential outputs with internal SE 500hm termination	Direct	CML
J2	outn	to VCC; require external SE 50 <i>Ohm</i> termination to VCC	Inverted	output
J5	tnp	Amplitude control - low-speed input with internal	Direct	Analog
J3	tnn	2KOhm termination to VCC	Inverted	Analog

Table 4. Power Supply Connector	Table 4.	Power	Supply	Connector.
---------------------------------	----------	-------	--------	------------

Name on PCB	Name on Chip	Supply type	Supply voltage, V
VCC	vcc	Main positive power supply	+3.3
GND	vee	External ground	0

### **Initial Setup and Basic Functionality**

- 10. The part is static sensitive. Please observe anti-static protection procedures!
- 11. Measure the resistance of all connector pins to VCC, including the power supply, while making sure the board is grounded. All I/O ports should measure 50*Ohms* while on the power supply connector, VCC should be a short, and GND should be high impedance. tnp/tnn should measure 2.0*KOhms*. Fig. 5 shows the resistance values of the described I/O connectors.

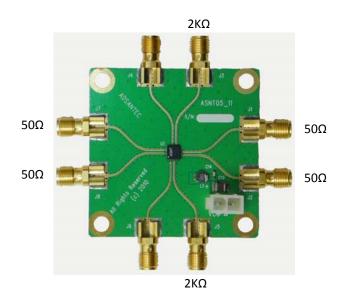


Fig. 5. Impedance of I/O Connectors



- 12. Switch on the external power supply unit and set it to a positive supply voltage with a value of +0.0V (negative output pin of the unit must be shorted to ground).
- 13. Connect the supply unit's output pins to the PCB's Molex connector marked VCC GND so that the positive output pin is connected to the VCC connector pin.
- 14. Gradually increase the positive supply voltage to +3.3V.
- 15. Monitor the supply current in accordance with the part's specifications. Current should be approximately 196mA.
- 16. Apply differential or SE high-speed data or clock signaling to connectors J7/J8. DC blocks or the appropriate shift of voltage levels might be required!
- 17. Observe a version of the input signal at connectors J1/J2. Connect them to a sampling oscilloscope (or similar devices with a 500hm termination to ground) through DC blocks.
- 18. Apply DC voltages within the range from vcc to vcc-0.55V to connectors J5/J3 to modify the output amplitude. Observe the corresponding output amplitude changes on the oscilloscope.

### **Board Dimensions**

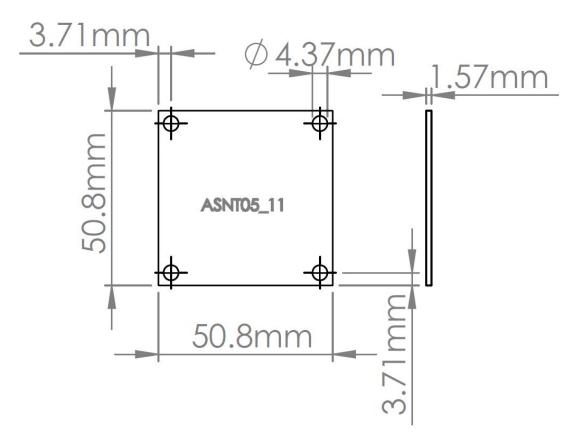


Fig. 6. ASNT05\_11 Board Dimensions



# **Revision History**

Revision	Date	Changes
1.0.1	09-2020	Initial Release