Stopwatch Timer


810025R Instruction Manual



Environmental Measurement Instruments

KEY FUNCTIONS

Mode	Display	S1	S2	S3	S4	S5	Digit (0-9)
Timer	Stop	Mode	Start	Reset	Up/Down (Select)	Memory	Set Timer
	Start	Mode	Stop			View Data	not working
Stopwatch	Stop	Mode	Start	Reset			
	Start	Mode	Stop	Split	Split/S. Lap (Select)		

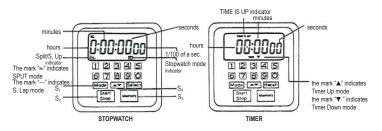


FEATURES

- 100 hr count down/up timer.
- 1/100 sec. stopwatch chrond to 10 hrs.
- · Section & Total Lap time.
- Easy setting by key tone buttons.
- Overtime Recording
- Error Sound System

ERROR SOUND SYSTEM IN "TIMER" SETTING STATUS, IF "HOUR SETTING"


More than, "99" Min, Sec. Setting more than "59" then press S_2 (Start). "E" will appear and sound for 5 seconds to remind ERROR SETTING. i.e.

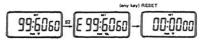

TIMER SETTING

- 1. Press S₁, LCD show "TMR" TIMER MODE Indicator.
- Press S₄, Choose TIMER UP or DOWN.
- 3. TIMER setting, EX. Press 1.
- 4. Press 2.
- 5. Press 3.
- 6. Press 4.
- 7. Press 0.
- 8. Press 0.
- 9. a. In **TIMER DOWN** mode, press **S**₂, Start countdown.
- 9. b. In **TIMER UP** mode, press **S**₂, start count up.
- a. Whentime is down to Zero, w ill start to count automatically.
- b. In **TIMER UP** mode when time is up to "the preset time", will sound for 60 seconds.
- 11. Press S₂, stop counting.
- 12. Press **S**₃, Time reset to Zero. "TIME'S UP" disappears.

(MAX. Can be set to 99h 59m 59s) (MIN. Can be set to 1 second)

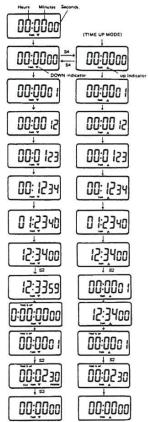

TIMER RECALL (MEMORY)

At any time when timer stop Press \bm{S}_{5} will show "the preset time" press $\bm{S}_{2},$ start counting

VIEW DATA

While the digits start to count up or down, press S_5 will show the "present time" until key release, then return to running automatically.

SOUND STOP

When the sound is output, it is stopped by depressing any keys in any mode, In this case, one press stops the sound.

HOW TO STOP COUNTING

During sound, want to stop counting, must press S_2 (STOP) twice immediately.


Note ...

If the counter up timer is in RUN status, the count down timer will not be allowed. On the other hand, if the count down timer is in RUN status, the count up timer will not be allowed too.

HOW TO OPERATE THE STOPWATCH

SPILT TIMING FUNCTION

- 1. Press **S₄**, select SPUT "<u>=</u>." SPLIT mark "---"S. LAP mark.
- 2. Press **S**₂, start counting, " "STOP w. Indicator flash
- Press S₅ to display SPLIT time. Watch will continue to count internally.
- Press S₃ to release split time and display overall elasped timein process. This procedure may be repeated as many times as necessary.
- 5. Press S_2 to stop counting
- 6. Press \mathbf{S}_3 to restart watch to zero

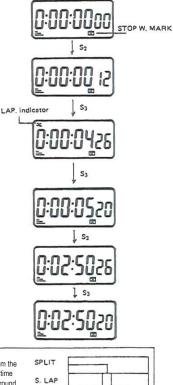

Spilt time (SPLIT) is the time elaspsed from the starting point to a specific point, and LAP time (S. LAP) is the time elapsed for one time round.

SECTION LAP TIMING FUNCTION

- 1. Press **S**₄, start S. LAP mode "---"S. LAP mark.
- 2. Press S₂, to start stopwatch
- Press S₃ to display S. LAP time. Watch will start counting from zero automatically. "LAP" mark flash. Press S₃.
- EACH press S₃ will get the "S. LAP" time. This procedure maybe repeated as many times as necesary.
- 5. Press S_2 to stop counting
- 6. Press \boldsymbol{S}_3 to display "the LAST S. LAP" time
- 7. Press S_3 to Reset WATCH to zero.




NORMAL TIME MEASUREMENT

- Press S₂, to start STOPWATCH counting, MAX. to 9^h 59^m 59^s 99/100^s.
- 2. Press S2, to stop counting
- 3. Press S₃ to reset to "0".

TWO FINISH TIMES

- 1. Press \mathbf{S}_2 to start STOPWATCH
- 2. Press S_3 to record first finish time
- 3. Press \mathbf{S}_2 to record second finish time. First time will be visible on display.
- Press S₃ to erase first finish time. Second finish time will be visible on display
- 5. Press \mathbf{S}_3 to reset watch to zero



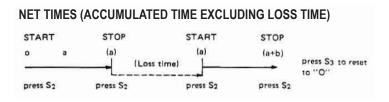

WARRANTY

Sper Scientific warrants this product against defects in materials and workmanship for a period of five (5) years from the date of purchase, and agrees to repair or replace any defective unit without charge. If your model has since been discontinued, an equivalent Sper Scientific product will be substituted if available. This warranty does not cover probes, batteries, battery leakage, or damage resulting from accident, tampering, misuse, or abuse of the product. Opening the meter to expose its electronics will break the waterproof seal and void the warranty. To obtain warranty service, ship the unit postage prepaid to:

SPER SCIENTIFIC LTD.

8281 E. Evans Rd., Suite #103 Scottsdale, AZ 85260 (480) 948-4448

The defective unit must be accompanied by a description of the problem and your return address. Register your product online at www.sperwarranty. com within 10 days of purchase.