## **THT Current Sense Transformers**

For Arc Fault Detection Circuits





- Works with the TI SolarMagic RD-195 DC Arc Fault Detection Reference Design Kit
- For the TI SM73201-ARC-EV PCB
- UL/C-UL recognized components
- 💶 3000 Vrms gate to drive winding test
- Useful operating frequency from 50 kHz to 500 kHz


Electrical Specifications @ 25°C — Operating Temperature -40°C to 130°C								
Part Number	Turns Ratio	<b>Primary Inductance</b> (3-7) (mH MIN)	<b>DCR Pri 1</b> (3-7) (Ω MAX)	<b>DCR Pri 2</b> (4-8) (m $\Omega$ MAX)	<b>DCR Sec</b> (1-10) (mΩ MAX)	<b>Hi-Pot</b> (Pri-Sec) (Vrms)		
PA3655NL	200:200:1	76	15.8	15.8	1.7	3000		

Electrical Specifications @ 25°C — Operating Temperature -40°C to 130°C								
Part Number		Calculation Data						
	RT	lpk	Max Flux Density	Kb				
	$(\Omega)$	(Amps)	(Gauss)	KD				
PA3655NL	200	34	2000	17.12				

## Notes:

- These current sense transformers have two one turn primaries that can be used in parallel. The listed current ratings are for parallel connection.
- The reference values are for an application using the termination resistor (Rt) and operating with unipolar waveform at 100kHz, 40% duty cycle. The estimated temperature rise is 55°C.
- The peak flux density should remain below 2100 Gauss to ensure that the core does not saturate. Use the following formula to calculate the peak flux density: Bpk = Kb \* lpk \* Rt \* don/(Ff \* Freq. in kHz) where: Rt is the terminating resistor in the application and Ff is 1 for unipolar waveform and 2 for bipolar waveform
- The temperature rise of the component is calculated based on the total core loss and copper loss:
  A. To calculate total copper loss (W): P(cu) = lpk2 \* DCR Sec \* Ff \* don where: Ff is 1 for unipolar waveform and 2 for bipolar waveform
  - B. To calculate total core loss (W): P(core) = 0.000073 \* (Freq. in kHz)1.67 \* (Bop in kG)2.532 where: Bop in kG = Kb \* lpk \* Rt \* don/(2000 \* Freq. in kHz)
  - C. To calculate temperature rise: Temperature Rise (C) = 60.18 \* (Core Loss(W) + Copper Loss (W)).833

Mechanicals Schematic

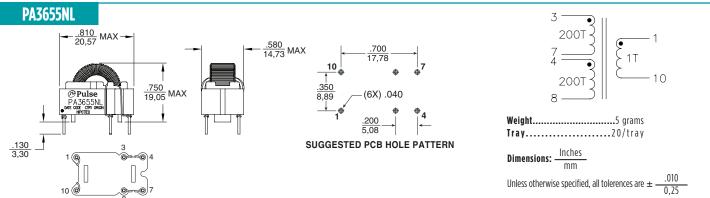

## For More Information

Pulse Worldwide Headquarters 12220 World Trade Drive San Diego, CA 92128 U.S.A.

Tel: 858 674 8100

Fax: 858 674 8262

Pulse Europe Zeppelinstrasse 15 71083 Herrenberg Germany

> Tel: 49 7032 7806 0 Fax: 49 7032 7806 12

Pulse China Headquarters B402, Shenzhen Academy of Aerospace Technology Bldg. 10th Kejinan Road High-Tech Zone Nanshan District

Shenzen, PR China 518057 Tel: 86 755 33966678 Fax: 86 755 33966700 Pulse North China Room 2704/2705

Room 2704/2705 Super Ocean Finance Ctr. 2067 Yan An Road West Shanghai 200336 China

Tel: 86 21 62787060 Fax: 86 2162786973 **Pulse South Asia** 

135 Joo Seng Road #03-02 PM Industrial Bldg. Singapore 368363

Tel: 65 6287 8998 Fax: 65 6287 8998 **Pulse North Asia** 

3F No. 198, Zhongyuan Road Zhongli City Taoyuan County (32068)

Taiwan

Tel: 886 3 4356768 Fax: 886 3 4356823

Performance warranty of products offered on this data sheet is limited to the parameters specified. Data is subject to change without notice. Other brand and product names mentioned herein may be trademarks or registered trademarks of their respective owners. © Copyright. 2012. Pulse Electronics. Inc. All rights reserved.

pulseelectronics.com P717.A (2/13)