

DEEP HINGED WINDOW KIT

BUL10295



REV. D

ASSEMBLY INSTRUCTIONS FOR DEEP HINGED WINDOW KITS (1481WDH)

INSTRUCTIONS :


- A) LOCATE WINDOW KIT IN DESIRED LOCATION.
- B) USE WINDOW KIT AS TEMPLATE FOR MARKING MOUNTING HOLE LOCATION. (USE CHART TO CONFIRM MAXIMUM CUTOUT SIZE)
- C) MARK ALL HOLES IN BODY.
- D) DRILL (9/32" / 7.1mm) HOLES.
- E) FILE SHARP EDGES OF CUTOUT.
- F) INSTALL WINDOW INTO PLACE USING SUPPLIED FASTENERS.
- G) TIGHTEN FASTENERS UNTIL THE GASKET IS FULLY COMPRESSED AGAINST MATING SURFACE.

ITEM #	DESCRIPTION
1	1481WDH
2	1/4-20 X 3/4 HEX ZP
3	NUT 1/4-20 KEP ZP

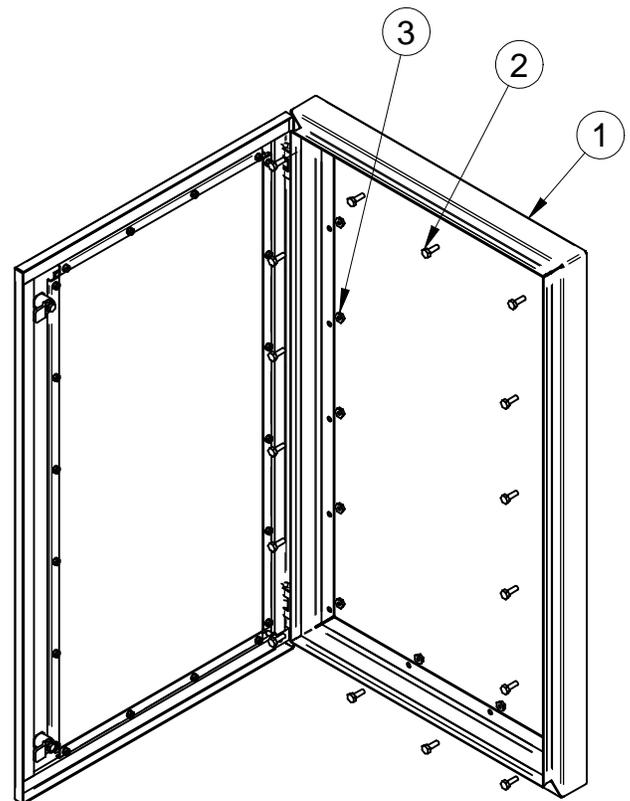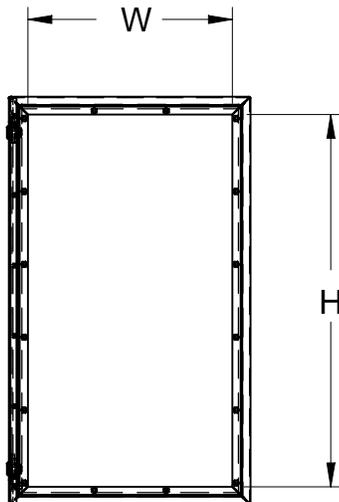

PART NUMBER	MAXIMUM CUTOUT SIZE (IN)		NUMBER OF SCREWS
	H	W	
1481WDH1418	9.19	11.56	8
1481WDH1612	11.19	5.14	8
1481WDH2016	15.19	9.14	8
1481WDH2416	19.19	9.14	10
1481WDH2420	19.19	13.14	12
1481WDH3024	25.19	17.14	14
PART SHOWN - 1481WDH2430	19.19	23.14	14
1481WDH3624	31.19	17.14	16

NOTE: ALL PARTS ALSO OFFERED IN STAINLESS STEEL.

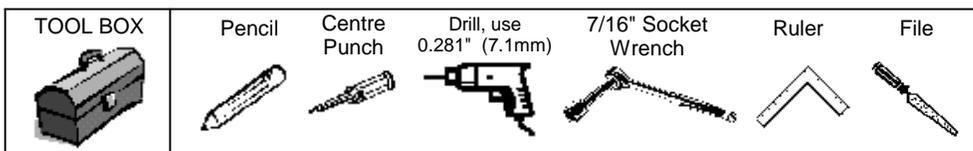

**HAMMOND
MANUFACTURING™
ENCLOSURES**