

Note: JP1 and JP2 are present so the user can disconnect clock and data signals from subsequent boards, allowing you to make a closed loop design without having the logic from the last board interfere with the logic of the first. They are normally closed, so open them if you're making a closed loop design.





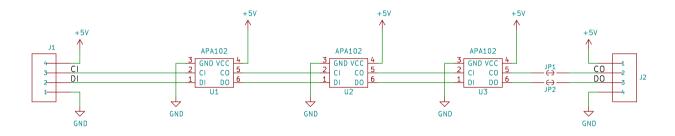



Released under the Creative Commons
Attribution Share—Alike 4.0 License
https://creativecommons.org/licenses/by-sa/4.0/
Designed by Pete Dokter

Sheet:1/1

File: Lumenati_90R.sch

Title: Lumenati 90R

Size: A4	Date:	7/5/17		Rev: v10	
	cad 4.0.7			ld: 1/1	

 \otimes