


M28W640FCT M28W640FCB

64 Mbit (4Mbx16, Boot Block) 3V Supply Flash memory

Feature summary

- Supply voltage
 - V_{DD} = 2.7V to 3.6V Core Power Supply
 - V_{DDO}= 1.65V to 3.6V for Input/Output
 - V_{PP} = 12V for fast Program (optional)
- Access times: 70, 85, 90,100ns
- Programming time:
 - 10µs typical
 - Double Word Programming Option
 - Quadruple Word Programming Option
- Common Flash Interface
- Memory blocks
 - Parameter Blocks (Top or Bottom location)
 - Main Blocks
- Block locking
 - All blocks locked at Power Up
 - Any combination of blocks can be locked
 - WP for Block Lock-Down
- Security
 - 128 bit user Programmable OTP cells
 - 64 bit unique device identifier
- Automatic standby mode
- Program and Erase Suspend
- 100,000 program/erase cycles per block
- Electronic signature
 - Manufacturer code: 20h
 - Top device code, M28W640FCT: 8848h
 - Bottom device code, M28W640FCB: 8849h

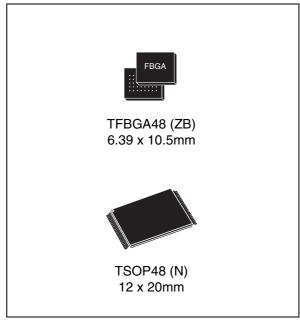

- Packages
 - ECOPACK® compliant

Contents

1	Sum	mary description	. 7
2	Sign	al descriptions	12
	2.1	Address inputs (A0-A21)	12
	2.2	Data Input/Output (DQ0-DQ15)	12
	2.3	Chip Enable (\overline{E})	12
	2.4	Output Enable (G)	12
	2.5	Write Enable (\overline{W})	12
	2.6	Write Protect (WP)	12
	2.7	Reset (RP)	13
	2.8	V _{DD} supply voltage	13
	2.9	V _{DDQ} supply voltage	13
	2.10	V _{PP} Program supply voltage	13
	2.11	V _{SS} Ground	13
3	Bus	operations	14
	3.1	Read	14
	3.2	Write	14
	3.3	Output Disable	14
	3.4	Standby	14
	3.5	Automatic Standby	15
	3.6	Reset	15
4	Com	mand interface	16
	4.1	Read Memory Array command	16
	4.2	Read Status Register command	16
	4.3	Read electronic signature command	16
	4.4	Read CFI Query command	17
	4.5	Block Erase command	18
	4.6	Program command	18
	4.7	Double Word Program command	19
	4.8	Quadruple Word Program command	19

	4.9	Clear Status Register command	19
	4.10	Program/Erase Suspend command	20
	4.11	Program/Erase Resume command	20
	4.12	Protection Register Program command	20
	4.13	Block Lock command	21
	4.14	Block Unlock command	22
	4.15	Block Lock-Down command	22
5	Block	locking	27
	5.1	Reading a Block's Lock status	27
	5.2	Locked state	27
	5.3	Unlocked state	27
	5.4	Lock-Down state	28
	5.5	Locking Operations during Erase Suspend	28
6	Status	s Register	30
	6.1	Program/Erase Controller status (bit 7)	30
	6.2	Erase Suspend status (bit 6)	30
	6.3	Erase status (bit 5)	31
	6.4	Program status (bit 4)	31
	6.5	V _{PP} status (bit 3)	31
	6.6	Program Suspend status (bit 2)	31
	6.7	Block Protection status (bit 1)	32
	6.8	Reserved (bit 0)	32
7	Maxin	num rating	33
8	DC an	nd AC parameters	34
9	Packa	ge mechanical	44
10	Part n	umbering	48
Appendix	A BI	ock address tables	50
Appendix	ВС	ommon Flash Interface (CFI)	58

Appendix C	Flowcharts and pseudo codes 6
Appendix D	Command Interface and Program/Erase Controller State
Revision his	tory

List of tables

Table 1.	Signal names	8
Table 2.	Bus operations	. 15
Table 3.	Command codes	. 17
Table 4.	Commands	. 23
Table 5.	Read Electronic signature	. 24
Table 6.	Read Block Lock signature	
Table 7.	Read Protection Register and Lock Register	. 25
Table 8.	Program, Erase Times and Program/Erase endurance cycles	. 26
Table 9.	Block Lock status	. 28
Table 10.	Protection status	. 29
Table 11.	Status Register bits	. 32
Table 12.	Absolute maximum ratings	. 33
Table 13.	Operating and AC measurement conditions	. 34
Table 14.	Capacitance	
Table 15.	DC characteristics	. 36
Table 16.	Read AC characteristics	. 38
Table 17.	Write AC characteristics, Write enable controlled	. 40
Table 18.	Write AC characteristics, Chip enable controlled	
Table 19.	Power-Up and Reset AC characteristics	. 43
Table 20.	TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package mechanical data	
Table 21.	TFBGA48 6.39x10.5mm - 8x6 ball array, 0.75mm pitch, package mechanical data	. 45
Table 22.	Ordering information scheme	
Table 23.	Daisy Chain ordering scheme	
Table 24.	Top Boot Block Addresses, M28W640FCT	
Table 25.	Bottom Boot Block Addresses, M28W640FCB	. 54
Table 26.	Query Structure Overview	
Table 27.	CFI Query Identification String	
Table 28.	CFI Query System Interface Information	
Table 29.	Device Geometry Definition	
Table 30.	Primary Algorithm-specific Extended Query table	
Table 31.	Security code area	
Table 32.	Write State machine Current/Next	
Table 33.	Write State machine Current/Next	. 74
Table 34.	Document revision history	. 76

List of figures

Figure 1.	Logic diagram	. 8
Figure 2.	TSOP connections	
Figure 3.	TFBGA connections (top view through package)	10
Figure 4.	Block addresses	11
Figure 5.	Protection Register memory map	11
Figure 6.	AC measurement I/O waveform	34
Figure 7.	AC measurement load circuit	35
Figure 8.	Read AC waveforms	38
Figure 9.	Write AC waveforms, Write enable controlled	
Figure 10.	Write AC waveforms, Chip enable controlled	41
Figure 11.	Power-Up and Reset AC waveforms	
Figure 12.	TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package outline	44
Figure 13.	TFBGA48 6.39x10.5mm - 8x6 ball array, 0.75mm pitch, bottom view package outline	45
Figure 14.	TFBGA48 daisy chain - package connections (top view through package)	46
Figure 15.	TFBGA48 daisy chain - PCB connections proposal (top view through package)	47
Figure 16.	Program flowchart and pseudo code	64
Figure 17.	Double Word Program flowchart and pseudo code	65
Figure 18.	Quadruple Word Program flowchart and pseudo code	66
Figure 19.	Program Suspend & Resume flowchart and pseudo code	67
Figure 20.	Erase flowchart and pseudo code	68
Figure 21.	Erase Suspend & Resume flowchart and pseudo code	69
Figure 22.	Locking Operations flowchart and pseudo code	70
Figure 23.	Protection Register Program flowchart and pseudo code	71

1 Summary description

The M28W640FCT and M28W640FCB are 64 Mbit (4 Mbit x 16) non-volatile Flash memories that can be erased electrically at block level and programmed in-system on a Word-by-Word basis using a 2.7V to 3.6V V_{DD} supply for the circuitry and a 1.65V to 3.6V V_{DDQ} supply for the Input/Output pins. An optional 12V V_{PP} power supply is provided to speed up customer programming.

The devices feature an asymmetrical blocked architecture. They have an array of 135 blocks: 8 Parameter Blocks of 4 KWord and 127 Main Blocks of 32 KWord. The M28W640FCT has the Parameter Blocks at the top of the memory address space while the M28W640FCB locates the Parameter Blocks starting from the bottom. The memory maps are shown in *Figure 4: Block addresses*.

The M28W640FCT and M28W640FCB feature an instant, individual block locking scheme that allows any block to be locked or unlocked with no latency, enabling instant code and data protection. All blocks have three levels of protection. They can be locked and locked-down individually preventing any accidental programming or erasure. There is an additional hardware protection against program and erase. When $V_{PP} \leq V_{PPLK}$ all blocks are protected against program or erase. All blocks are locked at Power Up.

Each block can be erased separately. Erase can be suspended in order to perform either read or program in any other block and then resumed. Program can be suspended to read data in any other block and then resumed. Each block can be programmed and erased over 100,000 cycles.

The device includes a 192 bit Protection Register to increase the protection of a system design. The Protection Register is divided into a 64 bit segment and a 128 bit segment. The 64 bit segment contains a unique device number written by Numonyx, while the second one is one-time-programmable by the user. The user programmable segment can be permanently protected. *Figure 5*, shows the Protection Register Memory Map.

Program and Erase commands are written to the Command Interface of the memory. An onchip Program/Erase Controller takes care of the timings necessary for program and erase operations. The end of a program or erase operation can be detected and any error conditions identified. The command set required to control the memory is consistent with JEDEC standards.

The memory is offered in TSOP48 (12×20 mm) and TFBGA48 (6.39×10.5 mm, 0.75mm pitch) packages and is supplied with all the bits erased (set to '1').

In order to meet environmental requirements, Numonyx offers the M28W640FCT and M28W640FCB in ECOPACK® packages. These packages have a Lead-free second level interconnect. The category of second Level Interconnect is marked on the package and on the inner box label, in compliance with JEDEC Standard JESD97.

The maximum ratings related to soldering conditions are also marked on the inner box label.

Figure 1. Logic diagram

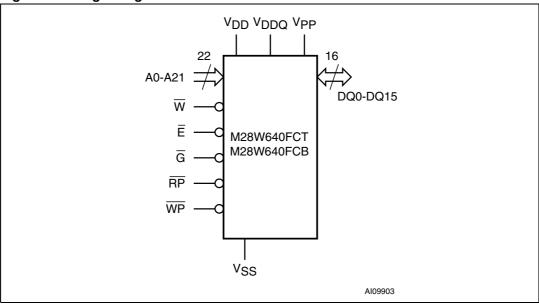


Table 1. Signal names

A0-A21	Address Inputs
DQ0-DQ15	Data Input/Output
Ē	Chip Enable
G	Output Enable
W	Write Enable
RP	Reset
WP	Write Protect
V_{DD}	Core Power supply
V_{DDQ}	Power supply for Input/Output
V _{PP}	Optional supply voltage for Fast Program & Erase
V _{SS}	Ground
NC	Not Connected Internally

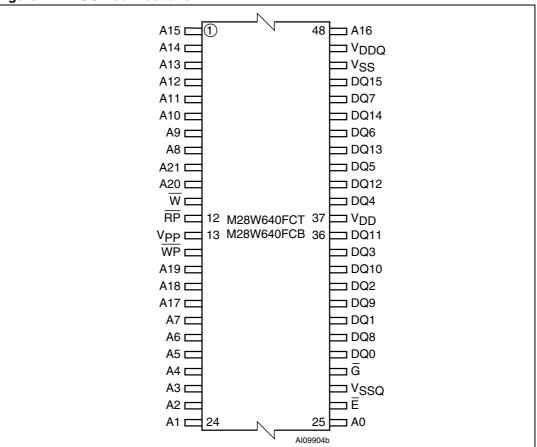


Figure 2. TSOP connections

Numonyx 9/77



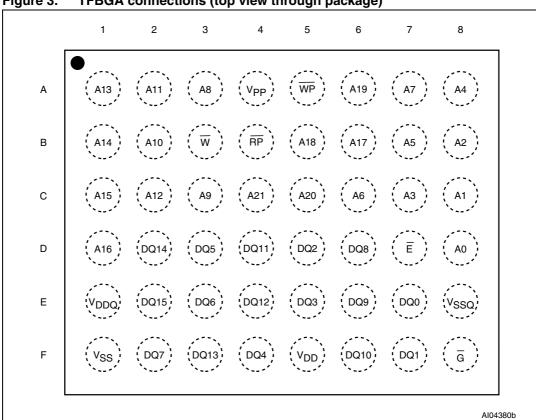


Figure 4. Block addresses

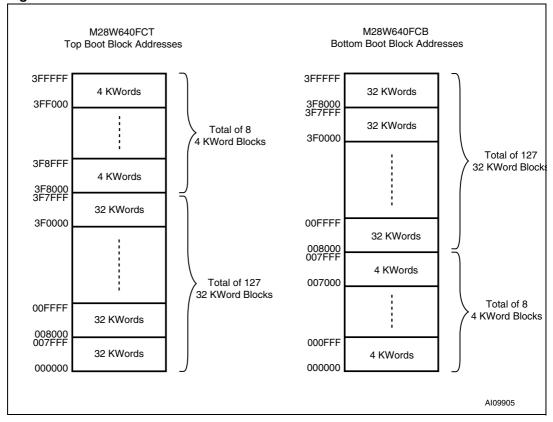

1. Also see Appendix A, Tables 24 and 25 for a full listing of the Block Addresses.

Figure 5. Protection Register memory map

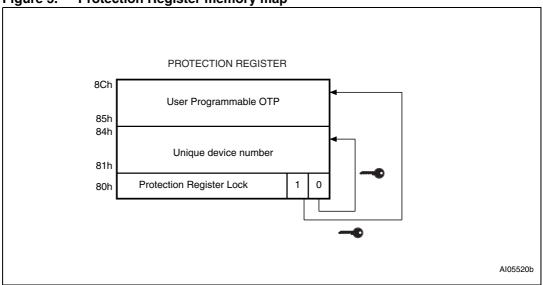

2 Signal descriptions

See *Figure 1: Logic diagram* and *Table 1: Signal names*, for a brief overview of the signals connected to this device.

2.1 Address inputs (A0-A21)

The Address Inputs select the cells in the memory array to access during Bus Read operations. During Bus Write operations they control the commands sent to the Command Interface of the internal state machine.

2.2 Data Input/Output (DQ0-DQ15)

The Data I/O outputs the data stored at the selected address during a Bus Read operation or inputs a command or the data to be programmed during a Write Bus operation.

2.3 Chip Enable (\overline{E})

The Chip Enable input activates the memory control logic, input buffers, decoders and sense amplifiers. When Chip Enable is at V_{IL} and Reset is at V_{IH} the device is in active mode. When Chip Enable is at V_{IH} the memory is deselected, the outputs are high impedance and the power consumption is reduced to the stand-by level.

2.4 Output Enable (\overline{G})

The Output Enable controls data outputs during the Bus Read operation of the memory.

2.5 Write Enable (\overline{W})

The Write Enable controls the Bus Write operation of the memory's Command Interface. The data and address inputs are latched on the rising edge of Chip Enable, \overline{E} , or Write Enable, \overline{W} , whichever occurs first.

2.6 Write Protect (WP)

Write Protect is an input that gives an additional hardware protection for each block. When Write Protect is at V_{IL} , the Lock-Down is enabled and the protection status of the block cannot be changed. When Write Protect is at V_{IH} , the Lock-Down is disabled and the block can be locked or unlocked. (refer to *Table 7: Read Protection Register and Lock Register*).

2.7 Reset (RP)

The Reset input provides a hardware reset of the memory. When Reset is at V_{IL} , the memory is in reset mode: the outputs are high impedance and the current consumption is minimized. After Reset all blocks are in the Locked state. When Reset is at V_{IH} , the device is in normal operation. Exiting reset mode the device enters read array mode, but a negative transition of Chip Enable or a change of the address is required to ensure valid data outputs.

2.8 V_{DD} supply voltage

V_{DD} provides the power supply to the internal core of the memory device. It is the main power supply for all operations (Read, Program and Erase).

2.9 V_{DDQ} supply voltage

 V_{DDQ} provides the power supply to the I/O pins and enables all Outputs to be powered independently from V_{DD} . V_{DDQ} can be tied to V_{DD} or can use a separate supply.

2.10 V_{PP} Program supply voltage

 V_{PP} is both a control input and a power supply pin. The two functions are selected by the voltage range applied to the pin. The Supply Voltage V_{DD} and the Program Supply Voltage V_{PP} can be applied in any order.

If V_{PP} is kept in a low voltage range (0V to 3.6V) V_{PP} is seen as a control input. In this case a voltage lower than V_{PPLK} gives an absolute protection against program or erase, while $V_{PP} > V_{PP1}$ enables these functions (see *Table 15: DC characteristics*, for the relevant values). V_{PP} is only sampled at the beginning of a program or erase; a change in its value after the operation has started does not have any effect on Program or Erase, however for Double or Quadruple Word Program the results are uncertain.

If V_{PP} is in the range 11.4V to 12.6V it acts as a power supply pin. In this condition V_{PP} must be stable until the Program/Erase algorithm is completed (see *Table 17* and *Table 18*).

2.11 V_{SS} Ground

V_{SS} is the reference for all voltage measurements.

Note: Each device in a system should have V_{DD} , V_{DDQ} and V_{PP} decoupled with a $0.1\mu F$ capacitor close to the pin. See *Figure 7: AC measurement load circuit*. The PCB track widths should be sufficient to carry the required V_{PP} program and erase currents.

3 Bus operations

There are six standard bus operations that control the device. These are Bus Read, Bus Write, Output Disable, Standby, Automatic Standby and Reset. See *Table 2: Bus operations*, for a summary.

Typically glitches of less than 5ns on Chip Enable or Write Enable are ignored by the memory and do not affect bus operations.

3.1 Read

Read Bus operations are used to output the contents of the Memory Array, the Electronic Signature, the Status Register and the Common Flash Interface. Both Chip Enable and Output Enable must be at V_{IL} in order to perform a read operation. The Chip Enable input should be used to enable the device. Output Enable should be used to gate data onto the output. The data read depends on the previous command written to the memory (see Command Interface section). See *Figure 8: Read AC waveforms*, and *Table 16: Read AC characteristics*, for details of when the output becomes valid.

Read mode is the default state of the device when exiting Reset or after power-up.

3.2 Write

Bus Write operations write Commands to the memory or latch Input Data to be programmed. A write operation is initiated when Chip Enable and Write Enable are at V_{IL} with Output Enable at V_{IH} . Commands, Input Data and Addresses are latched on the rising edge of Write Enable or Chip Enable, whichever occurs first.

See *Figure 9* and *Figure 10*, Write AC Waveforms, and *Table 17* and *Table 18*, Write AC Characteristics, for details of the timing requirements.

3.3 Output Disable

The data outputs are high impedance when the Output Enable is at V_{IH}.

3.4 Standby

Standby disables most of the internal circuitry allowing a substantial reduction of the current consumption. The memory is in stand-by when Chip Enable is at V_{IH} and the device is in read mode. The power consumption is reduced to the stand-by level and the outputs are set to high impedance, independently from the Output Enable or Write Enable inputs. If Chip Enable switches to V_{IH} during a program or erase operation, the device enters Standby mode when finished.

3.5 Automatic Standby

Automatic Standby provides a low power consumption state during Read mode. Following a read operation, the device enters Automatic Standby after 150ns of bus inactivity even if Chip Enable is Low, $V_{\rm IL}$, and the supply current is reduced to $I_{\rm DD1}$. The data Inputs/Outputs will still output data if a bus Read operation is in progress.

3.6 Reset

During Reset mode when Output Enable is Low, V_{IL} , the memory is deselected and the outputs are high impedance. The memory is in Reset mode when Reset is at V_{IL} . The power consumption is reduced to the Standby level, independently from the Chip Enable, Output Enable or Write Enable inputs. If Reset is pulled to V_{SS} during a Program or Erase, this operation is aborted and the memory content is no longer valid.

Table 2. Bus operations⁽¹⁾

Operation	Ē	G	W	RP	WP	V _{PP}	DQ0-DQ15
Bus Read	V_{IL}	V_{IL}	V _{IH}	V _{IH}	Х	Don't Care	Data Output
Bus Write	V_{IL}	V _{IH}	V _{IL}	V _{IH}	Х	V _{DD} or V _{PPH}	Data Input
Output Disable	V _{IL}	V _{IH}	V _{IH}	V _{IH}	Х	Don't Care	Hi-Z
Standby	V _{IH}	Х	Х	V _{IH}	Х	Don't Care	Hi-Z
Reset	Х	Х	Х	V _{IL}	Х	Don't Care	Hi-Z

^{1.} $X = V_{IL}$ or V_{IH} , $V_{PPH} = 12V \pm 5\%$

4 Command interface

All Bus Write operations to the memory are interpreted by the Command Interface. Commands consist of one or more sequential Bus Write operations. An internal Program/Erase Controller handles all timings and verifies the correct execution of the Program and Erase commands. The Program/Erase Controller provides a Status Register whose output may be read at any time during, to monitor the progress of the operation, or the Program/Erase states. See *Table 3: Command codes*, for a summary of the commands and see *Appendix D*, *Table 32: Write State machine Current/Next*, for a summary of the Command Interface.

The Command Interface is reset to Read mode when power is first applied, when exiting from Reset or whenever V_{DD} is lower than V_{LKO} . Command sequences must be followed exactly. Any invalid combination of commands will reset the device to Read mode. Refer to *Table 4: Commands*, in conjunction with the text descriptions below.

4.1 Read Memory Array command

The Read command returns the memory to its Read mode. One Bus Write cycle is required to issue the Read Memory Array command and return the memory to Read mode. Subsequent read operations will read the addressed location and output the data. When a device Reset occurs, the memory defaults to Read mode.

4.2 Read Status Register command

The Status Register indicates when a program or erase operation is complete and the success or failure of the operation itself. Issue a Read Status Register command to read the Status Register's contents. Subsequent Bus Read operations read the Status Register at any address, until another command is issued. See *Table 11: Status Register bits*, for details on the definitions of the bits.

The Read Status Register command may be issued at any time, even during a Program/Erase operation. Any Read attempt during a Program/Erase operation will automatically output the content of the Status Register.

4.3 Read electronic signature command

The Read Electronic Signature command reads the Manufacturer and Device Codes and the Block Locking Status, or the Protection Register.

The Read Electronic Signature command consists of one write cycle, a subsequent read will output the Manufacturer Code, the Device Code, the Block Lock and Lock-Down Status, or the Protection and Lock Register. See Tables 5, 6 and 7 for the valid address.

Table 3. Command codes

Hex Code	Command
01h	Block Lock confirm
10h	Program
20h	Erase
2Fh	Block Lock-Down confirm
30h	Double Word Program
40h	Program
50h	Clear Status Register
56h	Quadruple Word Program
60h	Block Lock, Block Unlock, Block Lock-Down
70h	Read Status Register
90h	Read Electronic Signature
98h	Read CFI Query
B0h	Program/Erase Suspend
C0h	Protection Register Program
D0h	Program/Erase Resume, Block Unlock confirm
FFh	Read Memory Array

4.4 Read CFI Query command

The Read Query Command is used to read data from the Common Flash Interface (CFI) Memory Area, allowing programming equipment or applications to automatically match their interface to the characteristics of the device. One Bus Write cycle is required to issue the Read Query Command. Once the command is issued subsequent Bus Read operations read from the Common Flash Interface Memory Area. See *Appendix B: Common Flash Interface (CFI)*, Tables *26*, *27*, *28*, *29*, *30* and *31* for details on the information contained in the Common Flash Interface memory area.

4.5 Block Erase command

The Block Erase command can be used to erase a block. It sets all the bits within the selected block to '1'. All previous data in the block is lost. If the block is protected then the Erase operation will abort, the data in the block will not be changed and the Status Register will output the error.

Two Bus Write cycles are required to issue the command.

- The first bus cycle sets up the Erase command.
- The second latches the block address in the internal state machine and starts the Program/Erase Controller.

If the second bus cycle is not Write Erase Confirm (D0h), Status Register bits b4 and b5 are set and the command aborts.

Erase aborts if Reset turns to V_{IL} . As data integrity cannot be guaranteed when the Erase operation is aborted, the block must be erased again.

During Erase operations the memory will accept the Read Status Register command and the Program/Erase Suspend command, all other commands will be ignored. Typical Erase times are given in *Table 8: Program, Erase Times and Program/Erase endurance cycles*.

See *Appendix C*, *Figure 20: Erase flowchart and pseudo code*, for a suggested flowchart for using the Erase command.

4.6 Program command

The memory array can be programmed word-by-word. Two bus write cycles are required to issue the Program Command.

- The first bus cycle sets up the Program command.
- The second latches the Address and the Data to be written and starts the Program/Erase Controller.

During Program operations the memory will accept the Read Status Register command and the Program/Erase Suspend command. Typical Program times are given in *Table 8: Program, Erase Times and Program/Erase endurance cycles*.

Programming aborts if Reset goes to $V_{\rm IL}$. As data integrity cannot be guaranteed when the program operation is aborted, the block containing the memory location must be erased and reprogrammed.

See *Appendix C*, *Figure 16: Program flowchart and pseudo code*, for the flowchart for using the Program command.

4.7 Double Word Program command

This feature is offered to improve the programming throughput, writing a page of two adjacent words in parallel. The two words must differ only for the address A0. Programming should not be attempted when V_{PP} is not at V_{PPH} .

Three bus write cycles are necessary to issue the Double Word Program command.

- The first bus cycle sets up the Double Word Program Command.
- The second bus cycle latches the Address and the Data of the first word to be written.
- The third bus cycle latches the Address and the Data of the second word to be written and starts the Program/Erase Controller.

Read operations output the Status Register content after the programming has started. Programming aborts if Reset goes to $V_{\rm IL}$. As data integrity cannot be guaranteed when the program operation is aborted, the block containing the memory location must be erased and reprogrammed.

See *Appendix C*, *Figure 17: Double Word Program flowchart and pseudo code* for the flowchart for using the Double Word Program command.

4.8 Quadruple Word Program command

This feature is offered to improve the programming throughput, writing a page of four adjacent words in parallel. The four words must differ only for the addresses A0 and A1. Programming should not be attempted when V_{PP} is not at V_{PPH} .

Five bus write cycles are necessary to issue the Quadruple Word Program command.

- The first bus cycle sets up the Quadruple Word Program Command.
- The second bus cycle latches the Address and the Data of the first word to be written.
- The third bus cycle latches the Address and the Data of the second word to be written.
- The fourth bus cycle latches the Address and the Data of the third word to be written.
- The fifth bus cycle latches the Address and the Data of the fourth word to be written and starts the Program/Erase Controller.

Read operations output the Status Register content after the programming has started. Programming aborts if Reset goes to $V_{\rm IL}$. As data integrity cannot be guaranteed when the program operation is aborted, the block containing the memory location must be erased and reprogrammed.

See Appendix C, Figure 18: Quadruple Word Program flowchart and pseudo code, for the flowchart for using the Quadruple Word Program command.

4.9 Clear Status Register command

The Clear Status Register command can be used to reset bits 1, 3, 4 and 5 in the Status Register to '0'. One bus write cycle is required to issue the Clear Status Register command.

The bits in the Status Register do not automatically return to '0' when a new Program or Erase command is issued. The error bits in the Status Register should be cleared before attempting a new Program or Erase command.

4.10 Program/Erase Suspend command

The Program/Erase Suspend command is used to pause a Program or Erase operation. One bus write cycle is required to issue the Program/Erase command and pause the Program/Erase controller.

During Program/Erase Suspend the Command Interface will accept the Program/Erase Resume, Read Array, Read Status Register, Read Electronic Signature and Read CFI Query commands. Additionally, if the suspend operation was Erase then the Program, Double Word Program, Quadruple Word Program, Block Lock, Block Lock-Down or Protection Program commands will also be accepted. The block being erased may be protected by issuing the Block Protect, Block Lock or Protection Program commands. When the Program/Erase Resume command is issued the operation will complete. Only the blocks not being erased may be read or programmed correctly.

During a Program/Erase Suspend, the device can be placed in a pseudo-standby mode by taking Chip Enable to V_{IH} . Program/Erase is aborted if Reset turns to V_{II} .

See Appendix C, Figure 19: Program Suspend & Resume flowchart and pseudo code, and Figure 21: Erase Suspend & Resume flowchart and pseudo code, for flowcharts for using the Program/Erase Suspend command.

4.11 Program/Erase Resume command

The Program/Erase Resume command can be used to restart the Program/Erase Controller after a Program/Erase Suspend operation has paused it. One Bus Write cycle is required to issue the command. Once the command is issued subsequent Bus Read operations read the Status Register.

See Appendix C, Figure 19: Program Suspend & Resume flowchart and pseudo code, and Figure 21: Erase Suspend & Resume flowchart and pseudo code, for flowcharts for using the Program/Erase Resume command.

4.12 Protection Register Program command

The Protection Register Program command is used to Program the 128 bit user One-Time-Programmable (OTP) segment of the Protection Register. The segment is programmed 16 bits at a time. When shipped all bits in the segment are set to '1'. The user can only program the bits to '0'.

Two write cycles are required to issue the Protection Register Program command.

- The first bus cycle sets up the Protection Register Program command.
- The second latches the Address and the Data to be written to the Protection Register and starts the Program/Erase Controller.

Read operations output the Status Register content after the programming has started.

The segment can be protected by programming bit 1 of the Protection Lock Register (see *Figure 5: Protection Register memory map*). Attempting to program a previously protected Protection Register will result in a Status Register error. The protection of the Protection Register is not reversible.

The Protection Register Program cannot be suspended.

4.13 Block Lock command

The Block Lock command is used to lock a block and prevent Program or Erase operations from changing the data in it. All blocks are locked at power-up or reset.

Two Bus Write cycles are required to issue the Block Lock command.

- The first bus cycle sets up the Block Lock command.
- The second Bus Write cycle latches the block address.

The lock status can be monitored for each block using the Read Electronic Signature command. *Table 10* shows the protection status after issuing a Block Lock command.

The Block Lock bits are volatile, once set they remain set until a hardware reset or power-down/power-up. They are cleared by a Blocks Unlock command. Refer to the section, Block Locking, for a detailed explanation.

4.14 Block Unlock command

The Block Unlock command is used to unlock a block, allowing the block to be programmed or erased. Two Bus Write cycles are required to issue the Block Unlock command.

- The first bus cycle sets up the Block Unlock command.
- The second Bus Write cycle latches the block address.

The lock status can be monitored for each block using the Read Electronic Signature command. *Table 10* shows the protection status after issuing a Block Unlock command. Refer to the section, Block Locking, for a detailed explanation.

4.15 Block Lock-Down command

A locked block cannot be Programmed or Erased, or have its protection status changed when \overline{WP} is low, V_{IL} . When \overline{WP} is high, V_{IH} , the Lock-Down function is disabled and the locked blocks can be individually unlocked by the Block Unlock command.

Two Bus Write cycles are required to issue the Block Lock-Down command.

- The first bus cycle sets up the Block Lock command.
- The second Bus Write cycle latches the block address.

The lock status can be monitored for each block using the Read Electronic Signature command. Locked-Down blocks revert to the locked (and not locked-down) state when the device is reset on power-down. *Table 10* shows the protection status after issuing a Block Lock-Down command. Refer to the section, Block Locking, for a detailed explanation.

Table 4. Commands⁽¹⁾

							Bus	Write	opera	tions							
Commands	Cycles	1:	1st Cycle			2nd Cycle			3rd Cycle			4th Cycle			5th Cycle		
	ပ်	Op.	Add	Data	Op.	Add	Data	Op.	Add	Data	Op.	Add	Data	Op.	Add	Data	
Read Memory Array	1+	Write	Х	FFh	Read	RA	RD										
Read Status Register	1+	Write	Х	70h	Read	Х	SRD										
Read Electronic Signature	1+	Write	Х	90h	Read	SA ⁽²⁾	IDh										
Read CFI Query	1+	Write	Х	98h	Read	QA	QD										
Erase	2	Write	Х	20h	Write	ВА	D0h										
Program	2	Write	Х	40h or 10h	Write	PA	PD										
Double Word Program ⁽³⁾	3	Write	Х	30h	Write	PA1	PD1	Write	PA2	PD2							
Quadruple Word Program ⁽⁴⁾	5	Write	х	56h	Write	PA1	PD1	Write	PA2	PD2	Write	PA3	PD3	Write	PA4	PD4	
Clear Status Register	1	Write	Х	50h													
Program/Erase Suspend	1	Write	Х	B0h													
Program/Erase Resume	1	Write	Х	D0h													
Block Lock	2	Write	Х	60h	Write	ВА	01h										
Block Unlock	2	Write	Х	60h	Write	ВА	D0h										
Block Lock- Down	2	Write	Х	60h	Write	ВА	2Fh										
Protection Register Program	2	Write	Х	C0h	Write	PRA	PRD										

X = Don't Care,RA=Read Address,RD=Read Data, SRD=Status Register Data, ID=Identifier (Manufacture and Device Code), QA=Query Address, QD=Query Data, BA=Block Address, PA=Program Address, PD=Program Data, PRA=Protection Register Address, PRD=Protection Register Data.

^{2.} The signature addresses are listed in Tables 5, 6 and 7.

^{3.} Program Addresses 1 and 2 must be consecutive Addresses differing only for A0.

^{4.} Program Addresses 1,2,3 and 4 must be consecutive Addresses differing only for A0 and A1.

Table 5. Read Electronic signature⁽¹⁾

Code	Device	Ē	G	w	Α0	A 1	A2-A7	A8-A21	DQ0-DQ7	DQ8- DQ15
Manufacture Code		V_{IL}	V _{IL}	V _{IH}	V _{IL}	V _{IL}	0	Don't Care	20h	00h
Device Code	M28W640 FCT	V_{IL}	V_{IL}	V _{IH}	V_{IH}	V _{IL}	0	Don't Care	48h	88h
	M28W640 FCB	V_{IL}	V _{IL}	V _{IH}	V _{IH}	V _{IL}	0	Don't Care	49h	88h

^{1.} RP = V_{IH}.

Table 6. Read Block Lock signature

Block Status	E	G	w	A0	A 1	A2-A7	A8-A11	A12-A21	DQ0	DQ1	DQ2- DQ15
Locked Block	V _{IL}	V _{IL}	V _{IH}	V _{IL}	V _{IH}	0	Don't Care	Block Address	1	0	00h
Unlocked Block	V _{IL}	V _{IL}	V _{IH}	V _{IL}	V _{IH}	0	Don't Care	Block Address	0	0	00h
Locked- Down Block	V _{IL}	V _{IL}	V _{IH}	V _{IL}	V _{IH}	0	Don't Care	Block Address	X ⁽¹⁾	1	00h

^{1.} A Locked-Down Block can be locked "DQ0 = 1" or unlocked "DQ0 = 0"; see Block Locking section.

Table 7. Read Protection Register and Lock Register

Word	Ē	G	w	A0-A7	A8-A21	DQ0	DQ1	DQ2	DQ3- DQ7	DQ8- DQ15
Lock	V_{IL}	V _{IL}	V _{IH}	80h	Don't Care	0	OTP Prot. data	0	00h	00h
Unique ID 0	V _{IL}	V _{IL}	V _{IH}	81h	Don't Care	ID data	ID data	ID data	ID data	ID data
Unique ID 1	V _{IL}	V _{IL}	V _{IH}	82h	Don't Care	ID data	ID data	ID data	ID data	ID data
Unique ID 2	V _{IL}	V _{IL}	V _{IH}	83h	Don't Care	ID data ID data ID		ID data	ID data	
Unique ID 3	V _{IL}	V _{IL}	V _{IH}	84h	Don't Care	ID data	ID data ID data ID data		ID data	ID data
OTP 0	V _{IL}	V _{IL}	V _{IH}	85h	Don't Care	OTP data	OTP data OTP data		OTP data	OTP data
OTP 1	V _{IL}	V _{IL}	V _{IH}	86h	Don't Care	OTP data	OTP data	P data OTP data		OTP data
OTP 2	V _{IL}	V _{IL}	V _{IH}	87h	Don't Care	OTP data	OTP data	OTP data	OTP data	OTP data
OTP 3	V _{IL}	V _{IL}	V _{IH}	88h	Don't Care	OTP data	OTP data	OTP data	OTP data	OTP data
OTP 4	V _{IL}	V _{IL}	V _{IH}	89h	Don't Care	OTP data	OTP data	OTP data	OTP data	OTP data
OTP 5	V _{IL}	V _{IL}	V _{IH}	8Ah	Don't Care	OTP data OTP data OTP data		OTP data	OTP data	
OTP 6	V _{IL}	V _{IL}	V _{IH}	8Bh	Don't Care	OTP data	OTP data OTP data C		OTP data	OTP data
OTP 7	V _{IL}	V _{IL}	V _{IH}	8Ch	Don't Care	OTP data	OTP data	OTP data	OTP data	OTP data

 Table 8.
 Program, Erase Times and Program/Erase endurance cycles

Parameter	Test Conditions	M28W64	M28W640FCT, M28W640FCB			
Parameter	rest Conditions	Min	Тур	Max	Offic	
Word Program	$V_{PP} = V_{DD}$		10	200	μs	
Double Word Program	V _{PP} = 12V ±5%		10	200	μs	
Quadruple Word Program	V _{PP} = 12V ±5%		10	200	μs	
Main Block Program	$V_{PP} = 12V \pm 5\%$		0.16/0.08 (1)	5	s	
Wall Block Flogram	$V_{PP} = V_{DD}$		0.32	Max Uni 200 μs 200 μs 200 μs 5 s 5 s 4 s 10 s	s	
Parameter Block Program	V _{PP} = 12V ±5%		0.02/0.01 (1)	4	s	
Farameter block Frogram	$V_{PP} = V_{DD}$		0.04	Max 200 μs 200 μs 200 μs 8 (1) 5 s 5 s 1 (1) 4 s 10 s 10 s 10 s	s	
Main Block Erase	V _{PP} = 12V ±5%		1	10	s	
Wall Block Elase	$V_{PP} = V_{DD}$		1	10	s	
Parameter Block Erase	$V_{PP} = 12V \pm 5\%$		0.4	10	s	
Farameter block Erase	$V_{PP} = V_{DD}$		0.4	10	s	
Program/Erase Cycles (per Block)		100,000			cycles	

^{1.} Typical time to program a Main or Parameter Block using the Double Word Program and the Quadruple Word Program commands respectively.

5 Block locking

The M28W640FCT and M28W640FCB feature an instant, individual block locking scheme that allows any block to be locked or unlocked with no latency. This locking scheme has three levels of protection.

- Lock/Unlock this first level allows software-only control of block locking.
- Lock-Down this second level requires hardware interaction before locking can be changed.
- V_{PP} ≤V_{PPLK} the third level offers a complete hardware protection against program and erase on all blocks.

The protection status of each block can be set to Locked, Unlocked, and Lock-Down. *Table 10*, defines all of the possible protection states (WP, DQ1, DQ0), and *Appendix C*, *Figure 22*, shows a flowchart for the locking operations.

5.1 Reading a Block's Lock status

The lock status of every block can be read in the Read Electronic Signature mode of the device. To enter this mode write 90h to the device. Subsequent reads at the address specified in *Table 6*, will output the protection status of that block. The lock status is represented by DQ0 and DQ1. DQ0 indicates the Block Lock/Unlock status and is set by the Lock command and cleared by the Unlock command. It is also automatically set when entering Lock-Down. DQ1 indicates the Lock-Down status and is set by the Lock-Down command. It cannot be cleared by software, only by a hardware reset or power-down.

The following sections explain the operation of the locking system.

5.2 Locked state

The default status of all blocks on power-up or after a hardware reset is Locked (states (0,0,1) or (1,0,1)). Locked blocks are fully protected from any program or erase. Any program or erase operations attempted on a locked block will return an error in the Status Register. The Status of a Locked block can be changed to Unlocked or Lock-Down using the appropriate software commands. An Unlocked block can be Locked by issuing the Lock command.

5.3 Unlocked state

Unlocked blocks (states (0,0,0), (1,0,0) (1,1,0)), can be programmed or erased. All unlocked blocks return to the Locked state after a hardware reset or when the device is powered-down. The status of an unlocked block can be changed to Locked or Locked-Down using the appropriate software commands. A locked block can be unlocked by issuing the Unlock command.

5.4 Lock-Down state

Blocks that are Locked-Down (state (0,1,x))are protected from program and erase operations (as for Locked blocks) but their protection status cannot be changed using software commands alone. A Locked or Unlocked block can be Locked-Down by issuing the Lock-Down command. Locked-Down blocks revert to the Locked state when the device is reset or powered-down.

The Lock-Down function is dependent on the \overline{WP} input pin. When \overline{WP} =0 (V_{IL}), the blocks in the Lock-Down state (0,1,x) are protected from program, erase and protection status changes. When \overline{WP} =1 (V_{IH}) the Lock-Down function is disabled (1,1,1) and Locked-Down blocks can be individually unlocked to the (1,1,0) state by issuing the software command, where they can be erased and programmed. These blocks can then be relocked (1,1,1) and unlocked (1,1,0) as desired while \overline{WP} remains high. When \overline{WP} is low , blocks that were previously Locked-Down return to the Lock-Down state (0,1,x) regardless of any changes made while \overline{WP} was high. Device reset or power-down resets all blocks , including those in Lock-Down, to the Locked state.

5.5 Locking Operations during Erase Suspend

Changes to block lock status can be performed during an erase suspend by using the standard locking command sequences to unlock, lock or lock-down a block. This is useful in the case when another block needs to be updated while an erase operation is in progress.

To change block locking during an erase operation, first write the Erase Suspend command, then check the status register until it indicates that the erase operation has been suspended. Next write the desired Lock command sequence to a block and the lock status will be changed. After completing any desired lock, read, or program operations, resume the erase operation with the Erase Resume command.

If a block is locked or locked-down during an erase suspend of the same block, the locking status bits will be changed immediately, but when the erase is resumed, the erase operation will complete.

Locking operations cannot be performed during a program suspend. Refer to *Appendix D*, Command Interface and Program/Erase Controller State, for detailed information on which commands are valid during erase suspend.

Table 9. Block Lock status

Item	Address	Data
Block Lock Configuration		LOCK
Block is Unlocked	vv003	DQ0=0
Block is Locked	LOCK	DQ0=1
Block is Locked-Down		DQ1=1

Table 10. Protection status

	ection Status ⁽¹⁾ Q1, DQ0)	Next Protection Status ⁽¹⁾ (WP, DQ1, DQ0)					
Current State	Program/Erase Allowed	After Block Lock Command	After Block Unlock Command	After Block Lock-Down Command	After WP transition		
1,0,0	yes	1,0,1	1,0,0	1,1,1	0,0,0		
1,0,1 ⁽²⁾	no	1,0,1	1,0,0	1,1,1	0,0,1		
1,1,0	yes	1,1,1	1,1,0	1,1,1	0,1,1		
1,1,1	no	1,1,1	1,1,0	1,1,1	0,1,1		
0,0,0	yes	0,0,1	0,0,0	0,1,1	1,0,0		
0,0,1 ⁽²⁾	no	0,0,1	0,0,0	0,1,1	1,0,1		
0,1,1	no	0,1,1	0,1,1	0,1,1	1,1,1 or 1,1,0 ⁽³⁾		

^{1.} The lock status is defined by the write protect pin and by DQ1 ('1' for a locked-down block) and DQ0 ('1' for a locked block) as read in the Read Electronic Signature command with $A1 = V_{IH}$ and $A0 = V_{IL}$.

^{2.} All blocks are locked at power-up, so the default configuration is 001 or 101 according to $\overline{\text{WP}}$ status.

^{3.} A $\overline{\text{WP}}$ transition to V_{IH} on a locked block will restore the previous DQ0 value, giving a 111 or 110.

6 Status Register

The Status Register provides information on the current or previous Program or Erase operation. The various bits convey information and errors on the operation. To read the Status register the Read Status Register command can be issued, refer to Read Status Register Command section. To output the contents, the Status Register is latched on the falling edge of the Chip Enable or Output Enable signals, and can be read until Chip Enable or Output Enable must be toggled to update the latched data.

Bus Read operations from any address always read the Status Register during Program and Erase operations.

The bits in the Status Register are summarized in *Table 11: Status Register bits*. Refer to *Table 11* in conjunction with the following text descriptions.

6.1 Program/Erase Controller status (bit 7)

The Program/Erase Controller Status bit indicates whether the Program/Erase Controller is active or inactive. When the Program/Erase Controller Status bit is Low (set to '0'), the Program/Erase Controller is active; when the bit is High (set to '1'), the Program/Erase Controller is inactive, and the device is ready to process a new command.

The Program/Erase Controller Status is Low immediately after a Program/Erase Suspend command is issued until the Program/Erase Controller pauses. After the Program/Erase Controller pauses the bit is High .

During Program, Erase, operations the Program/Erase Controller Status bit can be polled to find the end of the operation. Other bits in the Status Register should not be tested until the Program/Erase Controller completes the operation and the bit is High.

After the Program/Erase Controller completes its operation the Erase Status, Program Status, V_{PP} Status and Block Lock Status bits should be tested for errors.

6.2 Erase Suspend status (bit 6)

The Erase Suspend Status bit indicates that an Erase operation has been suspended or is going to be suspended. When the Erase Suspend Status bit is High (set to '1'), a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command.

The Erase Suspend Status should only be considered valid when the Program/Erase Controller Status bit is High (Program/Erase Controller inactive). Bit 7 is set within 30µs of the Program/Erase Suspend command being issued therefore the memory may still complete the operation rather than entering the Suspend mode.

When a Program/Erase Resume command is issued the Erase Suspend Status bit returns Low.

6.3 Erase status (bit 5)

The Erase Status bit can be used to identify if the memory has failed to verify that the block has erased correctly. When the Erase Status bit is High (set to '1'), the Program/Erase Controller has applied the maximum number of pulses to the block and still failed to verify that the block has erased correctly. The Erase Status bit should be read once the Program/Erase Controller Status bit is High (Program/Erase Controller inactive).

Once set High, the Erase Status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new Program or Erase command is issued, otherwise the new command will appear to fail.

6.4 Program status (bit 4)

The Program Status bit is used to identify a Program failure. When the Program Status bit is High (set to '1'), the Program/Erase Controller has applied the maximum number of pulses to the byte and still failed to verify that it has programmed correctly. The Program Status bit should be read once the Program/Erase Controller Status bit is High (Program/Erase Controller inactive).

Once set High, the Program Status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new command is issued, otherwise the new command will appear to fail.

6.5 V_{PP} status (bit 3)

The V_{PP} Status bit can be used to identify an invalid voltage on the V_{PP} pin during Program and Erase operations. The V_{PP} pin is only sampled at the beginning of a Program or Erase operation. Indeterminate results can occur if V_{PP} becomes invalid during an operation.

When the V_{PP} Status bit is Low (set to '0'), the voltage on the V_{PP} pin was sampled at a valid voltage; when the V_{PP} Status bit is High (set to '1'), the V_{PP} pin has a voltage that is below the V_{PP} Lockout Voltage, V_{PPLK} , the memory is protected and Program and Erase operations cannot be performed.

Once set High, the V_{PP} Status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new Program or Erase command is issued, otherwise the new command will appear to fail.

6.6 Program Suspend status (bit 2)

The Program Suspend Status bit indicates that a Program operation has been suspended. When the Program Suspend Status bit is High (set to '1'), a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command. The Program Suspend Status should only be considered valid when the Program/Erase Controller Status bit is High (Program/Erase Controller inactive). Bit 2 is set within 5µs of the Program/Erase Suspend command being issued therefore the memory may still complete the operation rather than entering the Suspend mode.

When a Program/Erase Resume command is issued the Program Suspend Status bit returns Low.

6.7 Block Protection status (bit 1)

The Block Protection Status bit can be used to identify if a Program or Erase operation has tried to modify the contents of a locked block.

When the Block Protection Status bit is High (set to '1'), a Program or Erase operation has been attempted on a locked block.

Once set High, the Block Protection Status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new command is issued, otherwise the new command will appear to fail.

6.8 Reserved (bit 0)

Bit 0 of the Status Register is reserved. Its value must be masked.

Note: Refer to Appendix C: Flowcharts and pseudo codes, for using the Status Register.

Table 11. Status Register bits⁽¹⁾

Bit	Name	Logic Level	Definition				
7	P/E.C. Status	'1'	Ready				
/	P/E.C. Status	'0'	Busy				
6	Franc Cuanand Status	'1'	Suspended				
0	Erase Suspend Status	'0'	In progress or Completed				
5	Erase Status	'1'	Erase Error				
5	Erase Status	'0'	Erase Success				
4	Program Status	'1'	Program Error				
4	Program Status	'0'	Program Success				
3	V. Ctatua	'1'	V _{PP} Invalid, Abort				
3	V _{PP} Status	'0'	V _{PP} OK				
2	Brogram Cuanand Status	'1'	Suspended				
2	Program Suspend Status	'0'	In Progress or Completed				
1	Block Protection Status	'1'	Program/Erase on protected Block, Abort				
		'0'	No operation to protected blocks				
0	Reserved		·				

^{1.} Logic level '1' is High, '0' is Low.

7 Maximum rating

Stressing the device above the rating listed in the Absolute Maximum Ratings table may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the Operating sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability. Refer also to the Numonyx SURE Program and other relevant quality documents.

Table 12. Absolute maximum ratings

Symbol	Parameter	Valu	ie	Unit	
Symbol Parameter		Min	Max	Oilit	
T _A	Ambient Operating Temperature (1)	- 40	85	°C	
T _{BIAS}	Temperature Under Bias	- 40	125	°C	
T _{STG}	Storage Temperature	– 55	155	ů	
V _{IO}	Input or Output voltage	- 0.6	V _{DDQ} +0.6	٧	
V_{DD} , V_{DDQ}	Supply voltage	- 0.6	4.1	V	
V _{PP}	Program voltage	- 0.6	13	V	

^{1.} Depends on range.


8 DC and AC parameters

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics Tables that follow, are derived from tests performed under the Measurement Conditions summarized in *Table 13: Operating and AC measurement conditions*. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

Table 13. Operating and AC measurement conditions

			M2	8W640I	-CT, M2	8W640F	СВ							
Parameter	70 85		5	90		10		11						
	Min	Max	Min	Max	Min	Max	Min	Max	Units					
V _{DD} supply voltage	2.7	3.6	2.7	3.6	2.7	3.6	2.7	3.6	V					
V_{DDQ} supply voltage $(V_{DDQ} \le V_{DD})$	2.7	3.6	2.7	3.6	2.7	3.6	1.65	3.6	V					
Ambient Operating Temperature	-40	85	-40	85	-40	85	-40	85	°C					
Load capacitance (C _L)	5	0	5	0	5	0	50		pF					
Input Rise and Fall Times		5		5		5		5	ns					
Input pulse voltages	0 to \	V _{DDQ}	0 to \	V _{DDQ}	0 to \	V _{DDQ}	0 to \	V _{DDQ}	V					
Input and Output Timing Ref. voltages	V _{DDQ} /2		V _{DE}	_{OQ} /2	V _{DDQ} /2		V _{DDQ} /2		V					

Figure 6. AC measurement I/O waveform



 V_{DDQ} V_{DQQ} V_{Q

Figure 7. AC measurement load circuit

Table 14. Capacitance⁽¹⁾

Symbol	Parameter	Test Condition	Min	Max	Unit
C _{IN}	Input capacitance	$V_{IN} = 0V$		6	pF
C _{OUT}	Output capacitance	$V_{OUT} = 0V$		12	pF

^{1.} Sampled only, not 100% tested.

Table 15. DC characteristics

Symbol	Parameter	Test condition	Min	Тур	Max	Unit
ILI	Input Leakage Current	0V≤V _{IN} ≤V _{DDQ}			±1	μΑ
I _{LO}	Output Leakage Current	0V≤V _{OUT} ≰V _{DDQ}			±10	μΑ
I _{DD}	Supply Current (Read)	$\overline{E} = V_{SS}, \overline{G} = V_{IH},$ $f = 5MHz$		9	18	mA
I _{DD1}	Supply Current (Stand-by or Automatic Stand-by)	$\overline{E} = V_{DDQ} \pm 0.2V,$ $\overline{RP} = V_{DDQ} \pm 0.2V$		15	50	μΑ
I_{DD2}	Supply Current (Reset)	$\overline{RP} = V_{SS} \pm 0.2V$		15	50	μΑ
laa.	Supply Current (Program)	Program in progress $V_{PP} = 12V \pm 5\%$		5	10	mA
I _{DD3}	Cupply Current (Frogram)	Program in progress $V_{PP} = V_{DD}$		10	20	mA
I _{DD4}	Supply Current (Erase)	Erase in progress V_{PP} = 12V ± 5%		5	20	mA
4טטי	oupply outlett (Liase)	Erase in progress $V_{PP} = V_{DD}$		10	20	mA
I _{DD5}	Supply Current (Program/Erase Suspend)	$\overline{E} = V_{DDQ} \pm 0.2V$, Erase suspended		15	50	μΑ
I _{PP}	Program Current (Read or Stand-by)	V _{PP} > V _{DD}			400	μΑ
I _{PP1}	Program Current (Read or Stand-by)	V _{PP} ≤V _{DD}		1	5	μΑ
I _{PP2}	Program Current (Reset)	$\overline{RP} = V_{SS} \pm 0.2V$		1	5	μΑ
I _{PP3}	Program Current (Program)	Program in progress $V_{PP} = 12V \pm 5\%$		1	10	mA
'РРЗ	1 Togram Guneric (1 Togram)	Program in progress $V_{PP} = V_{DD}$		1	5	μΑ
_	Program Current (Erase)	Erase in progress $V_{PP} = 12V \pm 5\%$		3	10	mA
I _{PP4}	Program Current (Erase)	Erase in progress V _{PP} = V _{DD}		1	5	μΑ
V	Input Low voltage		-0.5		0.4	٧
V_{IL}	Input Low voltage	$V_{DDQ} \ge 2.7V$	-0.5		0.8	٧
V _{IH}	Input High voltage		V _{DDQ} -0.4		V _{DDQ} +0.4	٧
* IH	Inpat High voltage	$V_{DDQ} \ge 2.7V$	$0.7\mathrm{V}_\mathrm{DDQ}$		V _{DDQ} +0.4	V
V _{OL}	Output Low voltage	$\begin{split} I_{OL} &= 100 \mu A, \\ V_{DD} &= V_{DD} \ min, \\ V_{DDQ} &= V_{DDQ} \ min \end{split}$			0.1	٧
V _{OH}	Output High voltage	$\begin{split} I_{OH} &= -100 \mu A, \\ V_{DD} &= V_{DD} \ min, \\ V_{DDQ} &= V_{DDQ} \ min \end{split}$	V _{DDQ} -0.1			٧

Table 15. DC characteristics (continued)

Symbol	Parameter	Test condition	Min	Тур	Max	Unit
V _{PP1}	Program voltage (Program or Erase operations)		1.65		3.6	V
V _{PPH}	Program voltage (Program or Erase operations)		11.4		12.6	V
V _{PPLK}	Program voltage (Program and Erase lock-out)				1	V
V _{LKO}	V _{DD} supply voltage (Program and Erase lock-out)				2	V

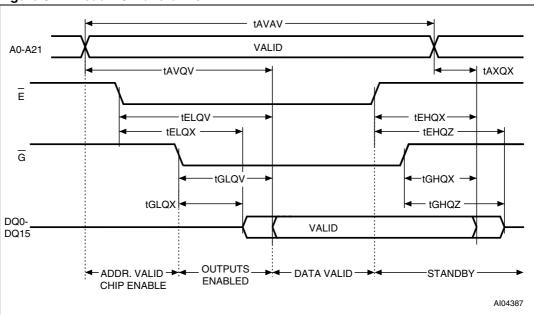


Figure 8. Read AC waveforms

Table 16. Read AC characteristics

Cumbal	Alt	Doromotor	Parameter		640FCT,	M28W6	40FCB	Unit
Symbol	AIL	Parameter		70	85	90	10	Offic
t _{AVAV}	t _{RC}	Address Valid to Next Address Valid	Min	70	85	90	100	ns
t _{AVQV}	t _{ACC}	Address Valid to Output Valid	Max	70	85	90	100	ns
t _{AXQX} (1)	t _{OH}	Address Transition to Output Transition	Min	0	0	0	0	ns
t _{EHQX} (1)	t _{OH}	Chip Enable High to Output Transition	Min	0	0	0	0	ns
t _{EHQZ} (1)	t _{HZ}	Chip Enable High to Output Hi-Z	Max	20	20	25	25	ns
t _{ELQV} (2)	t _{CE}	Chip Enable Low to Output Valid	Max	70	85	90	100	ns
t _{ELQX} (1)	t _{LZ}	Chip Enable Low to Output Transition	Min	0	0	0	0	ns
t _{GHQX}	t _{OH}	Output Enable High to Output Transition	Min	0	0	0	0	ns
t _{GHQZ} (1)	t _{DF}	Output Enable High to Output Hi-Z	Max	20	20	25	25	ns
t _{GLQV} (2)	t _{OE}	Output Enable Low to Output Valid	Max	20	20	30	35	ns
t _{GLQX} (1)	t _{OLZ}	Output Enable Low to Output Transition	Min	0	0	0	0	ns

^{1.} Sampled only, not 100% tested.

^{2.} \overline{G} may be delayed by up to t_{ELQV} - t_{GLQV} after the falling edge of \overline{E} without increasing t_{ELQV}

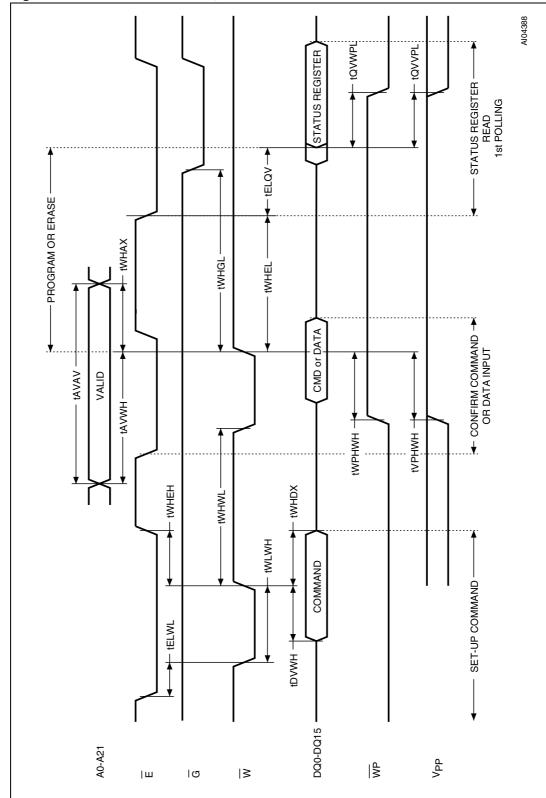


Figure 9. Write AC waveforms, Write enable controlled

Table 17. Write AC characteristics, Write enable controlled

Symbol	Alt	Parameter		M28W640FCT, M28W640FCB				Unit
				70	85	90	10	
t _{AVAV}	t_{WC}	Write Cycle Time	Min	70	85	90	100	ns
t _{AVWH}	t _{AS}	Address Valid to Write Enable High	Min	45	45	50	50	ns
t _{DVWH}	t _{DS}	Data Valid to Write Enable High	Min	45	45	50	50	ns
t _{ELWL}	t _{CS}	Chip Enable Low to Write Enable Low	Min	0	0	0	0	ns
t _{ELQV}		Chip Enable Low to Output Valid	Min	70	85	90	100	ns
t _{QVVPL} ⁽¹⁾		Output Valid to V _{PP} Low Min		0	0	0	0	ns
t _{QVWPL}		Output Valid to Write Protect Low	Output Valid to Write Protect Low Min		0	0	0	ns
t _{VPHWH} (1)	t _{VPS}	V _{PP} High to Write Enable High	Min	200	200	200	200	ns
t _{WHAX}	t _{AH}	Write Enable High to Address Transition	Min	0	0	0	0	ns
t _{WHDX}	t _{DH}	Write Enable High to Data Transition	Min	0	0	0	0	ns
t _{WHEH}	t _{CH}	Write Enable High to Chip Enable High	Min	0	0	0	0	ns
t _{WHEL}		Write Enable High to Chip Enable Low	Min	25	25	30	30	ns
t _{WHGL}		Write Enable High to Output Enable Low	Min	20	20	30	30	ns
t _{WHWL}	t _{WP}	Write Enable High to Write Enable Low		25	25	30	30	ns
t _{WLWH}	t _{WP}	Write Enable Low to Write Enable High		45	45	50	50	ns
t _{WPHWH}		Write Protect High to Write Enable High	Min	45	45	50	50	ns

^{1.} Sampled only, not 100% tested.

^{2.} Applicable if V_{PP} is seen as a logic input ($V_{PP} < 3.6 V$).

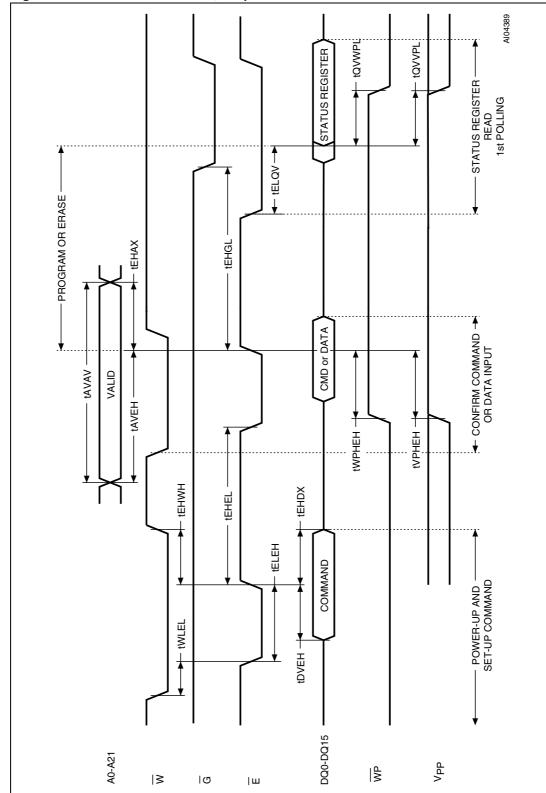


Figure 10. Write AC waveforms, Chip enable controlled

Numonyx 41/77

Table 18. Write AC characteristics, Chip enable controlled

	maked Alk Benevitation			M28W	M28W640FCT, M28W640FCB			
Symbol	Alt	Parameter —		70	85	90	10	Unit
t _{AVAV}	t _{WC}	Write Cycle Time	Min	70	85	90	100	ns
t _{AVEH}	t _{AS}	Address Valid to Chip Enable High	Min	45	45	50	50	ns
t _{DVEH}	t _{DS}	Data Valid to Chip Enable High	Min	45	45	50	50	ns
t _{EHAX}	t _{AH}	Chip Enable High to Address Transition	Min	0	0	0	0	ns
t _{EHDX}	t _{DH}	Chip Enable High to Data Transition	Min	0	0	0	0	ns
t _{EHEL}	t _{CPH}	Chip Enable High to Chip Enable Low	Min	25	25	30	30	ns
t _{EHGL}		Chip Enable High to Output Enable Low	Min	25	25	30	30	ns
t _{EHWH}	t _{WH}	Chip Enable High to Write Enable High	Min	0	0	0	0	ns
t _{ELEH}	t _{CP}	Chip Enable Low to Chip Enable High	Min	45	45	50	50	ns
t _{ELQV}		Chip Enable Low to Output Valid	Min	70	85	90	100	ns
toyypl (1)(2)		Output Valid to V _{PP} Low	Min	0	0	0	0	ns
t _{QVWPL}		Data Valid to Write Protect Low	Min	0	0	0	0	ns
t _{VPHEH} (1)	t _{VPS}	V _{PP} High to Chip Enable High		200	200	200	200	ns
t _{WLEL}	t _{CS}	Write Enable Low to Chip Enable Low		0	0	0	0	ns
t _{WPHEH}		Write Protect High to Chip Enable High	Min	45	45	50	50	ns

^{1.} Sampled only, not 100% tested.

^{2.} Applicable if V_{PP} is seen as a logic input ($V_{PP} < 3.6 V$).

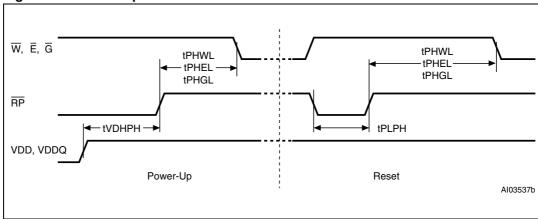


Figure 11. Power-Up and Reset AC waveforms

Table 19. Power-Up and Reset AC characteristics

Symbol	Parameter	Test Condition		M28W640FCT, M28W640FCB				Unit
				70	85	90	10	
t _{PHWL}	Reset High to Write Enable Low, Chip Enable Low, Output Enable	During Program and Erase	Min	50	50	50	50	μs
t _{PHGL}	Low	others	Min	30	30	30	30	ns
t _{PLPH} ⁽¹⁾⁽²⁾	Reset Low to Reset High		Min	100	100	100	100	ns
t _{VDHPH} (3)	Supply Voltages High to Reset High		Min	50	50	50	50	μs

^{1.} The device Reset is possible but not guaranteed if t_{PLPH} < 100ns

^{2.} Sampled only, not 100% tested.

^{3.} It is important to assert $\overline{\text{RP}}$ in order to allow proper CPU initialization during power up or reset.

9 Package mechanical

DIE DIE CP TSOP-G

Figure 12. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package outline

1. Drawing is not to scale.

Table 20. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package mechanical data

mechanical data						
Symbol		millimeters			inches	
Syllibol	Тур	Min	Max	Тур	Min	Max
Α			1.200			0.0472
A1	0.100	0.050	0.150	0.0039	0.0020	0.0059
A2	1.000	0.950	1.050	0.0394	0.0374	0.0413
В	0.220	0.170	0.270	0.0087	0.0067	0.0106
С		0.100	0.210		0.0039	0.0083
СР			0.100			0.0039
D1	12.000	11.900	12.100	0.4724	0.4685	0.4764
E	20.000	19.800	20.200	0.7874	0.7795	0.7953
E1	18.400	18.300	18.500	0.7244	0.7205	0.7283
е	0.500	-	-	0.0197	-	_
L	0.600	0.500	0.700	0.0236	0.0197	0.0276
L1	0.800			0.0315		
α	3°	0°	5°	3°	0°	5°

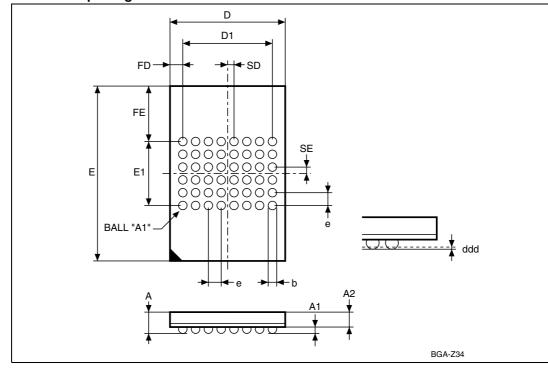


Figure 13. TFBGA48 6.39x10.5mm - 8x6 ball array, 0.75mm pitch, bottom view package outline

1. Drawing is not to scale.

Table 21. TFBGA48 6.39x10.5mm - 8x6 ball array, 0.75mm pitch, package mechanical data

0		millimeters			inches	
Symbol	Тур	Min	Max	Тур	Min	Max
Α			1.200			0.0472
A1		0.260			0.0102	
A2			1.000			0.0394
b	0.400	0.350	0.450	0.0157	0.0138	0.0177
D	6.390	6.290	6.490	0.2516	0.2476	0.2555
D1	5.250	-	-	0.2067	-	_
ddd			0.100			0.0039
Е	10.500	10.400	10.600	0.4134	0.4094	0.4173
E1	3.750	-	-	0.1476	-	_
е	0.750	-	_	0.0295	-	_
FD	0.570	-	_	0.0224	-	_
FE	3.375	-	-	0.1329	-	_
SD	0.375	-	-	0.0148	-	_
SE	0.375	_	_	0.0148	_	_

N numonyx

46/77

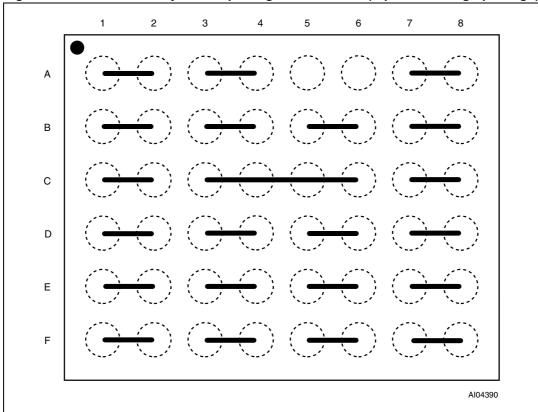


Figure 14. TFBGA48 daisy chain - package connections (top view through package)


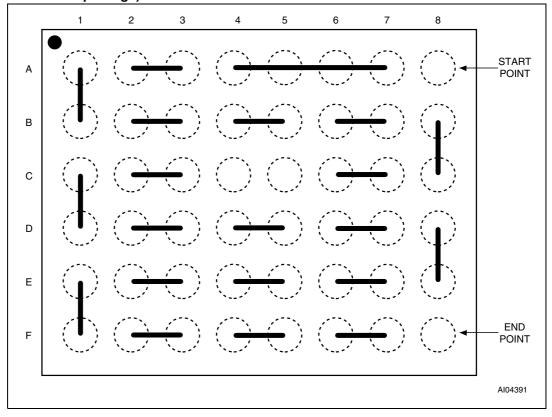


Figure 15. TFBGA48 daisy chain - PCB connections proposal (top view through package)

Numonyx 47/77

10 Part numbering


Table 22. Ordering information scheme

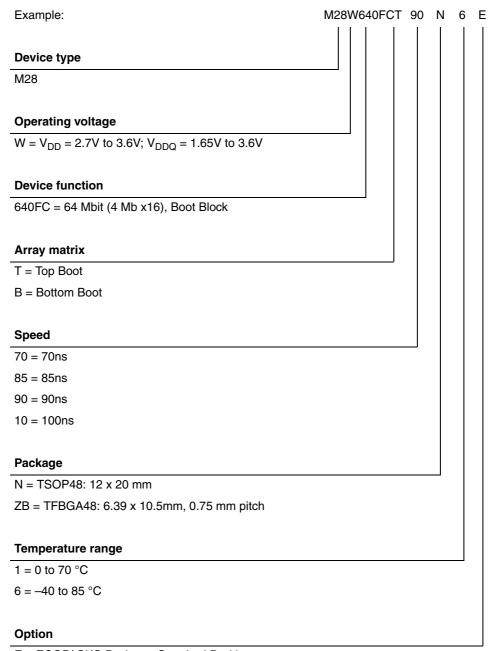

E = ECOPACK® Package, Standard Packing

F = ECOPACK® Package, Tape & Reel Packing

Table 23. Daisy Chain ordering scheme

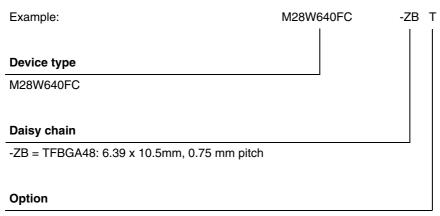

E = ECOPACK® Package, Standard Packing

F = ECOPACK® Package, Tape & Reel Packing, 24mm

 Devices are shipped from the factory with the memory content bits erased to '1'. For a list of available options (Speed, Package, etc.) or for further information on any aspect of this device, please contact the Numonyx Sales Office nearest to you.

Appendix A Block address tables

Table 24. Top Boot Block Addresses, M28W640FCT

#	Size (KWord)	Address range
0	4	3FF000-3FFFFF
1	4	3FE000-3FEFFF
2	4	3FD000-3FDFFF
3	4	3FC000-3FCFFF
4	4	3FB000-3FBFFF
5	4	3FA000-3FAFFF
6	4	3F9000-3F9FFF
7	4	3F8000-3F8FFF
8	32	3F0000-3F7FFF
9	32	3E8000-3EFFFF
10	32	3E0000-3E7FF
11	32	3D8000-3DFFFF
12	32	3D0000-3D7FFF
13	32	3C8000-3CFFFF
14	32	3C0000-3C7FFF
15	32	3B8000-3BFFFF
16	32	3B0000-3B7FFF
17	32	3A8000-3AFFFF
18	32	3A0000-3A7FFF
19	32	398000-39FFFF
20	32	390000-397FFF
21	32	388000-38FFFF
22	32	380000-387FFF
23	32	378000-37FFFF
24	32	370000-377FFF
25	32	368000-36FFFF
26	32	360000-367FFF
27	32	358000-35FFFF
28	32	350000-357FFF
29	32	348000-34FFFF
30	32	340000-347FFF
31	32	338000-33FFFF

Table 24. Top Boot Block Addresses, M28W640FCT (continued)

#	Size (KWord)	Address range
32	32	330000-337FFF
33	32	328000-32FFFF
34	32	320000-327FFF
35	32	318000-31FFFF
36	32	310000-317FFF
37	32	308000-30FFFF
38	32	300000-307FFF
39	32	2F8000-2FFFFF
40	32	2F0000-2F7FFF
41	32	2E8000-2EFFFF
42	32	2E0000-2E7FFF
43	32	2D8000-2DFFFF
44	32	2D0000-2D7FFF
45	32	2C8000-2CFFFF
46	32	2C0000-2C7FFF
47	32	2B8000-2BFFFF
48	32	2B0000-2B7FFF
49	32	2A8000-2AFFFF
50	32	2A0000-2A7FFF
51	32	298000-29FFFF
52	32	290000-297FFF
53	32	288000-28FFFF
54	32	280000-287FFF
55	32	278000-27FFFF
56	32	270000-277FFF
57	32	268000-26FFFF
58	32	260000-267FFF
59	32	258000-25FFFF
60	32	250000-257FFF
61	32	248000-24FFFF
62	32	240000-247FFF
63	32	238000-23FFFF
64	32	230000-237FFF
65	32	228000-22FFFF
66	32	220000-227FFF

Table 24. Top Boot Block Addresses, M28W640FCT (continued)

#	Size (KWord)	Address range
67	32	218000-21FFFF
68	32	210000-217FFF
69	32	208000-20FFFF
70	32	200000-207FFF
71	32	1F8000-1FFFFF
72	32	1F0000-1F7FFF
73	32	1E8000-1EFFFF
74	32	1E0000-1E7FFF
75	32	1D8000-1DFFFF
76	32	1D0000-1D7FFF
77	32	1C8000-1CFFFF
78	32	1C0000-1C7FFF
79	32	1B8000-1BFFFF
80	32	1B0000-1B7FFF
81	32	1A8000-1AFFFF
82	32	1A0000-1A7FFF
83	32	198000-19FFFF
84	32	190000-197FFF
85	32	188000-18FFFF
86	32	180000-187FFF
87	32	178000-17FFFF
88	32	170000-177FFF
89	32	168000-16FFFF
90	32	160000-167FFF
91	32	158000-15FFFF
92	32	150000-157FFF
93	32	148000-14FFFF
94	32	140000-147FFF
95	32	138000-13FFFF
96	32	130000-137FFF
97	32	128000-12FFFF
98	32	120000-127FFF
99	32	118000-11FFFF
100	32	110000-117FFF
101	32	108000-10FFFF

Table 24. Top Boot Block Addresses, M28W640FCT (continued)

#	Size (KWord)	Address range
102	32	100000-107FFF
103	32	0F8000-0FFFFF
104	32	0F0000-0F7FFF
105	32	0E8000-0EFFFF
106	32	0E0000-0E7FFF
107	32	0D8000-0DFFFF
108	32	0D0000-0D7FFF
109	32	0C8000-0CFFFF
110	32	0C0000-0C7FFF
111	32	0B8000-0BFFFF
112	32	0B0000-0B7FFF
113	32	0A8000-0AFFFF
114	32	0A0000-0A7FFF
115	32	098000-09FFFF
116	32	090000-097FFF
117	32	088000-08FFFF
118	32	080000-087FFF
119	32	078000-07FFFF
120	32	070000-077FFF
121	32	068000-06FFFF
122	32	060000-067FFF
123	32	058000-05FFFF
124	32	050000-057FFF
125	32	048000-04FFFF
126	32	040000-047FFF
127	32	038000-03FFFF
128	32	030000-037FFF
129	32	028000-02FFFF
130	32	020000-027FFF
131	32	018000-01FFFF
132	32	010000-017FFF
133	32	008000-00FFFF
134	32	000000-007FFF

Table 25. Bottom Boot Block Addresses, M28W640FCB

#	Size (KWord)	Address Range		
134	32	3F8000-3FFFFF		
133	32	3F0000-3F7FFF		
132	32	3E8000-3EFFFF		
131	32	3E0000-3E7FFF		
130	32	3D8000-3DFFFF		
129	32	3D0000-3D7FFF		
128	32	3C8000-3CFFFF		
127	32	3C0000-3C7FFF		
126	32	3B8000-3BFFFF		
125	32	3B0000-3B7FFF		
124	32	3A8000-3AFFFF		
123	32	3A0000-3A7FFF		
122	32	398000-39FFFF		
121	32	390000-397FFF		
120	32	388000-38FFFF		
119	32	380000-387FFF		
118	32	378000-37FFFF		
117	32	370000-377FFF		
116	32	368000-36FFFF		
115	32	360000-367FFF		
114	32	358000-35FFFF		
113	32	350000-357FFF		
112	32	348000-34FFFF		
111	32	340000-347FFF		
110	32	338000-33FFFF		
109	32	330000-337FFF		
108	32	328000-32FFFF		
107	32	320000-327FFF		
106	32	318000-31FFFF		
105	32	310000-317FFF		
104	32	308000-30FFFF		
103	32	300000-307FFF		
102	32	2F8000-2FFFF		
101	32	2F0000-2F7FFF		
100	32	2E8000-2EFFFF		

Table 25. Bottom Boot Block Addresses, M28W640FCB (continued)

#	Size (KWord)	Address Range
99	32	2E0000-2E7FFF
98	32	2D8000-2DFFFF
97	32	2D0000-2D7FFF
96	32	2C8000-2CFFFF
95	32	2C0000-2C7FFF
94	32	2B8000-2BFFFF
93	32	2B0000-2B7FFF
92	32	2A8000-2AFFFF
91	32	2A0000-2A7FFF
90	32	298000-29FFFF
89	32	290000-297FFF
88	32	288000-28FFFF
87	32	280000-287FFF
86	32	278000-27FFFF
85	32	270000-277FFF
84	32	268000-26FFFF
83	32	260000-267FFF
82	32	258000-25FFFF
81	32	250000-257FFF
80	32	248000-24FFFF
79	32	240000-247FFF
78	32	238000-23FFFF
77	32	230000-237FFF
76	32	228000-22FFFF
75	32	220000-227FFF
74	32	218000-21FFFF
73	32	210000-217FFF
72	32	208000-20FFFF
71	32	200000-207FFF
70	32	1F8000-1FFFFF
69	32	1F0000-1F7FFF
68	32	1E8000-1EFFFF
67	32	1E0000-1E7FFF
66	32	1D8000-1DFFFF
65	32	1D0000-1D7FFF

Table 25. Bottom Boot Block Addresses, M28W640FCB (continued)

#	Size (KWord)	Address Range			
64	32	1C8000-1CFFFF			
63	32	1C0000-1C7FFF			
62	32	1B8000-1BFFFF			
61	32	1B0000-1B7FFF			
60	32	1A8000-1AFFFF			
59	32	1A0000-1A7FFF			
58	32	198000-19FFFF			
57	32	190000-197FFF			
56	32	188000-18FFFF			
55	32	180000-187FFF			
54	32	178000-17FFFF			
53	32	170000-177FFF			
52	32	168000-16FFFF			
51	32	160000-167FFF			
50	32	158000-15FFFF			
49	32	150000-157FFF			
48	32	148000-14FFFF			
47	32	140000-147FFF			
46	32	138000-13FFFF			
45	32	130000-137FFF			
44	32	128000-12FFFF			
43	32	120000-127FFF			
42	32	118000-11FFFF			
41	32	110000-117FFF			
40	32	108000-10FFFF			
39	32	100000-107FFF			
38	32	0F8000-0FFFFF			
37	32	0F0000-0F7FFF			
36	32	0E8000-0EFFFF			
35	32	0E0000-0E7FFF			
34	32	0D8000-0DFFFF			
33	32	0D0000-0D7FFF			
32	32	0C8000-0CFFFF			
31	32	0C0000-0C7FFF			
30	32	0B8000-0BFFFF			

Table 25. Bottom Boot Block Addresses, M28W640FCB (continued)

#	Size (KWord)	Address Range
29	32	0B0000-0B7FFF
28	32	0A8000-0AFFFF
27	32	0A0000-0A7FFF
26	32	098000-09FFFF
25	32	090000-097FFF
24	32	088000-08FFFF
23	32	080000-087FFF
22	32	078000-07FFFF
21	32	070000-077FFF
20	32	068000-06FFFF
19	32	060000-067FFF
18	32	058000-05FFFF
17	32	050000-057FFF
16	32	048000-04FFFF
15	32	040000-047FFF
14	32	038000-03FFFF
13	32	030000-037FFF
12	32	028000-02FFFF
11	32	020000-027FFF
10	32	018000-01FFFF
9	32	010000-017FFF
8	32	008000-00FFFF
7	4	007000-007FFF
6	4	006000-006FFF
5	4	005000-005FFF
4	4	004000-004FFF
3	4	003000-003FFF
2	4	002000-002FFF
1	4	001000-001FFF
0	4	000000-000FFF

Appendix B Common Flash Interface (CFI)

The Common Flash Interface is a JEDEC approved, standardized data structure that can be read from the Flash memory device. It allows a system software to query the device to determine various electrical and timing parameters, density information and functions supported by the memory. The system can interface easily with the device, enabling the software to upgrade itself when necessary.

When the CFI Query Command (RCFI) is issued the device enters CFI Query mode and the data structure is read from the memory. Tables 26, 27, 28, 29, 30 and 31 show the addresses used to retrieve the data.

The CFI data structure also contains a security area where a 64 bit unique security number is written (see *Table 31: Security code area*). This area can be accessed only in Read mode by the final user. It is impossible to change the security number after it has been written by Numonyx. Issue a Read command to return to Read mode.

Table 26. Query Structure Overview⁽¹⁾

Offset	Sub-section Name	Description
00h	Reserved	Reserved for algorithm-specific information
10h	CFI Query Identification String	Command set ID and algorithm data offset
1Bh	System Interface Information	Device timing & voltage information
27h	Device Geometry Definition	Flash device layout
Р	Primary Algorithm-specific Extended Query table	Additional information specific to the Primary Algorithm (optional)
А	Alternate Algorithm-specific Extended Query table	Additional information specific to the Alternate Algorithm (optional)

^{1.} Query data are always presented on the lowest order data outputs.

Table 27. CFI Query Identification String⁽¹⁾

Offset	Data	Description	Value
00h	0020h	Manufacturer code	Numonyx
01h	8848h 8849h	Device code	Top Bottom
02h-0Fh	reserved	Reserved	
10h	0051h		"Q"
11h	0052h	Query Unique ASCII String "QRY"	"R"
12h	0059h		"Y"
13h	0003h	Primary Algorithm Command Set and Control Interface ID code 16	Intel
14h	0000h	bit ID code defining a specific algorithm	compatibl e
15h	0035h	Address for Primary Algorithm extended Query table (see Table 20)	P = 35h
16h	0000h	Address for Primary Algorithm extended Query table (see <i>Table 29</i>)	P = 3311
17h	0000h	Alternate Vendor Command Set and Control Interface ID code	
18h	0000h	second vendor - specified algorithm supported (0000h means none exists)	NA
19h	0000h	Address for Alternate Algorithm extended Query table	NA
1Ah	0000h	(0000h means none exists)	INA

^{1.} Query data are always presented on the lowest order data outputs (DQ7-DQ0) only. DQ8-DQ15 are '0'.

Table 28. CFI Query System Interface Information

Offset	Data	Description	Value
1Bh	0027h	V _{DD} Logic Supply Minimum Program/Erase or Write voltage bit 7 to 4BCD value in volts bit 3 to 0BCD value in 100 mV	2.7V
1Ch	0036h	V _{DD} Logic Supply Maximum Program/Erase or Write voltage bit 7 to 4BCD value in volts bit 3 to 0BCD value in 100 mV	3.6V
1Dh	00B4h	V _{PP} [Programming] Supply Minimum Program/Erase voltage bit 7 to 4HEX value in volts bit 3 to 0BCD value in 100 mV	11.4V
1Eh	00C6h	V _{PP} [Programming] Supply Maximum Program/Erase voltage bit 7 to 4HEX value in volts bit 3 to 0BCD value in 100 mV	12.6V
1Fh	0004h	Typical time-out per single word program = 2 ⁿ µs	16µs
20h	0004h	Typical time-out for Double/Quadruple Word Program = 2 ⁿ µs	16µs
21h	000Ah	Typical time-out per individual block erase = 2 ⁿ ms	1s
22h	0000h	Typical time-out for full chip erase = 2 ⁿ ms	NA
23h	0005h	Maximum time-out for Word program = 2 ⁿ times typical	512µs
24h	0005h	Maximum time-out for Double/Quadruple Word Program = 2 ⁿ times typical	512µs
25h	0003h	Maximum time-out per individual block erase = 2 ⁿ times typical	8s
26h	0000h	Maximum time-out for chip erase = 2 ⁿ times typical	NA

Table 29. Device Geometry Definition

	Offset Word Mode	Data	Description	Value			
	27h 0017h		Device size = 2 ⁿ in number of bytes	8 Mbyte			
	28h 29h	0001h 0000h	Flash Device Interface code description	x16 Async.			
	2Ah 2Bh	0003h 0000h	Maximum number of bytes in multi-byte program or page = 2 ⁿ	8			
2Ch 0002h		0002h	Number of Erase Block Regions within the device. It specifies the number of regions within the device containing contiguous Erase Blocks of the same size.	2			
	2Dh 2Eh	007Eh 0000h	Region 1 Information Number of identical-size erase block = 007Eh+1	127			
40FCT	2Fh 30h	0000h 0001h	Region 1 Information Block size in Region 1 = 0100h * 256 byte	64 Kbyte			
M28W640FCT	9 31h 0007h 32h 0000h		Region 2 Information Number of identical-size erase block = 0007h+1	8			
	33h 0020h 34h 0000h		Region 2 Information Block size in Region 2 = 0020h * 256 byte	8 Kbyte			
	2Dh 2Eh	0007h 0000h	Region 1 Information Number of identical-size erase block = 0007h+1	8			
M28W640FCB	2Fh 30h	0020h 0000h	Region 1 Information Block size in Region 1 = 0020h * 256 byte	8 Kbyte			
M28W6	31h 32h	007Eh 0000h	Region 2 Information Number of identical-size erase block = 007Eh=1	127			
	33h 34h	0000h 0001h	Region 2 Information Block size in Region 2 = 0100h * 256 byte	64 Kbyte			

Table 30. Primary Algorithm-specific Extended Query table

Offset P = 35h ⁽¹⁾	Data	Description	Value
(P+0)h = 35h	0050h		"P"
(P+1)h = 36h	0052h	Primary Algorithm extended Query table unique ASCII string "PRI"	"R"
(P+2)h = 37h	0049h		" "
(P+3)h = 38h	0031h	Major version number, ASCII	"1"
(P+4)h = 39h	0030h	Minor version number, ASCII	"0"
(P+5)h = 3Ah	0066h	Extended Query table contents for Primary Algorithm. Address	
(P+6)h = 3Bh	0000h	(P+5)h contains less significant byte.	
(P+7)h = 3Ch	0000h	bit 0Chip Erase supported(1 = Yes, 0 = No) bit 1Suspend Erase supported(1 = Yes, 0 = No)	No
(P+8)h = 3Dh	0000h	bit 2Suspend Program supported(1 = Yes, 0 = No) bit 3Legacy Lock/Unlock supported(1 = Yes, 0 = No) bit 4Queued Erase supported(1 = Yes, 0 = No) bit 5Instant individual block locking supported(1 = Yes, 0 = No) bit 6Protection bits supported(1 = Yes, 0 = No) bit 7Page mode read supported(1 = Yes, 0 = No) bit 8Synchronous read supported(1 = Yes, 0 = No) bit 31 to 9Reserved; undefined bits are '0'	Yes Yes No No Yes Yes No No
(P+9)h = 3Eh	0001h	Supported Functions after Suspend Read Array, Read Status Register and CFI Query are always supported during Erase or Program operation bit 0Program supported after Erase Suspend (1 = Yes, 0 = No) bit 7 to 1Reserved; undefined bits are '0'	Yes
(P+A)h = 3Fh $(P+B)h = 40h$	0003h 0000h	Block Lock Status Defines which bits in the Block Status Register section of the Query are implemented. Address (P+A)h contains less significant byte bit 0Block Lock Status Register Lock/Unlock bit active(1 = Yes, 0 = No) bit 1Block Lock Status Register Lock-Down bit active (1 = Yes, 0 = No) bit 15 to 2Reserved for future use; undefined bits are '0'	Yes Yes
(P+C)h = 41h	0030h	V _{DD} Logic Supply Optimum Program/Erase voltage (highest performance) bit 7 to 4HEX value in volts bit 3 to 0BCD value in 100 mV	3V
(P+D)h = 42h	00C0h	V _{PP} Supply Optimum Program/Erase voltage bit 7 to 4HEX value in volts bit 3 to 0BCD value in 100 mV	12V
(P+E)h = 43h	0001h	Number of Protection register fields in JEDEC ID space. "00h," indicates that 256 protection bytes are available	01

Table 30. Primary Algorithm-specific Extended Query table (continued)

Offset P = 35h ⁽¹⁾	Data	Description	Value
(P+F)h = 44h	0080h	Protection Field 1: Protection Description	80h
(P+10)h = 45h	0000h	This field describes user-available One Time Programmable (OTP) Protection register bytes. Some are pre-programmed with device unique serial numbers. Others are user programmable.	00h
(P+11)h = 46h	0003h	bits 0–15 point to the Protection register Lock byte, the section's first byte.	8 byte
(P+12)h = 47h	0004h	The following bytes are factory pre-programmed and user-programmable. bit 0 to 7 Lock/bytes JEDEC-plane physical low address bit 8 to 15Lock/bytes JEDEC-plane physical high address bit 16 to 23 "n" such that 2 ⁿ = factory pre-programmed bytes bit 24 to 31 "n" such that 2 ⁿ = user programmable bytes	16 byte
(P+13)h = 48h		Reserved	


^{1.} See Table 27, offset 15 for P pointer definition

Table 31. Security code area

Offset	Data	Description					
80h	00XX	Protection Register Lock					
81h	XXXX						
82h	XXXX	C4 hite unique de ieu number					
83h	XXXX	64 bits: unique device number					
84h	XXXX						
85h	XXXX						
86h	XXXX						
87h	XXXX						
88h	XXXX	100 hita. Haay Dyaryayayahla OTD					
89h	XXXX	128 bits: User Programmable OTP					
8Ah	xxxx						
8Bh	XXXX						
8Ch	XXXX						

Appendix C Flowcharts and pseudo codes


Figure 16. Program flowchart and pseudo code

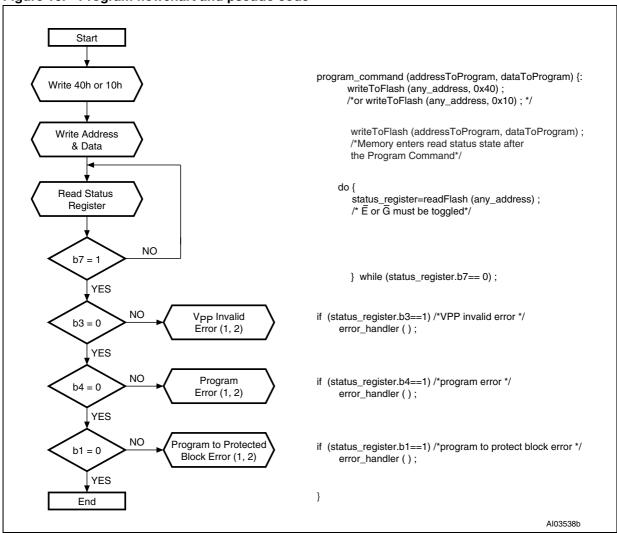

- Status check of b1 (Protected Block), b3 (V_{PP} Invalid) and b4 (Program Error) can be made after each program operation or after a sequence.
- 2. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.


65/77

Figure 17. Double Word Program flowchart and pseudo code

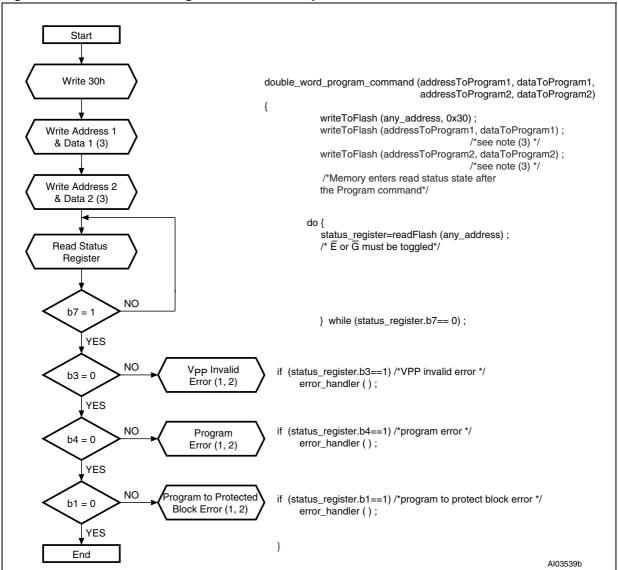


- Status check of b1 (Protected Block), b3 (V_{PP} Invalid) and b4 (Program Error) can be made after each program operation or after a sequence.
- 2. If an error is found, the Status Register must be cleared before further Program/Erase operations.
- 3. Address 1 and Address 2 must be consecutive addresses differing only for bit A0.

Figure 18. Quadruple Word Program flowchart and pseudo code

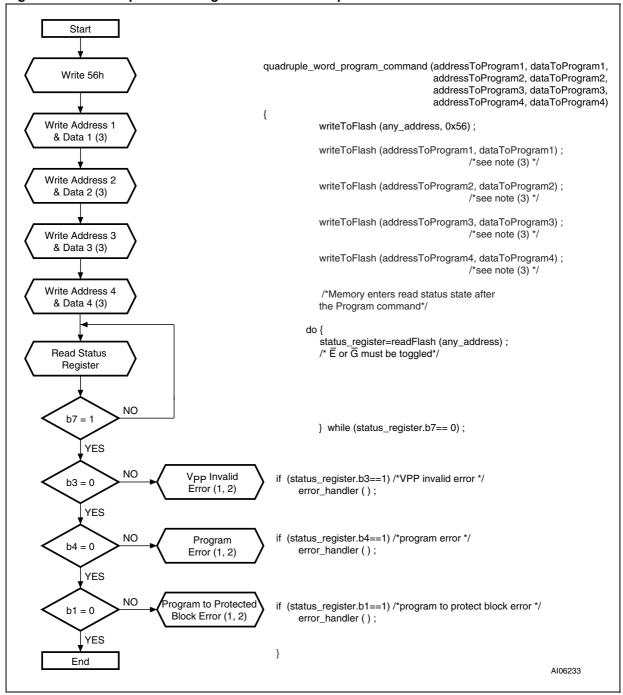


- Status check of b1 (Protected Block), b3 (V_{PP} Invalid) and b4 (Program Error) can be made after each program operation or after a sequence.
- 2. If an error is found, the Status Register must be cleared before further Program/Erase operations.
- 3. Address 1 to Address 4 must be consecutive addresses differing only for bits A0 and A1.

Figure 19. Program Suspend & Resume flowchart and pseudo code

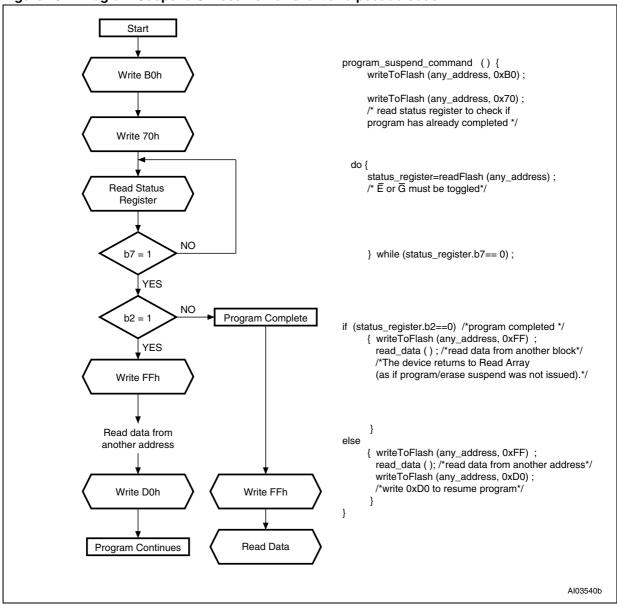


67/77

Figure 20. Erase flowchart and pseudo code

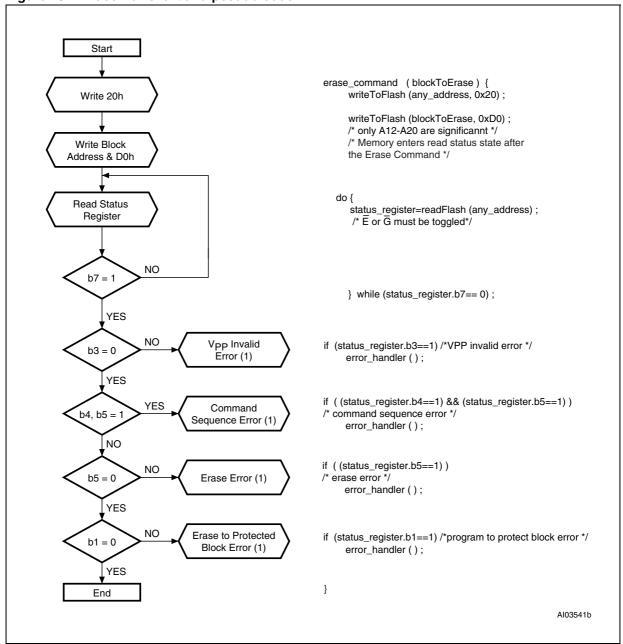


1. If an error is found, the Status Register must be cleared before further Program/Erase operations.

Figure 21. Erase Suspend & Resume flowchart and pseudo code

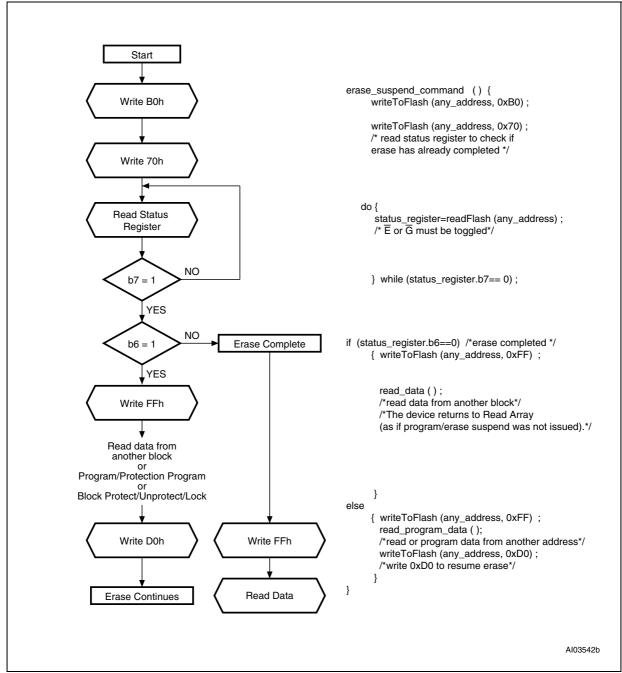

Numonyx 69/77

Figure 22. Locking Operations flowchart and pseudo code

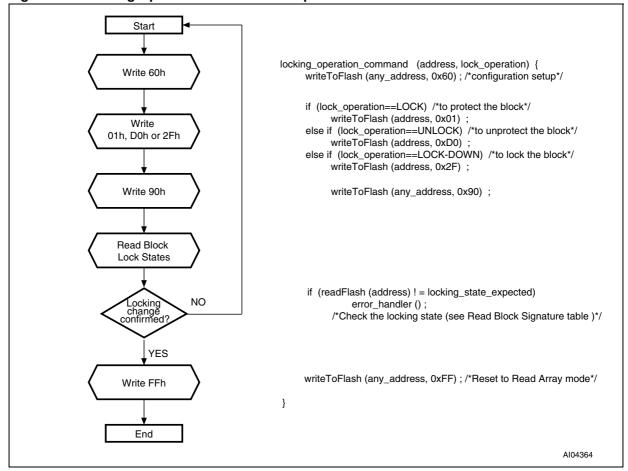

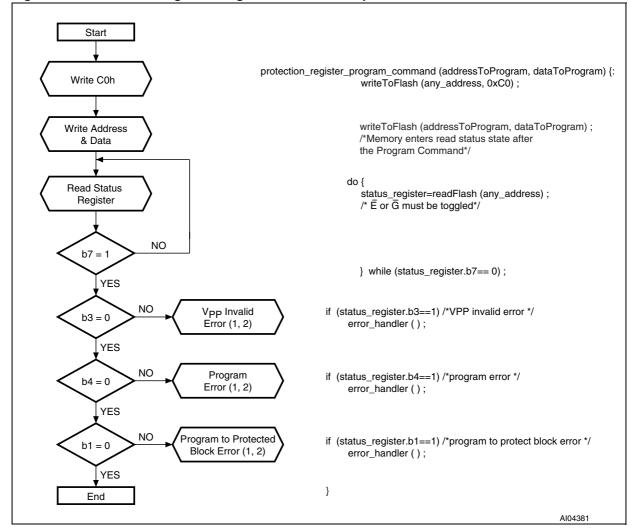


Figure 23. Protection Register Program flowchart and pseudo code

- Status check of b1 (Protected Block), b3 (V_{PP} Invalid) and b4 (Program Error) can be made after each program operation or after a sequence.
- 2. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.

Appendix D Command Interface and Program/Erase Controller State

Table 32. Write State machine Current/Next⁽¹⁾

Table 32.		ite State IIIa	Command Input (and Next State)								
Current State	SR bit 7	Data When Read	Read Array (FFh)	Program Setup (10/40h)	Erase Setup (20h)	Erase Confirm (D0h)	Prog/Ers Suspend (B0h)	Prog/Ers Resume (D0h)	Read Status (70h)	Clear Status (50h)	
Read Array	"1"	Array	Read Array	Prog.Setup	Ers. Setup		Read Array		Read Sts.	Read Array	
Read Status	"1"	Status	Read Array	Program Setup	Erase Setup	Read Array			Read Status	Read Array	
Read Elect.Sg.	"1"	Electronic Signature	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array	
Read CFI Query	"1"	CFI	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array	
Lock Setup	"1"	Status	Loc	k Command	Error	Lock (complete) Lock Cmd Lock (complete)		Lock (complete)	Lock Co Err		
Lock Cmd Error	"1"	Status	Read Array	Program Setup	Erase Setup	Read Array			Read Status	Read Array	
Lock (complete)	"1"	Status	Read Array	Program Setup	Erase Setup	Read Array			Read Status	Read Array	
Prot. Prog. Setup	"1"	Status			Pı	rotection Reg	gister Progra	ım			
Prot. Prog. (continue)	"0"	Status			Protec	tion Register	Program co	ontinue			
Prot. Prog. (complete)	"1"	Status	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array	
Prog. Setup	"1"	Status				Prog	ıram				
Program (continue)	"0"	Status		Program	(continue	·)	Prog. Sus Read Sts	Progra	m (contin	ue)	
Prog. Sus Status	"1"	Status	Prog. Sus Read Array	•	Program Suspend to Read Array		Prog. Sus Read Array	Program (continue)	Prog. Sus Read Sts	Prog. Sus Read Array	
Prog. Sus Read Array	"1"	Array	Prog. Sus Read Array	Program Suspend to Read Array		Program (continue)	Prog. Sus Read Array	Program (continue)	Prog. Sus Read Sts	Prog. Sus Read Array	
Prog. Sus Read Elect.Sg.	"1"	Electronic Signature	Prog. Sus Read Array	Program Su Read A		Program (continue)	Prog. Sus Read Array	Program (continue)	Prog. Sus Read Sts	Prog. Sus Read Array	

Table 32. Write State machine Current/Next⁽¹⁾ (continued)

	0.0		Command Input (and Next State)									
Current State	SR bit 7	Data When Read	Read Array (FFh)	Program Setup (10/40h)	Erase Setup (20h)	Erase Confirm (D0h)	Prog/Ers Suspend (B0h)	Prog/Ers Resume (D0h)	Read Status (70h)	Clear Status (50h)		
Prog. Sus Read CFI	"1"	CFI	Prog. Sus Read Array	Program Su Read A	-	Program (continue)	Prog. Sus Read Array	Program (continue)	Prog. Sus Read Sts	Prog. Sus Read Array		
Program (complete)	"1"	Status	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array		
Erase Setup	"1"	Status	Eras	e Command	Error	Erase (continue)	Erase CmdError	Erase (continue)				
Erase Cmd.Error	"1"	Status	Read Array	Program Setup	Erase Setup	Read Array		Read Array				Read Array
Erase (continue)	"0"	Status		Erase (d	continue)		Erase Sus Read Sts Eras			e (continue)		
Erase Sus Read Sts	"1"	Status	Erase Sus Read Array	Program Setup	Erase Sus Read Array	Erase (continue)	Erase Sus Read Array	Erase (continue)	Erase Sus Read Sts	Erase Sus Read Array		
Erase Sus Read Array	"1"	Array	Erase Sus Read Array	Program Setup	Erase Sus Read Array	Erase (continue)	Erase Sus Read Array	Erase (continue)	Erase Sus Read Sts	Erase Sus Read Array		
Erase Sus Read Elect.Sg.	"1"	Electronic Signature	Erase Sus Read Array	Program Setup	Erase Sus Read Array	Erase (continue)	Erase Sus Read Array	Erase (continue)	Erase Sus Read Sts	Erase Sus Read Array		
Erase Sus Read CFI	"1"	CFI	Erase Sus Read Array	Program Setup	Erase Sus Read Array	Erase (continue)	Erase Sus Read Array	Erase (continue)	Erase Sus Read Sts	Erase Sus Read Array		
Erase (complete)	"1"	Status	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array		

^{1.} Cmd = Command, Elect.Sg. = Electronic Signature, Ers = Erase, Prog. = Program, Prot = Protection, Sus = Suspend.

Table 33. Write State machine Current/Next⁽¹⁾

Table 33.	Write State machine Current/Next**/								
	Command Input (and Next State)								
Current State	Read Elect.Sg. (90h)	Read CFI Query (98h)	Lock Setup (60h)	Prot. Prog. Setup (C0h)	Lock Confirm (01h)	Lock Down Confirm (2Fh)	Unlock Confirm (D0h)		
Read Array	Read Elect.Sg.	Read CFI Query	Lock Setup	Prot. Prog. Setup	Read Array				
Read Status	Read Elect.Sg.	Read CFI Query	Lock Setup	Prot. Prog. Setup	Read Array				
Read Elect.Sg.	Read Elect.Sg.	Read CFI Query	Lock Setup	Prot. Prog. Setup	Read Array				
Read CFI Query	Read Elect.Sg.	Read CFI Query	Lock Setup	Prot. Prog. Setup	Read Array				
Lock Setup		Lock Comr	mand Error		Lock (complete)				
Lock Cmd Error	Read Elect.Sg.	Read CFI Query	Lock Setup	Prot. Prog. Setup	Read Array				
Lock (complete)	Read Elect.Sg.	Read CFI Query	Lock Setup	Prot. Prog. Setup	Read Array				
Prot. Prog. Setup	Protection Register Program								
Prot. Prog. (continue)	Protection Register Program (continue)								
Prot. Prog. (complete)	Read Read CFI Lock Setup Prot. Prog. Setup Read Array								
Prog. Setup	Program								
Program (continue)	Program (continue)								
Prog. Suspend Read Status	Prog. Suspend Read Elect.Sg.	Prog. Suspend Read CFI Query	Pro	rogram Suspend Read Array Program (continue)			Program (continue)		
Prog. Suspend Read Array	Prog. Suspend Read Elect.Sg.	Prog. Suspend Read CFI Query	Program Suspend Read Array Program (continue)						
Prog. Suspend Read Elect.Sg.	Prog. Suspend Read Elect.Sg.	Prog. Suspend Read CFI Query	Program Suspend Read Array Program (continue)			Program (continue)			
Prog. Suspend Read CFI	Prog. Suspend Read Elect.Sg.	Prog. Suspend Read CFI Query	Program Suspend Read Array Program (continue)						

Table 33. Write State machine Current/Next⁽¹⁾ (continued)

Table 33.	write State machine current/Next(/ (continued)						
	Command Input (and Next State)						
Current State	Read Elect.Sg. (90h)	Read CFI Query (98h)	Lock Setup (60h)	Prot. Prog. Setup (C0h)	Lock Confirm (01h)	Lock Down Confirm (2Fh)	Unlock Confirm (D0h)
Program (complete)	Read Elect.Sg.	Read CFIQuery	Lock Setup	Prot. Prog. Setup	Read Array		
Erase Setup	Erase Command Error					Erase (continue)	
Erase Cmd.Error	Read Elect.Sg.	Read CFI Query	Lock Setup	Prot. Prog. Setup	Read Array		
Erase (continue)	Erase (continue)						
Erase Suspend Read Ststus	Erase Suspend Read Elect.Sg.	Erase Suspend Read CFI Query	Lock Setup	Erase S	Erase Suspend Read Array		Erase (continue)
Erase Suspend Read Array	Erase Suspend Read Elect.Sg.	Erase Suspend Read CFI Query	Lock Setup	Erase S	Suspend Read Array		Erase (continue)
Erase Suspend Read Elect.Sg.	Erase Suspend Read Elect.Sg.	Erase Suspend Read CFI Query	Lock Setup	Erase Suspend Read Array			Erase (continue)
Erase Suspend Read CFI Query	Erase Suspend Read Elect.Sg.	Erase Suspend Read CFI Query	Lock Setup	Erase Suspend Read Array			Erase (continue)
Erase (complete)	Read Elect.Sg.	Read CFI Query	Lock Setup	Prot. Prog. Setup	Read Array		

 $^{1. \}quad Cmd = Command, \ Elect.Sg. = Electronic \ Signature, \ Prog. = Program, \ Prot = Protection.$

Revision history

Table 34. Document revision history

Date	Version	Revision details	
24-May-2004	0.1	First Issue	
23-Aug-2004	0.2	Figure 2: TSOP connections and Figure 3: TFBGA connections (top view through package) updated.	
08-Apr-2005	1.0	Datasheet maturity changed to PRELIMINARY DATA. TSOP48 Package Mechanical Data updated in Table 20: TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, package mechanical data.	
21-Aug-2006	2	Document status promoted from Preliminary Data to full Datasheet. t _{GLQV} value changed for 100ns speed class (codified as 10 in part numbering scheme) in <i>Table 16: Read AC characteristics</i> . Blank and T options removed from below <i>Option</i> in <i>Table 22</i> and <i>Table 23</i> . Packages are ECOPACK® compliant.	
23-Oct-2006	3	The 0.13µm technology was removed from the device options of <i>Table 22: Ordering information scheme</i> .	
26-Mar-2008	4	Applied Numonyx branding.	

Please Read Carefully:

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH NUMONYX™ PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN NUMONYX'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NUMONYX ASSUMES NO LIABILITY WHATSOEVER, AND NUMONYX DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF NUMONYX PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

Numonyx products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Numonyx may make changes to specifications and product descriptions at any time, without notice.

Numonyx, B.V. may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Numonyx reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Contact your local Numonyx sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Numonyx literature may be obtained by visiting Numonyx's website at http://www.numonyx.com.

Numonyx StrataFlash is a trademark or registered trademark of Numonyx or its subsidiaries in the United States and other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 11/5/7, Numonyx, B.V., All Rights Reserved.