





Kit 67110-3 OSD KIT



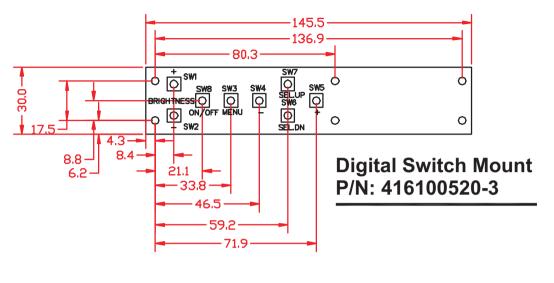





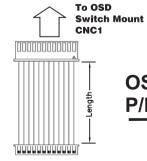

OSD cable P/N 426122200-3 (12 way) 150mm



Kit 67110-3 includes : 1) Digital OSD switch mount P/N 416100520-3

2) OSD cable,150mm P/N 426122200-3

NOTE:

- All dimensions are in mm

- Digital Switch Mount P/N 416100520-3 can operate under 12VDC/24VDC power input environment

CNC1 Pin Assignment Connector :JSTB12B-XH-A	
pin #	description
12	no connection
11	OSD Select UP
10	OSD Select Down
9	OSD Plus/Right
8	OSD Minus/Left
7	OSD Menu
6	Ground
5	Backlight Brightness
	VR pin B
4	Backlight Brightness
·	VR pin WIP
3	Backlight Brightness
	_
2	Power Switch B
1	Power Switch A

CNC2 Pin assignment Connector : Hirose DF13—9F	
pin #	description
9	Ground
8	Adjust Down/Decrease/Left
7	Adjust Up/Increase/Right
6	Select Down
5	Select Up
4	Ground
3	No connection
2	No connection
1	Power On/Off

Jumper setting:

JP1: SWAP DEC/INC SWITCH 1-2.3-4 closed: NORMAL 1-3,2-4 closed: SWAPPED

JP2: SWAP SEL UP/DN SWITCH

1-2,3-4 closed: NORMAL 1-3,2-4 closed: SWAPPED

JP3: SWAP BRIGHTNESS INC/DEC SWITCH

1-2.3-4 closed: NORMAL 1-3.2-4 closed: SWAPPED

JP5 : 1-2 closed : Disable On/Off power button control Open: Enable On/Off power button control(Default)

JP6: 1-2 closed: Default power on (JP5 set open) 3-4 closed: Defalt power off (JP5 set open)

Date: 30 SEPT 2011