OMRON

Photoelectric Sensor with Built-in Amplifier

E3Z

Infrared light

E3Z-D87

- Photoelectric Sensor with built-in amplifier is applicable to a wide variety of lines and ensures a longer sensing distance than any other model.
- User-friendly Sensor takes all installation and on-site conditions into consideration.
- Eliminates the influence of installation and on-site conditions, thus increasing the reliability of the line.
- OMRON has been making efforts towards environmental protection by adopting user and environment-friendly measures.
- Greatly saves energy and resources. The economy-oriented age has evolved into the ecology-oriented age.
- Meets a variety of international standards, thus allowing use in any country.



Red light

E3Z-D67

 ϵ

Ordering Information

■ List of Models

| Sensing method Appearance | | Connection method Sensing distance | | Model | |
|-------------------------------------|-------------------------|------------------------------------|---|------------|------------|
| | | | | NPN output | PNP output |
| Through-beam | $\Box \rightarrow \Box$ | Pre-wired (see note 3) | 1 | E3Z-T61 | E3Z-T81 |
| | | Connector | 15 m | E3Z-T66 | E3Z-T86 |
| Retroreflective (with MSR function) | (see note 1) | Pre-wired (see note 3) | 4 m | E3Z-R61 | E3Z-R81 |
| (With MOR function) | IJ≒I | Connector | (100 mm) (see note 2) | E3Z-R66 | E3Z-R86 |
| Diffuse-reflective | | Pre-wired (see note 3) | 7 5 400 | E3Z-D61 | E3Z-D81 |
| | | Connector | 5 to 100 mm (wide view) | E3Z-D66 | E3Z-D86 |
| | \longrightarrow | Pre-wired (see note 3) | | E3Z-D62 | E3Z-D82 |

Note: 1. The Reflector is sold separately. Select the Reflector model most suited to the application.

Connector

- 2. The sensing distance specified is possible when the E39-R1S used. Figure in parentheses indicate the minimum required distance between the Sensor and Reflector.
- 3. Models provided with a 0.5-m cable are available. When ordering, specify the cable length by adding the code "0.5M" to the model number (e.g., E3Z-T61 0.5M).

■ Nomenclature

Through-beam Models
E3Z-T6□ Receiver
Retroreflective Models
E3Z-R6□
Diffuse-reflective Models
E3Z-D6□



1 m

■ Accessories (Order Separately)

Slit for Through-beam Models

| Slit width | Sensing distance (typical) | Minimum sensing object (typical) | Model | Quantity required | Remarks |
|-------------|----------------------------|----------------------------------|----------|-----------------------|----------------------------|
| 0.5 mm dia. | 50 mm | 0.5 mm dia. | E39-S65A | One each for the | These Slits are |
| 1 mm dia. | 200 mm | 1 mm dia. | E39-S65B | emitter and receiver. | available for the E3Z-T□□. |
| 2 mm dia. | 800 mm | 2 mm dia. | E39-S65C | | L32-1 |
| 0.5×10 mm | 1 m | 0.7 mm dia. | E39-S65D | | |
| 1×10 mm | 2.2 m | 1.2 mm dia. | E39-S65E | | |
| 2×10 mm | 5 m | 2.4 mm dia. | E39-S65F | | |

Reflectors for Retroreflective Models

| Name | Sensing distance (typical) | Model | Remarks |
|---------------------|------------------------------|---------|--------------------------------|
| Reflector | 3 m (100 mm) | E39-R1 | Retroreflective models are not |
| | 4 m (100 mm) | E39-R1S | provided with Reflectors. |
| | 5 m (100 mm) (see note 2) | E39-R2 | The MSR function is available. |
| Miniature Reflector | 1.5 m (50 mm) (see note 2) | E39-R3 |] |
| Tape Reflector | 700 mm (150 mm) (see note 2) | E39-RS1 | |
| | 1.1 m (150 mm) (see note 2) | E39-RS2 |] |
| | 1.4 m (150 mm) (see note 2) | E39-RS3 | |

Note: 1. Figure in parentheses indicates the minimum required distance between the Sensor and Reflector.

2. The actual sensing distance may be reduced to approximately 70% of the typical sensing distance when using a Reflector other than E39-R1 or E39-R1S.

Mounting Brackets

| Appearance | Model |
|------------|----------|
| | E39-L104 |
| | E39-L43 |
| | E39-L44 |

| Appearance | Model | Remarks |
|------------|---------|--|
| | E39-L93 | For Sensor adjustment use. |
| | | Mounted to the aluminum frame rails of conveyors and adjustable with ease. |
| | E39-L98 | Vertical protective cover bracket |

Note: If a through-beam model is used, order two Mounting Brackets for the emitter and receiver respectively.

Sensor I/O Connectors

| Cable | Appearance | | Cable type | Model |
|----------|------------|-----|----------------|-----------------|
| Standard | Straight | 2 m | Four-wire type | XS3F-M421-402-A |
| | 6 | 5 m | | XS3F-M421-405-A |
| | L-shaped | 2 m | | XS3F-M422-402-A |
| | | 5 m | | XS3F-M422-405-A |

Specifications —

■ Ratings/Characteristics


| Item | Sensing method | Through-beam | Retroreflective with MSR function | Diffuse-ı | reflective | |
|-------------------------------|-------------------------|--|--|-------------------------------|-----------------------------|--|
| | NPN output | E3Z-T61/T66 | E3Z-R61/R66 | E3Z-D61/D66 | E3Z-D62/D67 | |
| | PNP output (see note 3) | E3Z-T81/T86 | E3Z-R81/R86 | E3Z-D81/D86 | E3Z-D82/D87 | |
| Sensing dist | ance | 15 m | 4 m (100 mm)* (when using E39-R1S) | White paper (100×100 mm): 100 | White paper (300 × 300 mm): | |
| | | | 3 m (100 mm)* (when using E39-R1) | mm | 1 m | |
| Standard sensing object | | Opaque: 12-mm dia. min. | Opaque: 75-mm dia. min. | dia. min | | |
| Hysteresis | | | | 20% max. of setting dis | stance | |
| Directional a | ingle | Both emitter and receiver: 3 to 15° | 2 to 10° | | | |
| Light source | (wave length) | Infrared LED (860 nm) | Red LED (680 nm) | Infrared LED (860 nm) | | |
| Power suppl | ly voltage | 12 to 24 VDC ±10% inclu | iding 10% (p-p) max. ripple | | | |
| Current cons | sumption | Emitter: 15 mA Receiver: 20 mA | 30 mA max. | | | |
| Control output | | Load power supply voltage: 26.4 V max. Load current: 100 mA max. (Residual voltage: 1 V max.) Open collector output (NPN or PNP depending on model) L-ON/D-ON selectable | | | | |
| Circuit protection | | Protection from load short-circuit and reversed power supply connection | Protection from reversed power supply connection, output short-circuit, and mutual interference protection | | | |
| Response time | | Operation or reset: 1 ms | max. | | | |
| Sensitivity a | djustment | One-turn adjuster | | | | |
| Ambient illu (receiver sid | | Incandescent lamp: 3,000 ℓx max. Sunlight: 10,000 ℓx max. | | | | |
| Ambient tem | perature | Operating: -25°C to 55°C/Storage: -40°C to 70°C (with no icing or condensation) | | | | |
| Ambient hur | nidity | Operating: 35% to 85%/Storage: 35% to 95% (with no condensation) | | | | |
| Insulation re | sistance | 20 MΩ min. at 500 VDC | | | | |
| Dielectric st | rength | 1,000 VAC, 50/60 Hz for 1 min | | | | |
| Vibration res | sistance | 10 to 55 Hz, 1.5-mm double amplitude or 300 m/s ² for 2 hours each in X, Y, and Z directions | | | | |
| Shock resistance | | Destruction: 500 m/s ² 3 times each in X, Y, and Z directions | | | | |
| Degree of protection | | IP67 (IEC60529) | | | | |
| Connection method | | 500-mm-thick pre-wired cable (standard length: 2 m) with M8 connector | | | | |
| Indicator | | Operation indicator (orange) Stability indicator (green) Emitter has power indicator (orange) only. | | | | |
| Weight (packed | Pre-wired cable (2 m) | ired cable Approx. 120 g Approx. 65 g | | | | |
| state) | Connector | Approx. 30 g Approx. 20 g | | | | |
| Material | Case | PBT (polybutylene terephthalate) | | | | |
| Lens | | Methacrylate resin | | | | |
| Accessories | | Instruction manual (The Reflector or Mounting Bracket is not provided with any of the above models.) | | | | |

Note: *Figures in parentheses indicate the minimum required distances between the Sensors and Reflectors.


Engineering Data -

Through-beam Models


■ Parallel Operating Range (Typical)

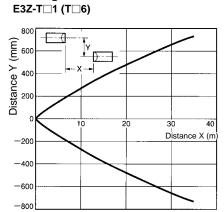

Through-beam Models E3Z-T□1 (T□6) and Slit

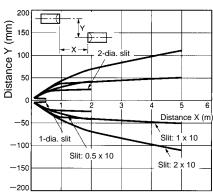


Retroreflective Models E3Z-R 1 (R 6) and Reflector

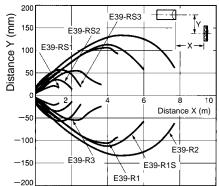


■ Operating Range (Typical)

Diffuse-reflective Models E3Z-D□1 (D□6)

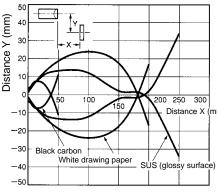


Diffuse-reflective Models



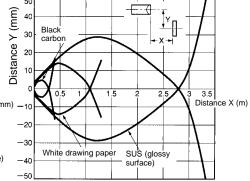


■ Excess Gain Ratio vs. Distance (Typical)


Through-beam Models E3Z-T□1 (T□6)

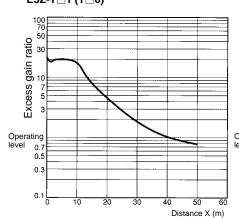


Retroreflective Models E3Z-R 1 (R 6) and Reflector

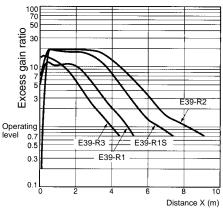

Diffuse-reflective Models

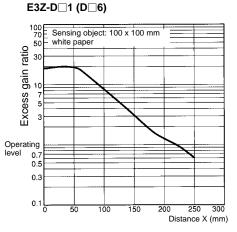


Diffuse-reflective Model E3Z-D□2 (D□7)

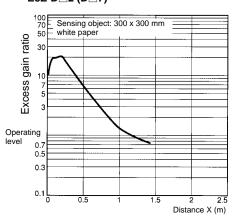


■ Sensing Object Size vs. Sensing Distance (Typical)

Diffuse-reflective Models E3Z-D□1 (D□6)

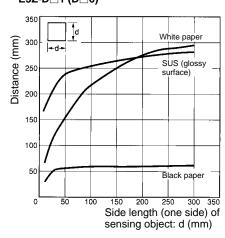


Diffuse-reflective Models E3Z-D□2 (D□7)

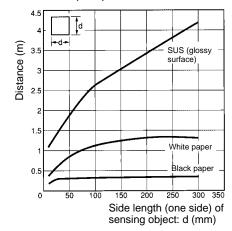


Operation


NPN Output

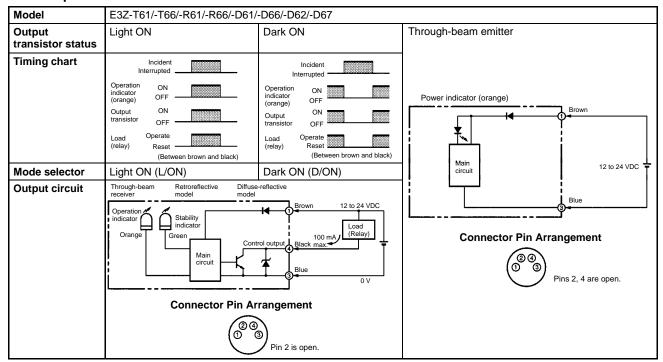

PNP Output

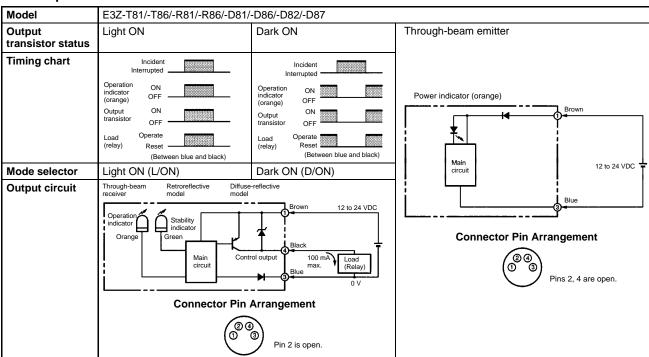

Structure of Sensor I/O Connector

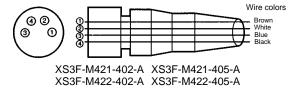

| Classification | Wire color | Connector pin No. | Use |
|----------------|------------|-------------------|--------------------|
| DC | Brown | 1 | Power supply (+V) |
| | White | 2 | |
| | Blue | 3 | Power supply (0 V) |
| | Black | 4 | Output |


Note: Pin 2 is not used.

Dimensions


Note: All units are in millimeters unless otherwise indicated.

■ Sensors

Through-beam (Pre-wired Models) E3Z-T61 E3Z-T81 **Emitter** Power indicator (orange) -17 2.1 Optical axis Two, M3 Vinyl-insulated round cable with two conductors, 4 dia. (0.2 mm² with 1.1-dia. insulator); standard length: 2m 12.45 Power indicato (orange) 10.8 10.4 Receiver \ selector Sensing adjuster Stability indicator (green) Lens Two, M3 Vinyl-insulated round cable with three conductors, 4 dia. (0.2 mm² with 1.1-dia. insulator); standard length: 2m

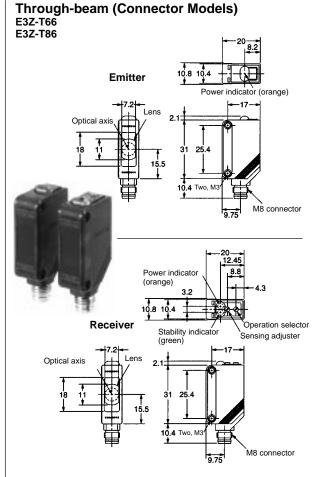


Retroreflective Models (Pre-wired Models) E3Z-R61 E3Z-R81 **Diffuse-reflective Models** E3Z-D61 E3Z-D62 Power indicator (orange E3Z-D81 E3Z-D82 10.8 10.4 Operation selector Sensing adjuster Stability indicator (green) Two, 7-dia. lenses Receiver Optical axis 15.5 Two, M3 Vinyl-insulated round cable with three conductors, 4 dia. (0.2 mm² with 1.1-dia. insulator); standard length: 2m

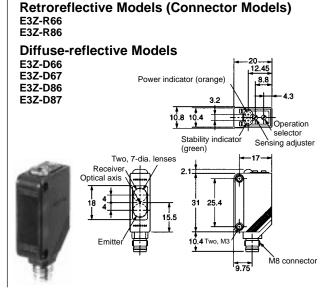

■ Accessories (Order Separately)






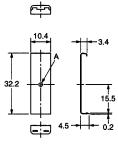

| Model | Side A | Material |
|----------|----------|-----------|
| E39-S65A | 0.5 dia. | SUS301 |
| E39-S65B | 1.0 dia. | stainless |
| E39-S65C | 2.0 dia. | steel |

E39-S65D E39-S65E E39-S65F



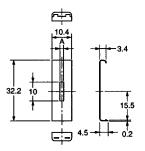



| Model | Side A | Material |
|----------|--------|-----------|
| E39-S65D | 0.5 | SUS301 |
| E39-S65E | 1.0 | stainless |
| E39-S65F | 2.0 | steel |






Material Surface: Acrylic resin Backside: ABS resin

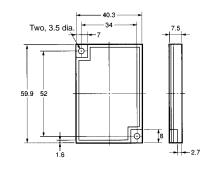


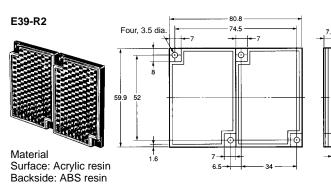


Miniature Reflector E39-R3




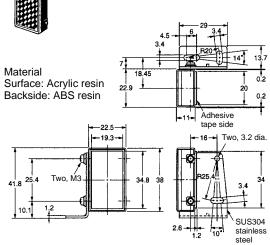

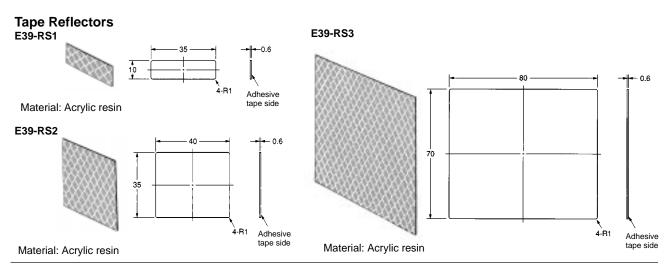


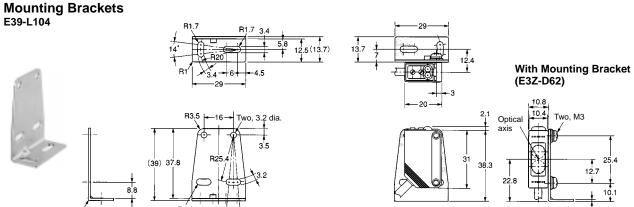



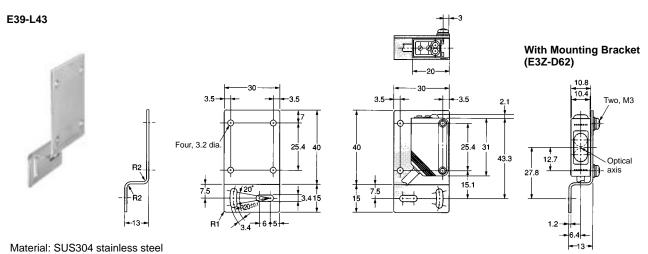


E39-L44

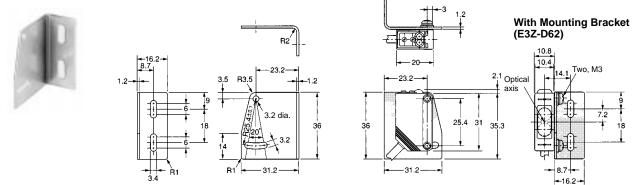

Material: SUS304 stainless steel





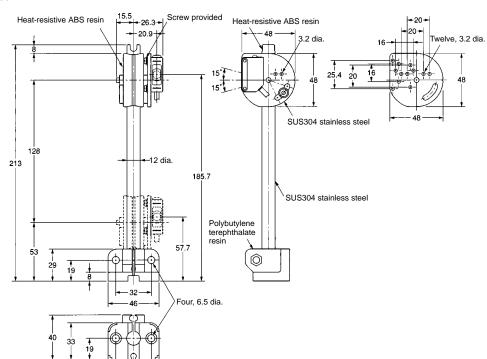


E39-L98

Screw provided 35.3

4-R3.3 2-R22

Mounting Dimensions Two, M6

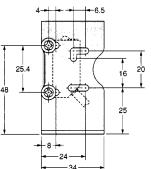




Sensor I/O Connectors

Straight XS3F-M421-402-A (L=2 m)


XS3F-M421-402-A (L=2 m) XS3F-M421-405-A (L=5 m)



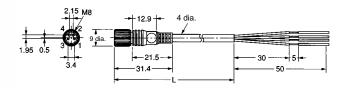

L-shaped XS3F-M422-402-A (L=2 m) XS3F-M422-405-A (L=5 m)



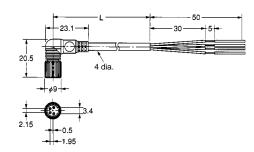

Precautions

Be sure to abide by the following precautions for the safe operation of the Sensor.

Wiring

Power Supply Voltage

Make sure that the power supply to the Sensor is within the rated voltage range and do not apply 100 VAC or more if the Sensor is a DC model, or otherwise the Sensor may explode or burn.

Load Short-circuiting

Do not short-circuit the load, otherwise the Sensor may be damaged.

■ Correct Use

Settings

Power Reset Time

The Sensor is ready to operate 100 ms after the Sensor is turned ON. If the load and Sensor are connected to independent power supplies respectively, be sure to turn ON the Sensor before turning the load ON.

Connections

M8 Metal Connector

- Be sure to connect or disconnect the metal connector after turning OFF the Sensor.
- Hold the connector cover to connect or disconnect the metal connector.
- Secure the connector cover by hand. Do not use any pliers, otherwise the connector may be damaged.
- The proper tightening torque range is between 0.3 and 0.4 N m.
 Be sure to tighten the connector securely, otherwise the specified degree of protection may not be maintained or the connector may be disconnected due to vibration.

Wiring Mistakes

Do not make mistakes in wiring, such as mistakes in polarity, otherwise the Sensor may be damaged.

Connection without Load

Do not connect power supply to the Sensor with no load connected, otherwise the internal elements may explode or burn.


Operating Environment

Do not use the Sensor in locations with explosive or flammable gas.

Mounting

Sensor Mounting


Use M3 screws to mount the sensor and tighten each screw to a maximum torque of 0.53 N \bullet m.

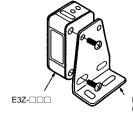

E39-L104 Mounting Bracket (sold separately)

Adjustment

Slits for Through-beam Models (E39-S65A/B/C/D/E/F (Sold Separately))

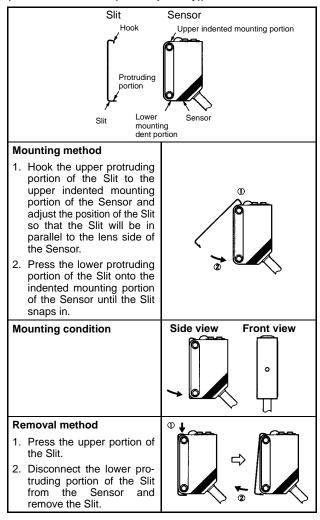

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. E308-E1-1 In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation

Industrial Automation Company

Industrial Sensors Division Sensing Devices and Components Division H.Q. 28th Fl., Crystal Tower Bldg., 1-2-27, Shiromi, Chuo-ku, Osaka 540-6028 Japan Phone: (81)6-6949-6012 Fax: (81)6-6949-6021

Printed in Japan 0799-5M (0799) (A)