

ASNT5010-PQC is available on two evaluation boards: one with negative supply and one with positive supply. Application notes for these two evaluation boards are presented in order of:

- Negative supply on ASNT05_12
- Positive supply on ASNT05_11

By default, ADSANTEC will ship the positive supply evaluation board. Please send us a message through the DigiKey marketplace website if you would like to receive the negative supply version.

The datasheet for ASNT5010-PQC can be accessed through the following <u>LINK</u>.



ASNT5010-PQC on ASNT05_12 Evaluation Board DC-17*Gbps* D-Type Flip-Flop Application Note

Part Description

The ASNT5010-PQC D-type flip-flop accepts a broadband data signal at its differential input port dp/dn and delivers a retimed version of it to its differential output port outp/outn. Retiming of the input data is accomplished by applying a full rate input clock signal to the differential input port cp/cn.

The part is mounted on an ASNT05_12 evaluation board with 50*Ohm* transmission lines to transfer signals to/from the chip to 6 high-speed edge-mount female connectors (Southwest or similar) as shown in Fig. 1. The board has a MOLEX connector for the power supply, as well as signal filters, supply filters, and decoupling networks. The board measures approximately 2.0x2.0 inches, without connectors.

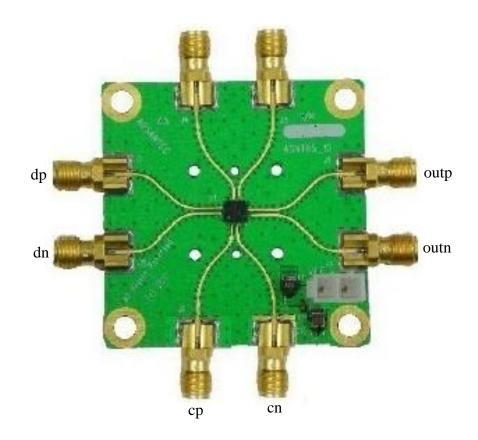


Fig. 1. Layout of ASNT05_12 PCB



The signal and power connectors are described in Table 1 and Table 2 below.

Table 1. Signal Connectors

Name	Name	Signal description	Signal	I/O type
on PCB	on Chip		polarity	
J7	dp	Differential data inputs with internal SE 500hm	Direct	CML
J8	dn	termination to VCC	Inverted	input
J1	outp	Differential outputs with internal SE 500hm termination	Direct	CML
J2	outn	to VCC; require external SE 50 <i>Ohm</i> termination to VCC	Inverted	output
J6	ср	Differential clock inputs with internal SE 500hm	Direct	CML
J5	cn	termination to VCC	Inverted	input

Table 2.	Power	Supply	Connectors
1 0010 2.	10000	Suppry	connectors

Name on PCB	Name on Chip	Supply type	Supply voltage, V
GND	vcc	External ground	0
VEE	vee	Main negative power supply	-3.3

Initial Setup and Basic Functionality

- 1. The part is static sensitive. Please observe anti-static protection procedures!
- 2. Measure the resistance of all connector pins to VCC, including the power supply, while making sure the board is grounded. All I/O ports should measure 50*Ohms* while on the power supply connector, VEE should be high impedance and GND should be a short. Fig. 2 shows the resistance values of the described I/O connectors.

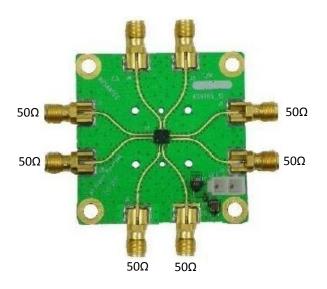


Fig. 2. Impedance of I/O Connectors



- 3. Switch on the first external power supply unit and set it to a negative supply voltage with a value of 0.0V (positive output pin of the unit must be shorted to ground).
- 4. Connect the supply unit's output pins to the PCB's Molex connector marked VEE GND so that the negative output pin is connected to VEE connector pin.
- 5. Gradually increase the negative supply voltage to -3.3V.
- 6. Monitor the supply current in accordance with the part's specifications. Current should be approximately 125mA.
- 7. Apply a differential or SE high-speed data signal to connectors J7/J8. DC blocks or the appropriate shift of voltage levels may be required!
- 8. Apply a differential or SE high-speed full rate clock signal to connectors J1/J2. DC blocks or the appropriate shift of voltage levels may be required!
- 9. Observe a high-speed sampled data signal at connectors J5/J6. Connect them to an oscilloscope or similar device with 50*Ohm* termination to ground either directly or through DC blocks. If a sampled version of the input data signal is not observed, adjust the phase of the input data or clock accordingly.

Board Dimension

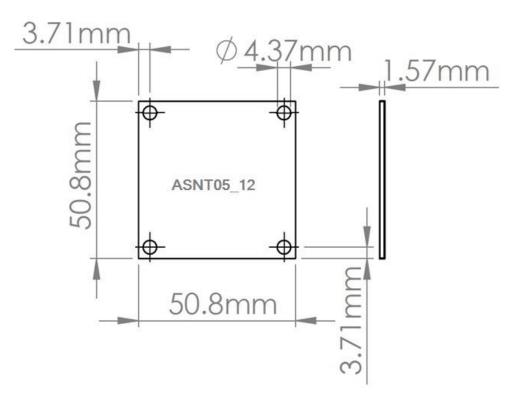


Fig. 3. ASNT05_12 Board Dimensions



ASNT5010-PQC on ASNT05_11 Evaluation Board DC-17*Gbps* D-Type Flip-Flop Application Note

Part Description

The ASNT5010-PQC D-type flip-flop accepts a broadband data signal at its differential input port dp/dn and delivers a retimed version of it to its differential output port outp/outn. Retiming of the input data is accomplished by applying a full rate input clock signal to the differential input port cp/cn.

The part is mounted on an ASNT05_11 evaluation board with 50*Ohm* transmission lines to transfer signals to/from the chip to 6 high-speed edge-mount female connectors (Emerson or similar) as shown in Fig. 4. The board has a MOLEX connector for the power supply, as well as signal filters, supply filters, and decoupling networks. The board measures approximately 2.0x2.0 inches, without connectors.

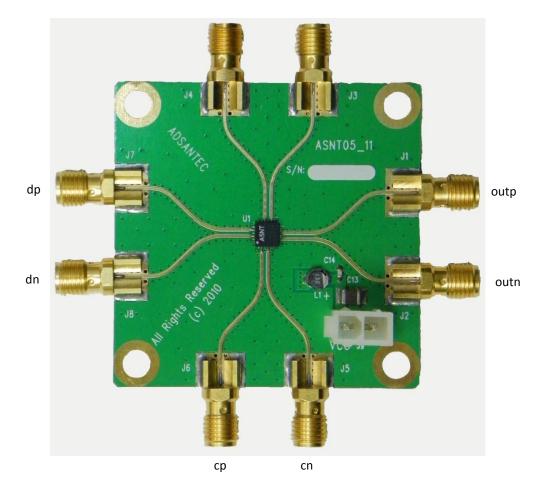


Fig. 4. Layout of ASNT05_11 PCB



The signal and power connectors are described in Table 1 and Table 2 below.

Table 3. Signal Connectors

Name	Name	Signal description	Signal	I/O type
on PCB	on Chip		polarity	
J7	dp	Differential data inputs with internal SE 500hm	Direct	CML
J8	dn	termination to VCC	Inverted	input
J1	outp	Differential outputs with internal SE 500hm termination	Direct	CML
J2	outn	to VCC; require external SE 50 <i>Ohm</i> termination to VCC	Inverted	output
J6	ср	Differential clock inputs with internal SE 500hm	Direct	CML
J5	cn	termination to VCC	Inverted	input

Table 4.	Power	Supply	Connectors
10010 1.	10000	Supply	connectors

Name on PCB	Name on Chip	Supply type	Supply voltage, V
VCC	vcc	Main postive power supply	+3.3
GND	vee	External ground	0

Initial Setup and Basic Functionality

- 10. The part is static sensitive. Please observe anti-static protection procedures!
- 11. Measure the resistance of all connector pins to VCC, including the power supply, while making sure the board is grounded. All I/O ports should measure 50*Ohms* while on the power supply connector, VCC should be a short, and GND should be high impedance. Fig. 5 shows the resistance values of the described I/O connectors.

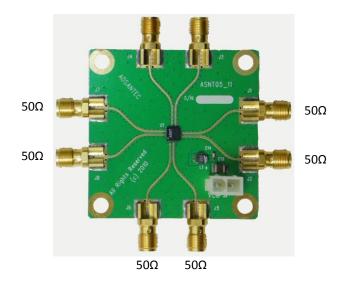


Fig. 5. Impedance of I/O Connectors



- 12. Switch on the first external power supply unit and set it to a positive supply voltage with a value of +0.0V (negative output pin of the unit must be shorted to ground).
- 13. Connect the supply unit's output pins to the PCB's Molex connector marked VCC GND so that the positive output pin is connected to the VCC connector pin.
- 14. Gradually increase the positive supply voltage to +3.3V.
- 15. Monitor the supply current in accordance with the part's specifications. Current should be approximately 125mA.
- 16. Apply a differential or SE high-speed data signal to connectors J7/J8. DC blocks or the appropriate shift of voltage levels may be required!
- 17. Apply a differential or SE high-speed full rate clock signal to connectors J6/J5. DC blocks or the appropriate shift of voltage levels may be required!
- 18. Observe a high-speed sampled data signal at connectors J1/J2. Connect them to an oscilloscope or similar device with 50*Ohm* termination to ground through DC blocks. If a sampled version of the input data signal is not observed, adjust the phase of the input data or clock accordingly.

Board Dimensions

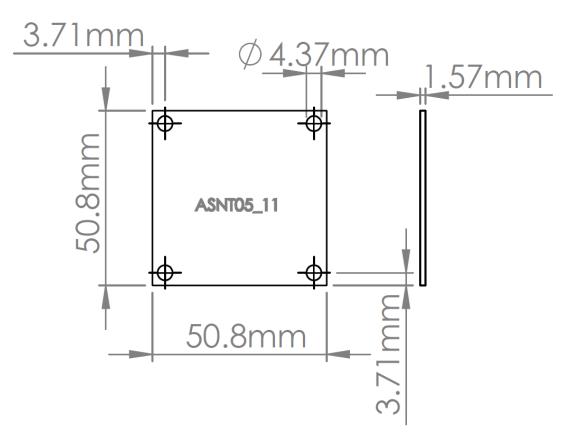


Fig. 6. ASNT05_11 Board Dimensions



Revision History

Revision	Date	Changes
1.0.1	09-2020	Initial Release