

# PRV240FS

## Proving Unit

### Instruction Sheet

#### Introduction

The PRV240FS Proving Unit (the Product) is an electronic voltage source. This Product provides a safe and easy method to verify proper operation of the T6-600/T6-1000 Electrical Tester with FieldSense technology or other test tools. Use it to verify either an energized source or a de-energized source. Also use it in cases where no known voltage source is available to verify a test tool.

The Product does not require personal protective equipment (PPE) unless your environment requires minimal PPE such as a hard hat, safety glasses, or ear plugs.

#### How to Contact Fluke

To contact Fluke, call one of the following telephone numbers:

- Technical Support USA: 1-800-44-FLUKE (1-800-443-5853)
- Calibration/Repair USA: 1-888-99-FLUKE (1-888-993-5853)
- Canada: 1-800-36-FLUKE (1-800-363-5853)
- Europe: +31 402-675-200
- Japan: +81-3-6714-3114
- China: +86-400-921-0835
- Singapore: +65-6799-5566
- Anywhere in the world: +1-425-446-5500

Or, visit Fluke's website at [www.fluke.com](http://www.fluke.com).

To register your product, visit <http://register.fluke.com>.

To view, print, or download the latest manual supplement, visit <http://us.fluke.com/usen/support/manuals>.

#### Safety

A **Warning** identifies conditions and procedures that are dangerous to the user.

##### Warning

**To prevent possible electrical shock, fire, or personal injury:**

- Read all safety information before you use the Product.
- Carefully read all instructions.
- Do not alter the Product and use only as specified, or the protection supplied by the Product can be compromised.
- Do not touch voltages >30 V ac rms, 42 V ac peak, or 60 V dc.
- Do not use the Product around explosive gas, vapor, or in damp or wet environments.

- Do not use the Product if it operates incorrectly.
- Examine the case before you use the Product. Look for cracks or missing plastic. Carefully look at the insulation around the terminals.
- Do not use the Product if it is altered or damaged.
- Remove the batteries if the Product is not used for an extended period of time, or if stored in temperatures above 50 °C. If the batteries are not removed, battery leakage can damage the Product.
- You must close and lock the battery door before you operate the Product.

#### Symbols

Symbols used in the instructions or on the Product are shown in Table 1.

Table 1. Symbols

Symbol	Definition
	Consult user documentation.
	WARNING. HAZARDOUS VOLTAGE. Risk of electric shock.
	WARNING. RISK OF DANGER.
	Battery
	FieldSense Measurement: Fluke voltage/current sensing technique.
	Certified by CSA Group to North American safety standards.
	Conforms to relevant Australian EMC standards.
	Conforms to European Union directives.
	Conforms to relevant South Korean EMC Standards.
	This product complies with the WEEE Directive marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste.

#### Operation

Table 2 is a list of the controls and interface of the Product. See Figure 1 for the location of each item.

Table 2. Product Overview

Item	Description
1	Function selection
2	+ Terminal
3	AC/DC LED
4	- Terminal
5	Test Lead Ground Contact
6	Test Lead Ground Contact LED
7	Fork saddle
8	Finger Ground Contact LED
9	Finger Ground Contact

#### FieldSense Measurement without Test Lead

Before verification, set up the T6 for a FieldSense measurement without the test leads. See the T6 Quick Reference Guide.

To verify measurement:

1. Move the switch to the FieldSense position. See Figure 3.
2. Insert the T6 fork into position on the Product.
3. Push and hold the finger ground contact to activate the Product.  
The Product LED turns green and the T6 display shows a 240 V measurement.

#### FieldSense Measurement with Ground Lead

Before verification, set up the T6 for a FieldSense measurement with the ground lead. See the T6 Quick Reference Guide.

To verify measurement:

1. Move the switch to the FieldSense position. See Figure 4.
2. Insert the T6 fork into position on the Product.
3. Place the black test lead from the test tool into the test lead ground contact terminal and press down firmly.  
The Product LED turns green and the T6 display shows a 240 V measurement.

#### AC/DC Measurement

Before verification, set up the T6 or other test tool for ac/dc measurement with the test leads.

To verify measurement:

1. Move the switch to the AC or DC position. See Figure 5.
2. Place the red test lead from the test tool into the (+) terminal and press down firmly.
3. Place the black test lead from the test tool into the (-) terminal and press down firmly.  
The Product LED turns green and the T6 display shows a 240 V measurement.

#### Battery Replacement

Push the finger ground contact button to check the battery condition. The finger ground contact LED turns green to show good battery condition. If the LED does not turn on, replace the batteries.

##### Warning

**To prevent possible electrical shock, fire, or personal injury:**

- Do not operate the Product with covers removed or the case open. Hazardous voltage exposure is possible.
- Repair the Product before use if the battery leaks.
- Have an approved technician repair the Product.

To replace the batteries:

1. Turn the battery-door latch until the unlock symbol aligns with the arrow. See Figure 2.
2. Lift off the battery door.
3. Insert or replace the four AA batteries. Use the correct battery orientation.
4. Install the battery door.
5. Turn the battery-door latch until the locked symbol aligns with the arrow.

#### Specifications

Output voltage	240 V ac rms or dc..... ±10 % ≥1 MΩ
LED power indicator.....	Turns on when output voltage is present
Battery .....	4 x AA Alkaline batteries NEDA 15 A IEC LR6
Battery life .....	3 hr based on a 10 s test cycle or 1100 tests

Operating temperature.....	-10 °C to +50 °C
Operating humidity.....	0 % to 90 % (0 °C to 35 °C) 0 % to 70 % (35 °C to 55 °C)
Operating altitude.....	2000 m
Dimensions .....	11.7 cm x 7.4 cm x 4.5 cm (4.6 in x 2.9 in x 1.75 in)
Weight.....	0.32 kg (12 oz) includes batteries
<b>Safety</b>	
General .....	IEC 61010-1, Pollution Degree 2
Measurement .....	IEC 61010-2-030 240 Vrms/240 Vdc
<b>Electromagnetic Compatibility (EMC)</b>	
International.....	IEC 61326-1: Controlled Electromagnetic Environment CISPR 11: Group 1, Class A

*Group 1: Equipment has intentionally generated and/or uses conductively-coupled radio frequency energy that is necessary for the internal function of the equipment itself.*

*Class A: Equipment is suitable for use in all establishments other than domestic and those directly connected to a low-voltage power supply network that supplies buildings used for domestic purposes. There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted and radiated disturbances.*

*Caution: This equipment is not intended for use in residential environments and may not provide adequate protection to radio reception in such environments.*

*Emissions that exceed the levels required by CISPR 11 can occur when the equipment is connected to a test object.*

Korea (KCC)..... Class A Equipment (Industrial Broadcasting & Communication Equipment)

*Class A: Equipment meets requirements for industrial electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and not to be used in homes.*

USA (FCC)..... 47 CFR 15 subpart B. This product is considered an exempt device per clause 15.103.

#### LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for one year from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation	Fluke Europe B.V.
P.O. Box 9090	P.O. Box 1186
Everett, WA 98206-9090	5602 BD Eindhoven
U.S.A.	The Netherlands

11/99

Fluke Corporation certifies this Product was tested and verified with applicable calibration procedures during the manufacturing process. Fluke's quality system controls these procedures.

The instruments used during the testing and calibration of this Product are traceable to SI units through internationally recognized measurement standards.

This document is not a certificate of calibration or traceability. To obtain a certificate of calibration contact the nearest Fluke service center to process an order to have your Product returned for calibration. A nominal fee is charged for calibration service.

Figure 1



Figure 2

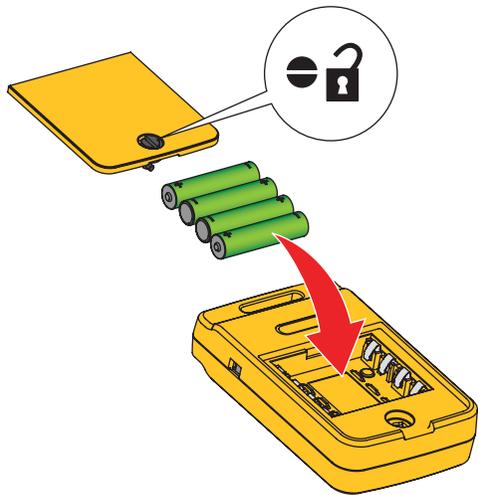


Figure 3

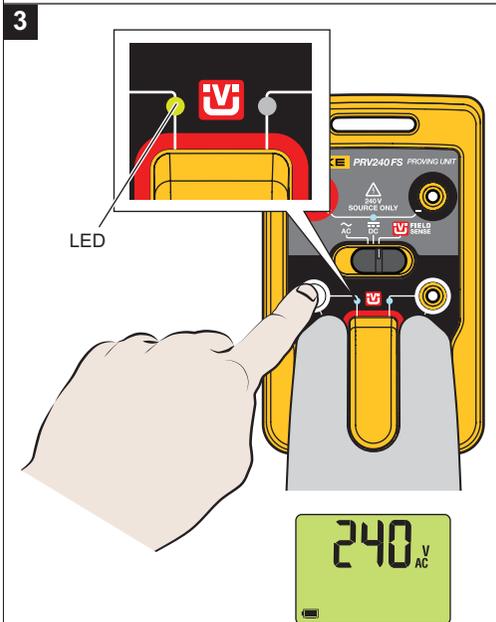
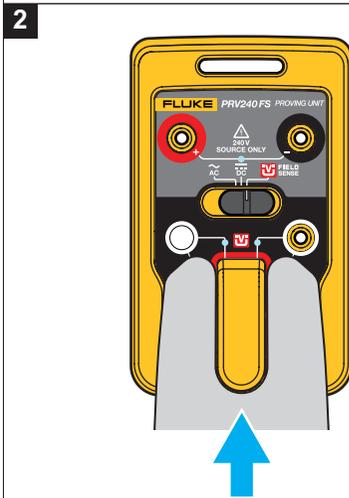
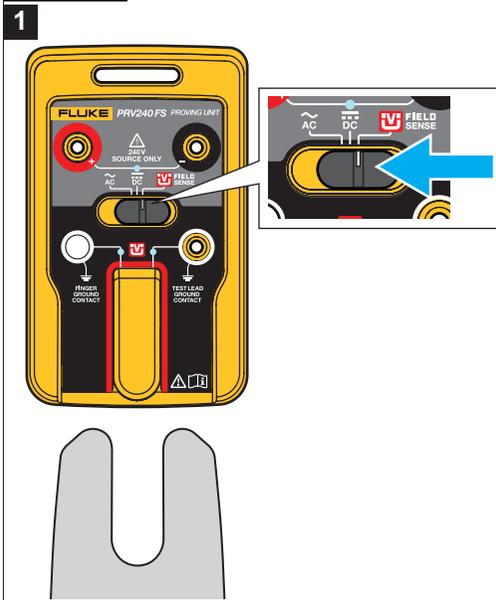


Figure 4



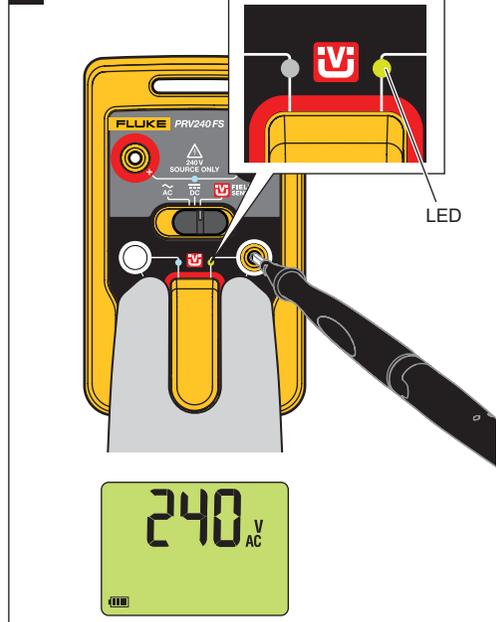


Figure 5

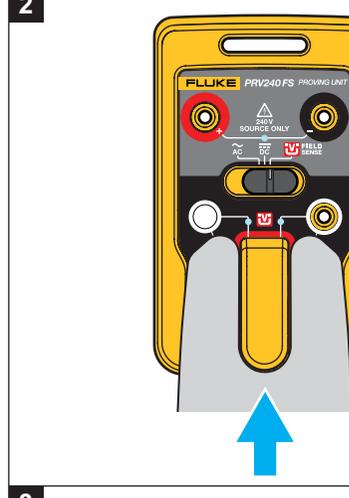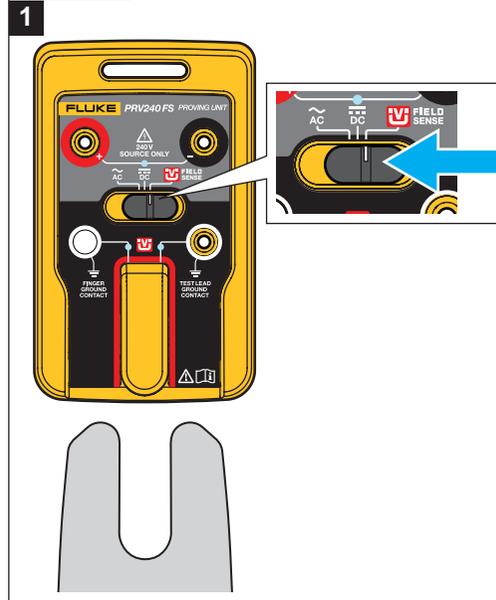