PS015-0212

Protection System - Double Gown



Product Description:

- Protection System Double Gown
- Holds disposable or reusable gowns, aprons, or coveralls/ jumpsuits, three boxes of gloves, two boxes of earloop masks, and miscellaneous items
- Keyholes for wall mounting, or door hanger cut out for use with wall or door hanger
- Quartz Beige ABS Plastic

Primary Area for Product Usage:

· Anywhere personal protection equipment is needed

Dispenses:

- Left: Gowns, aprons, or coveralls/jumpsuits no larger than 14.80"W x 15.25"H x 4.50"D (37.6 cm x 38.7 cm x 11.4 cm)
- Top right: Box(es) no larger than 4.88"W x 7.99"H x 4.50"D (12.4 cm x 20.3 cm x 11.4 cm)
- Middle right: Box(es) no larger than 10.00"W x 5.35"H x 4.50"D (25.4 cm x 13.6 cm x 11.4 cm)
- Bottom right: Item(s) no larger than 9.85"W x 6.13"H x 4.50"D (25.0 cm x 15.6 cm x 11.4 cm)

Package Specifications:

- Package Quantity: 1 per case
- $26"W \times 32"H \times 6"D (66 cm \times 81.3 cm \times 15.2 cm)$
- 13.0 lbs (5.9 kg) approximated

Product Specifications (overall external dimensions):


- 25.15"W x 30.75"H x 4.75"D (63.9 cm x 78.1 cm x 12.1 cm)
- 9.4 lbs (4.3 kg) approximated

Mounting Specifications:



PS014-0212: Protection System - Gloveless (shown below)

PS015-0512: Protection System - Double Gown

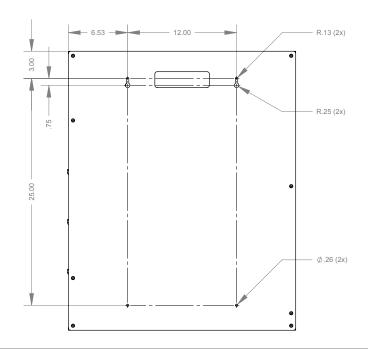

Related Products (each sold separately):

PS015-0212

Protection System - Double Gown

Installation Instructions/Characteristics & Care

Installation

Always mount dispensers securely prior to loading with product.

Compartments are versatile and will accommodate many different products, such as small wipe canisters, rolled face shields, and folded laundered gowns.

Care and Construction ABS Plastic


Material Characteristics

Designed for Long-Term, Heavy-Duty Applications

The combination of copolymers (Acrylonitrile, Butadiene, and Styrene) gives ABS an excellent combination of strength, rigidity, and toughness. The fauxwood finish is ARVINYL laminate created from a semi-rigid film.

ABS is chemical and stress-crack resistant. It is tough, dimensionally stable, and will hold up to long-term use. To ensure product longevity, fauxwood products should not be mounted in very hot or cold areas.

- Mount securely to a wall with screws approved and supplied by building maintenance.
- Dispenser can be mounted onto a BOWMAN® door or wall hanger through the cutout in the back. (please see chosen hanger's datasheet for details)

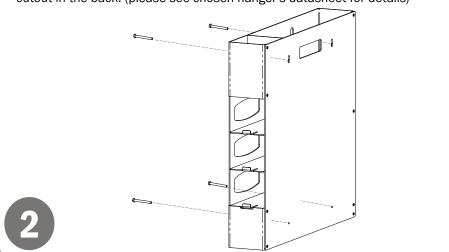

Care and Cleaning

Use mild soap and water to clean. Petroleum-based oils, solvents, and paints should not be used.

Standard hospital cleaning supplies are approved for use on our ABS plastic products.

Parts included:

Dispenser

Tools Required:

· No tools required to assemble dispenser