BOWMAN[®] Dispensers Organize-Contain-Comply



Related Products (each sold separately):

• MP-085: Caddy Dispenser - Clip On (shown below)

Product Description:

- Caddy Dispenser Clip-On
- Holds a variety of medical supplies including wet wipe canisters in various sizes
- Clips to the side of ${\rm BOWMAN} \ensuremath{\mathbb{R}}$ protection systems that are greater than 4.00" deep
- Clear PETG Plastic

Primary Area for Product Usage:

Anywhere a BOWMAN® protection organizer is placed

Dispenses:

- Canisters no larger than 5.98"W x 7.52"H x 5.98"D (15.2 cm x 19.1 cm x 15.2 cm)
- Can be used to hold miscellaneous items in bulk

Package Specifications:


- Package Quantity: 6 per case
- 21"W x 14"H x 10"D (53.3 cm x 35.6 cm x 25.4 cm)
- 8 lbs (3.6 kg) approximated

Product Specifications (overall external dimensions):

- 6.20"W x 7.33"H x 6.65"D (15.7 cm x 18.6 cm x 16.9 cm)
- 0.9 lb (0.4 kg) approximated

Mounting Specifications:



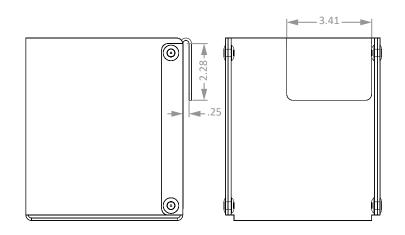


BOWMAN[®] Dispensers


MP-015 Caddy Dispenser - Clip On

Installation Instructions/Characteristics & Care

Installation

Always mount dispensers securely prior to loading with product.

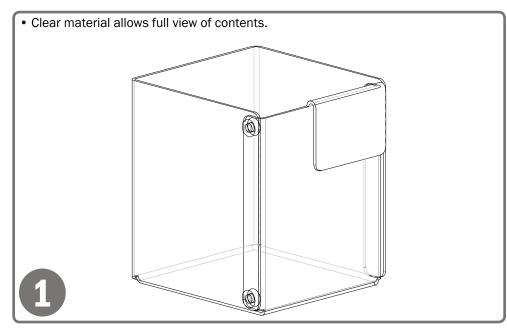

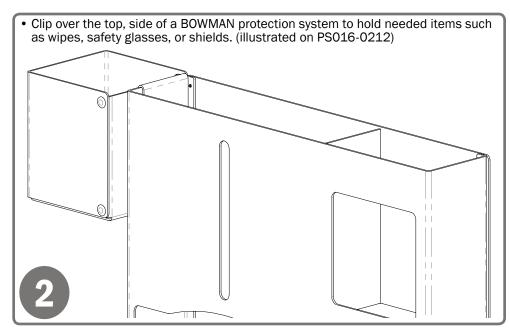

Parts included:

Dispenser

Tools Required:

No tools required to assemble dispenser

Care and Construction PETG Plastic

Material Characteristics

Designed for Long-Term, Heavy-Duty Applications

Copolyester resin is designed for heavy-duty applications, and is used by BOWMAN® Dispensers. We never use acrylic in our products.

Copolyester (PETG) is typically 15-20 times tougher than general purpose acrylic. PETG is made to withstand handling and reduce losses due to breakage.

PETG resists a variety of chemicals and commonly used cleaning agents, such as PDI wipes. It is tough and durable (not brittle), providing years of trouble-free functionality and long life.

Clear optical characteristics mean the viewer can see the content, read text, and see true colors through the material. It complies with FDA regulations for food contact.

Care and Cleaning

Most cleaning chemicals do not weaken the surface or cause damage to the material. Suggested cleaning method is to use a soft cloth, warm water, and mild soap.

MP-015 - Installation/Characteristics & Care

Information subject to change without notice. Dimensions are approximate. (Not to scale) 800.962.4660 • www.Bowman ©2019 BOWMAN® Manufacturing Company, Inc. All Rights Reserved. Product specifications subject to change without notification. Consumables not included. MP015TDSa

BOWMAN Dispensers 20325 71st Ave NE, Suite D, Arlington, WA 98223 800.962.4660 • www.BowmanDispensers.com