

www.rovingnetworks.com

rn-121-ds 1/20/2012

# "WiFly GX" 802.11G Super Module

#### **Features**

- 802.11 b/g embedded module with data rates up to 54Mbps
- Wi-Fi Alliance certified for WPA2-PSK
- Ultra-low power 4uA sleep, 40mA Rx, 210mA Tx (max)
- Multiple sleep modes, wake up timer or signal
- Small form factor 28mm x 40.8mm
- UART, RS-232 or RS-485 hardware interface
- On board ceramic chip antenna and U.FL connector for external antenna
- 10 General Purpose Digital IOs
- 8 analog sensor inputs
- Onboard ECOS-OS, TCP/IP stack
- Real-time clock for wakeup and time stamps
- Accepts wide voltage range input 3.3V 12VDC (RN-121 and RN-123)
- Industrial voltage range input 6V 48VDC (RN-125)
- Switched power supply for external sensors
- Supports Adhoc and infrastructure networking
- FCC / CE / ICS certified and RoHS compliant.

#### **Applications**

- Wireless thermostats
- RS232/RS485 cable replacement
- Remote equipment monitoring
- Scanners, GPS and measurement systems
- Industrial sensor and control
- Security
- Home Automation
- Medical devices



## **Description**


The WiFly GX module is a stand alone, embedded wireless LAN/WAN access device. Because of its small form factor and extremely low power consumption, the RN-121G is perfect for mobile wireless applications such as asset monitoring, GPS tracking and portable devices. The WiFly GX simplifies the integration and development of your application by including an on board TCP/IP stack and networking application programs such as telnet and ftp. The hardware requires only four connections (PWR, TX, RX, GND) to create a simple wireless data connection. Additionally, continuously sampled analog inputs transmit audio, temperature, motion, or acceleration data without requiring additional hardware in your end application. The WiFly GX module uses a straight forward ASCII command set for configuration and programming. Once the WiFly GX is set up it can automatically associated and authenticate with a network, making your device accessible worldwide. The WiFly GX includes a high-speed UART and SPI interfaces that allow high-speed data transfer. The WiFly GX module is a complete wireless solution



www.rovingnetworks.com

1/20/2012

## **Block Diagram**

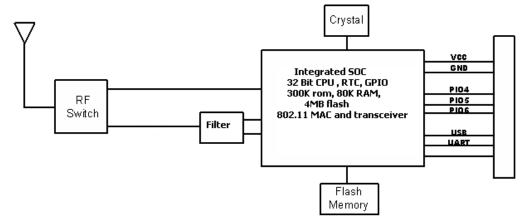

#### Overview

- Host Data Rate of up to 1Mbps for UART
- Low power 110mA TX, 35mA idle, 4uA deep sleep
- Real time clock for time stamping, auto-sleep and auto-wakeup modes
- UART and wireless configuration using simple ASCII commands.
- Over the air firmware upgrade (FTP)
- Three on board LEDs for status.
- 32 pin Standard 2mm DIP socket pin spacing
- 802.11i: Open, WEP-64, WEP-128, WPA, WPA2
- Built in networking applications DHCP, UDP, DNS, ARP, ICMP, TCP, HTTP Client, FTP
- Supports 802.11 power save modes
- · Commands for scanning networks roaming modes

#### **High-speed UART features**

- 64 bytes FIFO (transmitter and receiver)
- Fully compatible with industrial standard 16C450 and equivalent
- Auto hardware flow control using RTS/CTS
- Auto software flow control with programmable Xon/Xoff characters

### RS-485 features (RN-125 only)

- Accepts 6Vdc to 48Vdc power
- RS-485 signaling with auto-direction control
- Onboard line termination resistors
- Hot-Swappable for Telecom Applications
- 1/4-Unit Load, Allowing Up to 128 Transceivers on the Bus



www.rovingnetworks.com

1/20/2012

## **Environmental Conditions**

| Parameter                     | Value           |
|-------------------------------|-----------------|
| Temperature Range (Operating) | -30 °C ~ +85 °C |
| Temperature Range (Storage)   | -40 °C ~ +85 °C |
| Relative Humidity (Operating) | ≤90%            |
| Relative Humidity (Storage)   | ≤90%            |

# **Radio Characteristics**

| Parameter                          | Specifications   |  |  |
|------------------------------------|--|--|--|
| Frequency                          | 2402 ~ 2480MHz   |  |  |
| Modulation                         | 802.11b compatibility: DSSS(CCK-11, CCK-5.5, DQPSK-2, DBPSK-1) 802.11g: OFDM (default) |  |  |
| Channel intervals                  | 5MHz   |  |  |
| Channels                           | 1 - 14   |  |  |
| Transmission rate (over the air)   | 1 – 11Mbps for 802.11b / 6 – 54Mbps for 802.11g  |  |  |
| Receive sensitivity                | -85dBm typ.  |  |  |
| Output level (Class1)              | +18dBm   |  |  |
| Maximum RF input to U.FL connector | 10 dBm   |  |  |




www.rovingnetworks.com

1/20/2012

# Pin Description: RN-121 (TTL Uart interface)

Note: Any unused pins should be left floating (No Connect)

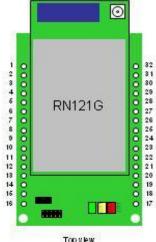

| Top  | 'n | 46 | ь | 187 |
|------|----|----|---|-----|
| 1.94 | ۴  | ٠  |   | w   |

| Pin | Name        | Description  | Default                  |
|-----|-------------|--|--------------------------|
| 1   | PIO7        | General Purpose IO   | No Connect               |
| 2   | SPOWER      | Switched sensor output power                               | No Connect               |
| 3   | SENSE-4     | Analog sensor input (1.2V)                                 |                          |
| 4   | SENSE-5     | Analog sensor input (1.2V)                                 |                          |
| 5   | SENSE-6     | Analog Sensor Input (1.2V)                                 |                          |
| 6   | SENSE-7     | Analog Sensor Input (1.2V)                                 |                          |
| 7   | PIO6        | Controls red LED   | Input                    |
| 8   | PIO9        | General purpose IO   | Sets factory defaults    |
| 9   | DEBUG_RX    | 2 <sup>nd</sup> serial port                                | No Connect               |
| 10  | DEBUG_TX    | 2 <sup>nd</sup> serial port                                | No Connect               |
| 11  | RESET       | Active low with 10k built in pullup                        |                          |
| 12  | WAKE        | Force the module to wake up, input to module,              | No Connect               |
|     |             | 31us min. pulse  |                          |
| 13  | VIN         | 3.6-16VDC  |                          |
| 14  | VREG        | 3.3V LDO output  |                          |
| 15  | VBATT       | Tie to VREG if USING VIN                                   | Battery option           |
| 16  | GND         | Ground   |                          |
| 17  | VDD         | 3.3V out-in  | Power input              |
| 18  | SPI_MOSI    | Spi port MOSI line (WiFly GX is the master)                | Output                   |
| 19  | SPI_CK      | Spi port clock line (WiFly GX is the master)               | Output                   |
| 20  | SPI_CS      | Spi port chip-select line (WiFly GX is the master)         | Output                   |
| 21  | SPI_MISO    | Spi port MISO line (WiFly GX is the master)                | Input                    |
| 22  | PIO5        | Controls yellow LED  | Connect/disconnect input |
| 23  | PIO4        | Controls green LED   | Connection status output |
| 24  | RTSB/PIO13  | HW flow control output (Onboard UART) / General purpose IO | TTL output               |
| 25  | CTSB/PIO12/ | HW flow control input (Onboard UART) / General             | TTL input                |
|     | SENSE-1     | purpose IO / Analog sensor input (3.3V)                    |                          |
| 26  | RXB/        | TTL Data IN (Onboard UART) / Analog sensor                 | Input                    |
|     | SENSE-0     | input (3.3V)   |                          |
| 27  | TXB         | TTL Data Out (Onboard UART)                                | Output                   |
| 28  | NC          |  | No Connect               |
| 29  | SENSE-3     | Analog sensor input (3.3V)                                 | No Connect               |
| 30  | SENSE-2     | Analog sensor input (3.3V)                                 | No Connect               |
| 31  | NC          |  | No Connect               |
| 32  | GND         | Ground   |                          |




www.rovingnetworks.com

1/20/2012

Pin Description: RN-123 (RS-232 interface)

Note: Any unused pins should be left floating (No Connect)

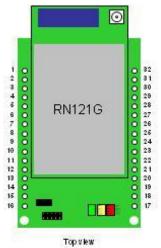

Pin Name Description **Default** PIO7 General Purpose IO No Connect 2 **SPOWER** Switched sensor output power No Connect SENSE-4 Analog sensor input (1.2V) 3 4 SENSE-5 Analog sensor input (1.2V) Analog Sensor Input (1.2V) 5 SENSE-6 SENSE-7 Analog Sensor Input (1.2V) 6 PIO<sub>6</sub> Controls red LED 7 Input General purpose IO 8 PIO9 Sets factory defaults DEBUG\_RX 2<sup>nd</sup> serial port 9 No Connect 2<sup>nd</sup> serial port 10 DEBUG TX No Connect Active low with 10k built in pullup 11 RESET 12 WAKE Force the module to wake up, input to module, No Connect 31us min. pulse NC 13 No Connect 6V to 9V DC 14 VIN No Connect 15 NC No Connect 16 **GND** Ground 17 P3.3V 3.3V out-in No Connect **ENA 3.3V** Enable 3.3V regulator (pull low to disable) No Connect 18 19 TXB-RS485 line 20 TXA+ RS485 line PIO8 General purpose IO 21 No Connect Connect/disconnect input 22 PIO<sub>5</sub> Controls yellow LED 23 Controls green LED PIO4 Connection status output 24 **RTSB** TTL HW flow control output No Connect 25 **CTSB** TTL HW flow control input No Connect 26 No Connect **RXDB** TTL Data IN 27 TXDB TTL Data Out No Connect 28 **RXDA** RS232 Data IN RS232 input 29 **TXDA** RS232 Data Out RS232 output 30 RTSA RS232 HW flow control output RS232 output 31 **CTSA** RS232 HW flow control input RS232 input **GND** 32 Ground

NOTE: Vin on RN-123 is on Pin 14 (6V to 9V DC)



www.rovingnetworks.com

1/20/2012

# **Electrical Characteristics: RN-123 (RS-232 interface)**

| Parameter                       | Min | Тур.  | Max. | Unit       |
|---------------------------------|-----|-------|------|------------|
| Supply Voltage VIN              | 6.0 | 6V-9V | 9    | VDC        |
| Supply Voltage P3.3V            | 3.0 | 3.3   | 3.6  | VDC        |
| Average power consumption       |     |       |      |            |
| Standby/Idle (default settings) | -   | 35    | -    | mA         |
| Sleep                           | 10  | 12    | 15   | uA (micro) |
| Connected(idle, RX)             |     | 40    |      | mA         |
| Connected(TX)                   |     | 110   | 180  | mA         |




www.rovingnetworks.com

1/20/2012

Pin Description: RN-125 (RS-485 interface)

Note: Any unused pins should be left floating (No Connect)

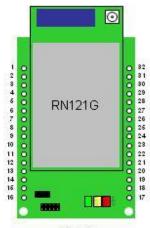

Top view

| Pin | Name     | Description                                   | Default                  |
|-----|----------|---|--------------------------|
| 1   | PIO7     | General Purpose IO                            | No Connect               |
| 2   | SPOWER   | Switched sensor output power                  | No Connect               |
| 3   | SENSE-4  |   | No Connect               |
| 4   |          | Analog sensor input (1.2V)                    |                          |
| _   | SENSE-5  | Analog sensor input (1.2V)                    |                          |
| 5   | SENSE-6  | Analog Sensor Input (1.2V)                    |                          |
| 6   | SENSE-7  | Analog Sensor Input (1.2V)                    |                          |
| 7   | PIO6     | Controls red LED                              |                          |
| 8   | PIO9     | General purpose IO                            | Sets factory defaults    |
| 9   | DEBUG_RX | 2 <sup>nd</sup> serial port                   | No Connect               |
| 10  | DEBUG_TX | 2 <sup>nd</sup> serial port                   | No Connect               |
| 11  | RESET    | Active low with 10k built in pullup           |                          |
| 12  | WAKE     | Force the module to wake up, input to module, | No Connect               |
|     |          | 31us min. pulse                               |                          |
| 13  | VIN      | 6-48VDC                                       |                          |
| 14  | P5V      | 5VDC input option                             | No Connect               |
| 15  | T2       | RS485 Terminator – Tie to P5V to terminate    | No Connect               |
| 16  | GND      | Ground  |                          |
| 17  | P3.3V    | 3.3V out-in                                   | No Connect               |
| 18  | ENA_3.3V | Enable 3.3V regulator (pull low to disable)   | No Connect               |
| 19  | TXB-     | RS485 line                                    | RS485                    |
| 20  | TXA+     | RS485 line                                    | RS485                    |
| 21  | PIO8     | General purpose IO                            | No Connect               |
| 22  | PIO5     | Controls yellow LED                           | Connect/disconnect input |
| 23  | PIO4     | Controls green LED                            | Connection status output |
| 24  | NC       |   | No Connect               |
| 25  | NC       |   | No Connect               |
| 26  | NC       |   | No Connect               |
| 27  | NC       |   | No Connect               |
| 28  | NC       |   | No Connect               |
| 29  | NC       |   | No Connect               |
| 30  | NC       |   | No Connect               |
| 31  | T1       | RS485 Terminator – Tie to GND to terminate    | No Connect               |
| 32  | GND      | Ground  |                          |



www.rovingnetworks.com

1/20/2012

# **Electrical Characteristics: RN-125 (RS485 interface)**

| Parameter                       | Min | Тур. | Max. | Unit       |
|---------------------------------|-----|------|------|------------|
| Supply Voltage VIN              | 6.0 | 24   | 48   | VDC        |
| Supply Voltage P5V              | 4.0 | 5.0  | 6.0  | VDC        |
| Average power consumption       |     |      |      |            |
| Standby/Idle (default settings) | 1   | 35   | -    | mA         |
| Sleep                           | 10  | 12   | 15   | uA (micro) |
| Connected(idle, RX)             |     | 40   |      | mA         |
| Connected(TX)                   |     | 110  | 180  | mA         |

<sup>\*\*</sup>Note: The 3.3V Power input should not be used to power the RN-125 since the RS-485 driver requires a higher input voltage.



www.rovingnetworks.com

1/20/2012

## **Design Concerns**

- 1. **Reset circuit**. Reset is active LOW, is optional and does not need to be connected. There is a built in voltage monitor that will pull Reset LOW (open drain FET) if the input voltage drops below 2.7VDC. If external reset is desired, use an OPEN DRAIN driver and do not drive the Reset pin to any voltage > 1.0 Vdc.
- 2. Powering the WiFly Module. There are 3 options to power the RN-121.
  - Supply 3.6 to 16VDC power to VIN (pin 13). Tie VREG (pin 14) to VBATT (pin 15).
  - Apply 3.3VDC regulated power to VDD (pin 17).
  - Apply battery = 2.0 to 3.0VDC to VBATT (pin 15).

If VIN is powered, VREG will supply 3.3VDC output and can be used for other circuits, with a current limitation of 50 ma.

**Warning**: Placing 5VDC or any voltage above 3.3Vdc into the VDD pins of the module will permanently damage the radio module. Be sure to use the VIN = pin 13 power pin for any power supplied that is > 3.3VDC.

- 3. **Factory reset PIO9 (pin 8).** It is a good idea to connect this pin to a switch, or jumper, or resistor, so it can be accessed. This pin can be used to reset the module to FACTORY DEFAULTS and is often critical in situations where the module has been mis-configured.
- **4. GPIO connections:** Placing 3.3Vdc into the PIO's while they are set as outputs will permanently damage the radio modules. The failure mode is a short across GND and VCC. Use a 10KΩ resistor in series or a 10KΩ pull up resistor for input and output PIO's respectively.
- 5. **Sensor connections.** The Sensor inputs SENS1-8 are extremely sensitive to over voltage. Under no conditions should these pins be pulled high above 1.2VDC. Placing any voltage above this will permanently damage the radio module.
- 6. **Connection status.** PIO5 is available to drive an LED, and blinks at various speeds to indicate status. PIO2 is an output which directly reflects the connection state, it goes HIGH when connected, and LOW otherwise.
- 7. *Minimizing Radio interference.* When integrating the WiFly module with on board chip antenna be sure the area around the chip antenna end the module protrudes at least 5mm from the PCB and any metal enclosure. If this is not possible use the external antenna option with the U.FL to reverse polarity SMA connector.
- 8. **Connecting to the GPIO.** Placing 3.3Vdc into the PIO's while they are set as outputs will permanently damage the radio. The failure mode is short across GND and VCC. Use a 10KO resistor is series or a 10KO pull up resistor for input and output PIO's respectively.
  - Make sure to connect a common ground when using the external TX, RX inputs on the 0 3.3Vdc
  - For a 3 wire DB-9 interface (tx, rx, gnd only) connect/short CTS to RTS, Factory default is hardware flow control enabled CTS and RTS connected.
  - When using a 5.0Vdc Input, PIO's require a 10K ohm series resistor. PIO's are 0-3.3Vdc not 5 volt tolerant.
- 9. *Headers.* The P/N for 8-pin header 2mm Male and female headers from Digikey:

Male header: P/N: 3M9327-ND Female header: P/N: 3M9403-ND

Two of each are required to make a 16 pin header.



www.rovingnetworks.com

1/20/2012



www.rovingnetworks.com

1/20/2012

## **Compliance Information**

- FCC Certified
- Environmentally friendly RoHS compliant

## Ordering Information

| Part Number                  | Description   |  |  |
|------------------------------|---|--|--|
| RN-121                       | UART and SPI interfaces, pin compatible with RN-111B        |  |  |
| RN-121-TEMP                  | With onboard temperature and humidity sensors               |  |  |
| RN-122                       | With two UARTS, one high-speed, pin compatible with RN-111B |  |  |
| RN-123                       | With RS-232 interface                                       |  |  |
| RN-125 With RS-485 interface |   |  |  |
|                              |   |  |  |
|                              |   |  |  |
| Fo                           | For other configurations, contact Roving Networks directly. |  |  |

Visit <a href="http://www.rovingnetworks.com">http://www.rovingnetworks.com</a> for current pricing and a list of distributors carrying our products.

Copyright © 2009 Roving Networks. All rights reserved.

Roving Networks reserves the right to make corrections, modifications, and other changes to its products, documentation and services at any time. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

Roving Networks assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using Roving Networks components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

Roving Networks products are not authorized for use in safety-critical applications (such as life support) where a failure of the Roving Networks product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use.

All other trademarks are property of their respective owners.