
### Features

- Easy front (M18 nut) and side (M3 bolt/nut) installation
- NPN open collector / PNP open collector simultaneous output
- Sensing distance: Through-beam type 20m / Retroreflective type 4m / Diffuse reflective type 1m, 300mm
- Small size: W14×H34.5×L28mm
- M.S.R. (Mirror Surface Rejection) function prevents malfunction from reflective objects such as metals or mirrors (retroreflective type)
- · Sensitivity adjuster
- Light ON/Dark ON selectable by switch
- Operation indicator (red LED) and stability indicator (green LED)
- · Power reverse polarity protection circuit, Output short over current protection circuit
- Interference prevention function (except through-beam type)
- IP67 protection structure (IEC standard)







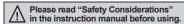

Reflector (MS-2A)

Reflective tape (MST Series)

(ロ) Fiber Optic Sensors

SENSORS

MOTION DEVICES

(C) LiDAR (D) Door/Area

Sensors (E) Vision Sensors

Proximity Sensors

Pressure Sensors

(H) Rotary Encoders

Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

## Specifications

Model		BH20M-TDT	BH4M-PDT	BH1M-DDT	BH300-DDT
Sensing type		Through-beam	Retroreflective (built-in polarized filter)	Diffuse reflective	
Sensing distance		20m	4m <sup>*1</sup>	1m <sup>×2</sup>	300mm <sup>ж3</sup>
Sensing target		Opaque material over Ø20mm	Opaque material over Ø75mm	_	
Hysteresis		_		Max. 20% at sensing distance	
Response time		Max. 1ms			
Power supply		12-24VDC ±10% (ripple P-P: max. 10%)			
Current consumption		Emitter/Receiver : max. 20mA	Max. 30mA	Max. 35mA	Max. 30mA
Light source		Red LED (660nm)	Red LED (660nm)	Infrared LED (850nm)	Red LED (660nm)
Sensitivity ad	justment	Sensitivity adjuster			
Operation mode		Light ON / Dark ON selectable by switch			
Control output		NPN / PNP open collector simultaneous 2 output  Load voltage: max. 26.4VDC			
Protection circuit		Interference prevention function (except through-beam type), power reverse polarity protection circuit, output short over current protection circuit			
Indicator		Operation indicator: red LED Stability indicator: green LED (emitter of through-beam type's power indicator: green)			
Connection		Cable type			
Insulation resistance		Over 20MΩ (at 500VDC megger)			
Dielectric strength		1,000VAC 50/60Hz for 1 minute			
Vibration		1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours			
Shock		500m/s² (approx. 50G) in X, Y, Z direction for 3 times			
	Ambient illu.	Sunlight: max. 11,000lx, incandescent lamp: max. 3,000lx (receiver illumination)			
Environment	Ambient temp. <sup>*4</sup>	-25 to 55°C, storage: -40 to 70°C			
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH			
Protection structure		IP67 (IEC standard)			
Material		Case: polycarbonates, LED indicator: polycarbonates, sensing part: polymethyl methacrylate acrylic			
Cable		Ø4mm, 4-wire, 2.1m (emitter of through-beam type: Ø4mm, 2-wire, 2.1m) (AWG24, core diameter: 0.08mm, number of cores: 40, insulator out diameter: Ø1.03mm)			
Accessory	Common	Adjustment screwdriver, fix	ing bracket, M18 fixing nut,	fixing cap, M3 bolt, M3 nut	
	Individual		Reflector (MS-2A)		
Approval		C € c(b) or main			
Weight <sup>**5</sup>		Approx. 190g (approx. 120g)	Approx. 140g (approx. 60g)	Approx. 130g (approx. 60g	g)

x1: The sensing distance is specified with using the MS-2A reflector. The distance between the sensor and the reflector should be set over 0.1m. When using reflective tapes, the reflectivity will vary by the size of the tape. Please refer to the 🗉 Reflectivity By Reflective Tape Model' table before using the tape.

A-79 Autonics

<sup>※2:</sup> Non-glossy white paper 300×300mm.

<sup>3:</sup> Non-glossy white paper 100×100mm.

<sup>¾4: UL approved surrounding air temperature 40°C</sup> 


X5: The weight includes packaging. The weight in parenthesis is for unit only.

<sup>\*</sup>The temperature or humidity mentioned in Environment indicates a non freezing or condensation.


# **BH Series**

### ■ Feature Data

### **○ Through-beam type: BH20M-TDT**

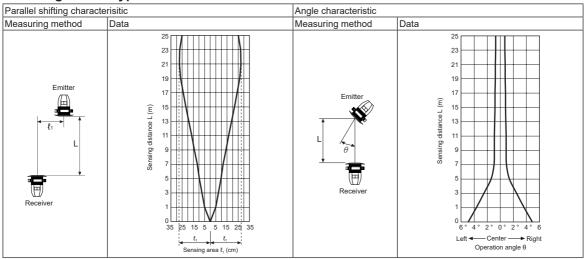


### 

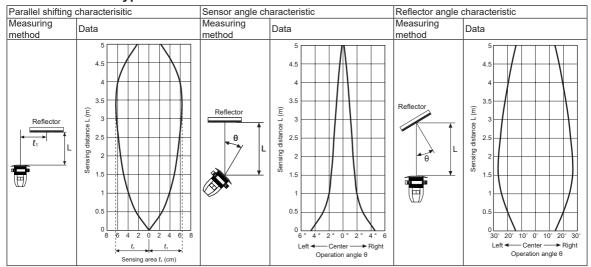

# Diffuse reflective typeBH1M-DDT


### Sensing area characteristic Measuring method 1600 1400 1200 Sensing distance L (mm) Standard sensing 1000 target 800 600 400 200 10 10 Sensing area $\ell_1$ (mm)

### • BH300-DDT

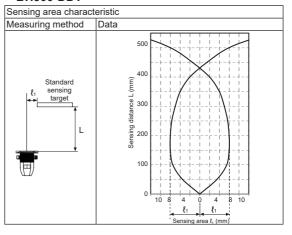

A-80 Autonics

### Connections

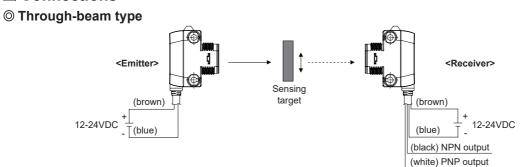


SENSORS CONTROLLERS

MOTION DEVICES

SOFTWARE

Retroreflective type

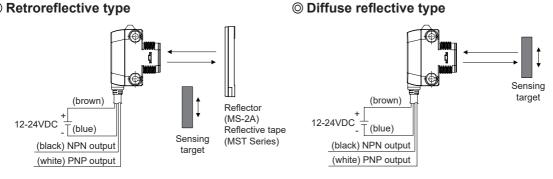

(B) Fiber Optic Sensors

(C) LiDAR

(D) Door/Area Sensors

(E) Vision Sensors


Proximity Sensors

Pressure Sensors

(H) Rotary Encoders

Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

## Control Output Diagram

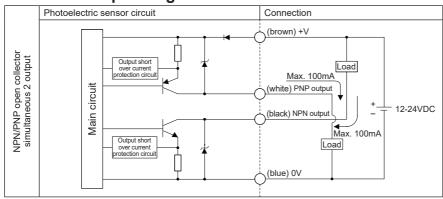

x If short-circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the output short over current protection circuit.


# Operation Mode

Operation mode	Light ON	Dark ON
Receiver operation	Received light Interrupted light	Received light Interrupted light
Operation indicator (red LED)	ON OFF	ON OFF
Transistor output (NPN/PNP)	ON OFF	ON OFF


A-81 **Autonics** 

■ Dimensions (unit: mm)

### **⊚** Through-beam type 28 <Emitter> 18 Power indicator 13.8 (green) Optical axis 24. of Emitter 9 M18×1 Ø4, 2.1m 28 <Receiver> Sensitivity adjuster 18 Stability indicator Operation indicator 14 Operation mode 13.8 (green) (red) selection switch Optical axis 24. of Receiver M18×1

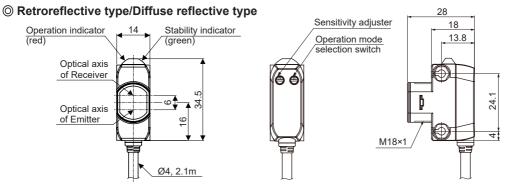


Ø4, 2.1m

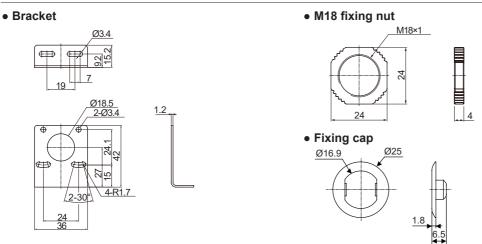

A-82 Autonics

### • Reflector (MS-2A)

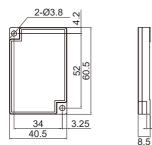

### • Reflective tape (sold separately)



Model	Α	
MST-50-10	□50	
MST-100-5	□100	
MST-200-2	□200	

# SENSORS

0.38

CONTROLLERS

MOTION DEVICES

SOFTWARE

#### (A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) LiDAR

(D) Door/Area Sensors

(E) Vision Sensors


Proximity Sensors

(G) Pressure Sensors


(H) Rotary Encoders

(I) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

# Operation Timing Diagram

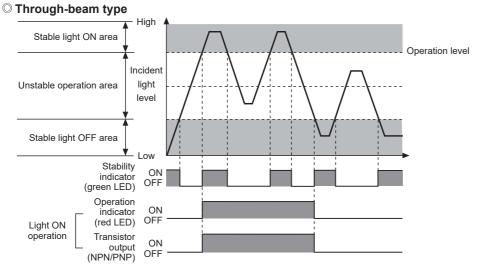

## O Retroreflective type / Diffuse reflective type

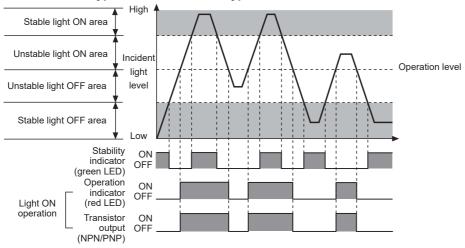

\*\*The waveforms of "Operation indicator" and "Transistor output" are for Light ON, the waveforms are reversed for Dark ON.

Autonics A-83


# Installation and Sensitivity Adjustment

### For mounting


Please use M18 fixing nut or M3 bolt and nut to mount the sensor, and make sure that the tightening torque is under 0.5N·m. When using the reflective type photoelectric sensors closely over three units, it may result in malfunction due to mutual interference. When using the through-beam type photoelectric sensors closely over two units, it may result in malfunction due to mutual interference.

XExercise caution. Do not apply excessive impact to the unit or bend the cable section. The inside unit may be wet.

### <Front mounting>

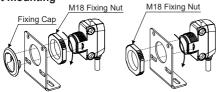

### <Side mounting>

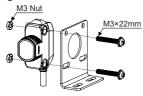


### Optical axis adjustment

### Through-beam type


Set the emitter and the receiver facing each other and adjust these up down, right-left after to check the point operating the stability indicator. Fix the emitter and the receiver at the center of the point.



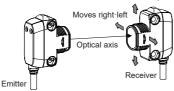


### Retroreflective type

Set the photoelectric sensor and the reflector(MS-2A) or reflective tape facing each other and adjust the reflector up·down, right·left after to check the point operating the stability indicator. Make sure that the sensing side of the sensor is parallel with the reflector.

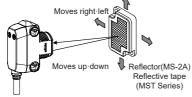

### •Diffuse reflective type

After place a sensing target, fix it in the middle of position where the stability indicator operates adjusting the sensor to up down, right-left. Make sure that the sensing side of the sensor is parallel with the surface of each sensing target.

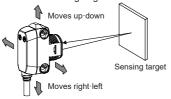


### Operation mode switching

Light ON	DAO PAO	Turn the operation mode selection switch to L/O direction (the end of right).
Dark ON	No.	Turn the operation mode selection switch to D/O direction (the end of left).

XFor through-beam type, the selection switch is built-in the receiver.

### Sensitivity adjustment

o constantly adjustations				
Order	Sensitivity setting	Descriptions		
1	(A) 1	From Light ON status, turn the sensitivity setting adjuster slowly to the right from min. sensitivity (-) and check the position where operation indicator turns on (A).		
2	(A) (C)	From Dark ON status, turn the sensitivity setting adjuster further right and check the position where the operation indicator turns on (B). Turn the adjuster left and check the position where the operation indicator turns off (C).  Wiff the operation indicator does not turn on at max. sensitivity (+), the maximum sensitivity setting is set at position (C).		
3	Optimum sensitivity  (A) (C)	Set the adjuster at the center position between (A) and (C) for optimal sensitivity. Also, check if the stability indicator turns off with or without the sensing target.  If it does not turn off, please review the operation mode again, as sensitivity may be unstable.		

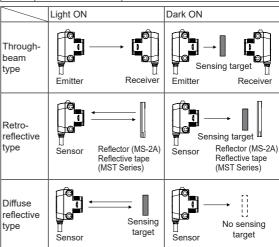

XPlease set the sensitivity setting adjuster is executed in stable Light ON area and the reliability of environment (temperature, supply, dust etc.) is increased after the mounting it in a stable area

XIt may cause breakdown when the sensitivity setting adjuster or the operation mode selection switch is turned by force.

A-84 Autonics

## Reflectivity by Reflective Tape Model

MST-50-10 (50×50mm)	60%
MST-100-5 (100×100mm)	80%
MST-200-2 (200×200mm)	140%

- XThis reflectivity is based on the reflector (MS-2A).
- ※Reflectivity may vary depending on usage environment and installation conditions.

The sensing distance and minimum sensing target size increase as the size of the tape increases.

Please check the reflectivity before using reflective tapes.

※For using reflective tape, installation distance should be min. 20mm. SENSORS

CONTROLLERS

MOTION DEVICES

SOFTWARE

(A) Photoelectric Sensors

Fiber Option

(C) LiDAR

(D) Door/Area Sensors

(E) Vision Sensors

(F) Proximity Sensors

(H) Rotary Encoders

(I) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets